



Basics Guide

HTC Touch Pro2

www.sprint.com

*© 2009 Sprint. Sprint and the logo are trademarks of Sprint.
Other marks are the property of their respective owners.*

Table of Contents

Tip

Looking for something? If you don't see it in the headings listed here, try the Index on page 233.

Section 1: Getting Started	1
1A. Setting Up Service	2
Setting Up Your Device	3
Activating Your Device	5
Setting Up Your Voicemail	6
Getting Help	6
Section 2: Your Device	9
2A. Device Basics	10
Your Device	11
Turning Your Device On and Off	16
Using Your Device's Battery and Charger	17
Navigating on Your Device	21
The Home Screen	24
Adjusting the Volume	30
2B. Entering Text	31
The Sliding QWERTY Keyboard vs. Onscreen Keyboards	32
Using the Sliding QWERTY Keyboard	34
Using the Full QWERTY Layout	36
Using the Phone Keypad	38
2C. TouchFLO 3D	40
The TouchFLO 3D Home Screen	41
Home	44
People	47
Mail	51
Messages	53

Calendar	54
Internet	56
Photos and Videos	58
Sprint Music	59
Sprint Navigation	63
Sprint TV	64
Weather	65
Stock	66
Settings	68
2D. Using Phone Features	69
Displaying Your Phone Number	70
Making Calls from the Phone Screen	70
Answering and Ending Calls	74
Checking Missed Calls	76
Call History	77
Speed Dial	78
2E. Synchronizing Information With Your Computer	80
Setting Up Windows Mobile Device Center on Windows Vista	81
Setting Up ActiveSync on Windows XP	83
Synchronizing With Your Computer	84
2F. Contacts, Calendar, and Tools	86
Contacts	87
Calendar	89
Notes	92
Tasks	94
Calculator	95
Comm Manager	97
Microsoft Office Mobile	99

2G. Bluetooth	101
Using Bluetooth	102
2H. Experiencing Multimedia	109
Taking Photos and Videos	110
Viewing Photos and Videos	122
2I. Managing Your Device	128
Copying and Managing Files	129
Changing Basic Settings	130
Resetting Your Device	132
Section 3: Sprint Service	135
3A. Sprint Service Features: The Basics	136
Voicemail	137
Text Messaging (SMS)	143
Using Caller ID	145
Call Waiting	145
Call Forwarding	146
Making a Three-Way Call	147
Roaming	148
3B. Web and Data Services	152
Ways of Connecting to the Internet	153
Navigating the Web	159
Accessing Sprint Instant Messaging	164
Email Messaging	165
3C. Entertainment: TV and Music	170
TV	171
Music — Sprint Music Store	174
3D. GPS Navigation	177
Using Sprint Navigation	178

3E. Sprint Worldwide Wireless Service	181
Your SIM Card	182
Using Your Device in GSM Mode	185
Using Your SIM Card's PhoneBook	191
Setting GSM Services Options	195
Contacting Sprint	197
Services	199
Selecting a Network	200
Section 4: Safety and Warranty Information	203
4A. Important Safety Information	204
Important Health Information and Safety Precautions	205
General Precautions	211
Additional Safety Information	212
Regulatory Agency Identifications	220
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	220
SAR Information	222
Body-worn Operation	223
Telecommunications & Internet Association (TIA) Safety Information	224
4B. Warranty, Disclaimers and Other Notices	226
Manufacturer's Warranty	227
Privacy Restrictions	229
Weather Disclaimer	230
Warranty Disclaimer	230
Limitation of Damages	231
4C. Copyright, Trademark, and Proprietary Notices	232
Index	233

Section 1
Getting Started



Setting Up Service


- ◆ *Setting Up Your Device (page 3)*
- ◆ *Activating Your Device (page 5)*
- ◆ *Setting Up Your Voicemail (page 6)*
- ◆ *Getting Help (page 6)*

Setting up and activating your new device is quick and easy. This section walks you through the necessary steps to set up your device, activate your device's phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint service.


Setting Up Your Device

Installing the Battery

1. Remove the back cover by following these steps:
 - Remove the stylus. (You need to temporarily remove the stylus to be able to remove the back cover.)
 - Hold the device with both hands and the front panel facing down.
 - Push the back cover up with your thumb until it disengages from the device and then slide it up to remove.

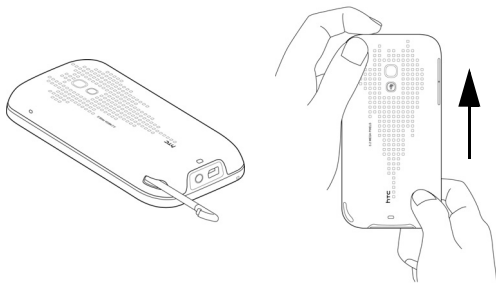

2. Install the battery by following these steps:
 - Align the battery's exposed copper contacts with the battery connectors inside the battery compartment.

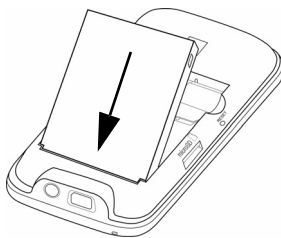

- Insert the contact's side of the battery first and then gently push the battery into place.
3. Replace the back cover, and insert the stylus back into the stylus compartment.

Turning the Device On for the First Time

1. Press the **Power** button.
2. When you turn on your device for the first time, your device starts up and guides you to calibrate the touch screen. Follow the onscreen instructions to complete the screen calibration process.
3. Your device will then be activated.
 - If your device's phone is already activated, it will search for Sprint service and then enter standby mode.
 - If your device's phone is not yet activated, see "Activating Your Device" on page 5 for more information.

Note

Your device's battery should have enough charge for your device to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 19 for details.

Activating Your Device

- If you purchased your device at a **Sprint Store**, it is probably activated and ready to use.
- If you received your device in the mail and it is for a **new Sprint account or a new line of service**, it is designed to activate automatically. To confirm your activation, make a phone call.
- If you received your device in the mail and you are activating a new device for an existing number on your account, you will need to go online to activate your new device.
 - From your computer's Web browser, go to www.sprint.com/activate and complete the onscreen instructions to activate your new device.


When you have finished, make a phone call to confirm your activation. If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at 1-888-211-4727 for assistance.

Notes

- Do not press the **End** key while your device is being activated. Pressing the **End** key cancels the activation process.
- If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.

Making Your First Call

1. Press the **Talk** key to display the Phone screen.



2. Tap the keys on the Phone keypad to enter the phone number.
3. Tap  to place the call.

For more information about using your device to make and receive phone calls, see “Using Phone Features” on page 69.

Setting Up Your Voicemail

1. Press the **Talk** key to display the Phone screen.
2. Tap and hold  on the Phone keypad.
3. Follow the system prompts to:
 - Create your passcode.
 - Record your greeting.
 - Record your name announcement.

Note

Voicemail Passcode

Sprint strongly recommends that you create a passcode when setting up your voicemail to protect against unauthorized access. Without a passcode, anyone who has access to your device is able to access your voicemail messages.

For more information about using your voicemail, see “Voicemail” on page 137.

Getting Help

Managing Your Account

Online: www.sprint.com

You can go online to:

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.

- Shop for the latest Sprint devices.
- View available Sprint service plans and options.
- Enable international wireless voice and data services.
- Learn more about data services and other great products like Sprint Picture Mail, games, ringtones, screen savers, and more.

From Your Sprint Phone

- From the Phone screen, tap    to check minute usage and account balance.
- From the Phone screen, tap    to make a payment.
- From the Phone screen, tap    to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.
- Sprint Worldwide Service: **1-888-226-7212 (option 2)**.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- ▶ From the Phone screen, tap    .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- From the Phone screen, tap  .

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Section 2
Your Device



Device Basics

- ◆ *Your Device (page 11)*
- ◆ *Turning Your Device On and Off (page 16)*
- ◆ *Using Your Device's Battery and Charger (page 17)*
- ◆ *Navigating on Your Device (page 21)*
- ◆ *The Home Screen (page 24)*
- ◆ *Adjusting the Volume (page 30)*


Before you start using your device, take some time to familiarize yourself first with what is available on your device. This section will introduce about the device controls and the home screen on your device. Basic functions such as turning your device on and off and adjusting sound volume will also be covered in this section.

Tip

Device Software Upgrades – Updates to your device's software may become available from time to time. Sprint will automatically upload critical updates to your device. You can also open the Settings screen to check for and download updates. Tap **Start > Settings > All Settings**. On the **System** tab, tap **Update Firmware** to search for and download available updates.


Your Device

Top and Front Panels

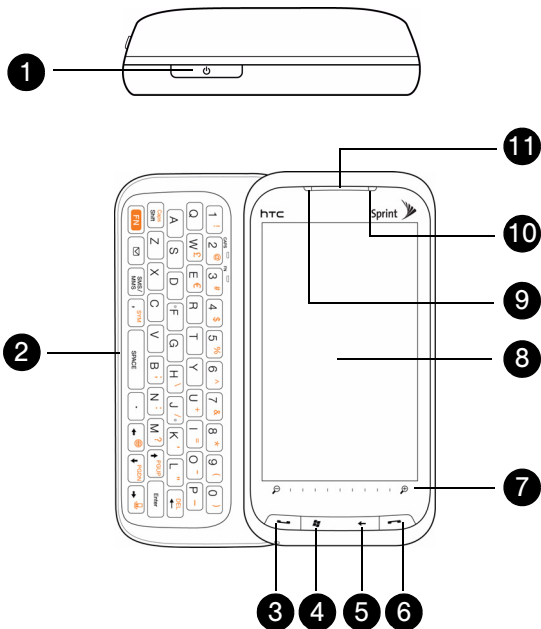

1. **Power Button.** Press to turn off the display temporarily. To turn off the power, press and hold for about five seconds. (For more information, see “Turning Your Device On and Off” on page 16.)
2. **Sliding QWERTY Keyboard.** Slide out the QWERTY keyboard and use it to type messages or documents. (See “Using the Sliding QWERTY Keyboard” on page 34 for details.)
3. **Talk Key.** Press to answer an incoming call or display the Phone screen to place a call. During a call, press and hold to toggle the speakerphone on and off. While viewing a text or email message, press to display the Phone screen so you can call the sender of the message. (See “Using Phone Features” on page 69 for details.)
4. **Start Key.** Press to open or close the Start screen. (See “Start Screen” on page 25 for details.)
5. **Back Key.** Press to return to the previous screen.
6. **End Key.** Press to end a call or return to the TouchFLO 3D Home tab. By default, pressing and holding this key turns Airplane mode on or off. You can reassign pressing and holding of the **End** key to another function.
7. **Zoom Bar.** Slide your finger from left to right to zoom in, or from right to left to zoom out.
8. **Touch Screen.** Use finger gestures or the stylus to navigate and interact with the screen. (See “Navigating on Your Device” on page 21 for details.)
9. **Notification LED.** This LED shows the following:
 - Flashing green light when there are new text, picture, video, or email messages, missed calls, or reminders.
 - Solid green light when the device is connected to the power adapter or a computer and the battery is fully charged.
 - Solid amber light when the battery is being charged.
 - Flashing amber light when the remaining battery level reaches below 10%.
10. **Light Sensor.** This senses the ambient light and adjusts the screen backlight accordingly.
11. **Earpiece.** Listen to a phone call from here.


Left, Right, and Bottom Panels

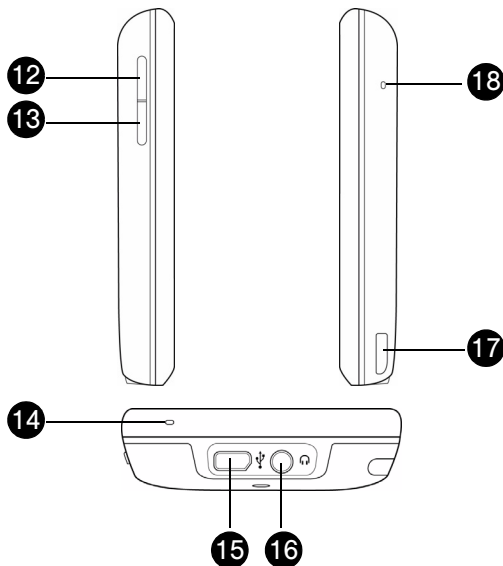

- 12. **Volume Up Button.** During a call or when playing music, press this button to increase the volume.
- 13. **Volume Down Button.** During a call or when playing music, press this button to lower the volume.
- 14. **Primary Microphone.** Speak into this microphone during phone conversations, when recording a voice note, or when giving a voice command.

15. **Sync Connector.** Connect one of the following:
- Connect the AC phone charger to recharge the battery.
 - Connect the supplied USB cable to a computer so you can synchronize information.
 - Connect a USB stereo headset (purchased separately) for hands-free conversation or for listening to audio media.
 - Connect a composite video and audio cable (purchased separately) to output the device screen contents and device audio to an external viewing device.
16. **Audio Connector.** Connect any standard 3.5mm audio headset.
17. **Stylus.** Use the stylus to write, draw, or select items on the screen. (See “Stylus” on page 23 for details.)
18. **Secondary Microphone.** Both the primary and secondary microphones are enabled when the speakerphone is turned on.

Back Panel

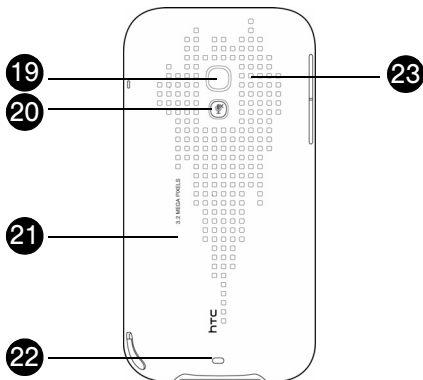

- 19. **3.2 Megapixel Camera.** Use the camera to take photos and capture video clips. (See “Taking Photos and Videos” on page 110 for details.)
- 20. **Mute Button.** Press to mute or unmute the dual microphone.
- 21. **Back Cover.** Push the back cover upward to remove it.
- 22. **Strap Holder.** Connect a strap or lanyard to easily carry your device.
- 23. **Dual Speaker.** Use this noise-cancelling dual speaker for three-way calls.

Turning Your Device On and Off

Turning the Power On

- Press the **Power** button located at the top of your device.

Turning the Power Off

1. Press and hold the **Power** button for about five seconds.
2. Tap **Yes** when a message prompts you to choose whether to turn off the power.

Switching to Sleep Mode When Not In Use

Press and immediately release the **Power** button to turn off the display temporarily and switch your device to **Sleep mode**. Sleep mode suspends your device to a low power state while the display is off in order to save battery power.

Your device automatically goes into sleep mode when you leave the device idle after a certain period of time. You will still be able to receive messages and calls while your device is in sleep mode. Pulling the stylus out of its compartment, pressing the **Power** button again, or incoming calls or messages will wake up your device.

Using Your Device's Battery and Charger

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to nnn hours of continuous digital talk time.

Note

- *Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.*
- *Watch your device's battery level indicator and charge the battery before it runs out of power.*

If you need to purchase extra batteries for your device, Sprint-approved or HTC-approved batteries and accessories can be found at Sprint Stores or through HTC; or call **1-866-343-1114** to order. They're also available at www.sprint.com.

WARNING

Use only Sprint-approved or HTC-approved batteries and chargers with your device. The failure to use a Sprint-approved or HTC-approved battery and charger may increase the risk that your device will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

To reduce risk of fire or burns:

- *Do not attempt to open, disassemble, or service the battery pack.*
- *Do not crush, puncture, short external contacts, or dispose of in fire or water.*
- *Do not expose to temperatures above 140°F (60°C).*
- *Replace only with the battery pack designated for this product.*
- *Recycle or dispose of used battery as stipulated by local regulations.*

Installing and Removing the Battery


Always turn off your device before installing or replacing the battery. You also need to remove the back cover before you can install these components.

To install the battery:

- See “Setting Up Your Device” on page 3.

To remove the battery:

1. Make sure your device is turned off.
2. Remove the stylus, and then remove the back cover.
3. Lift out the battery from the groove at the upper right side of the battery compartment.

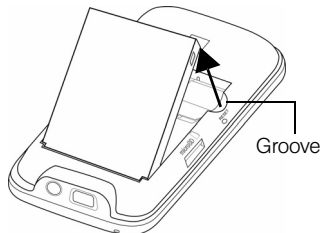

4. Replace the back cover and insert the stylus back into the stylus compartment.

Charging the Battery

Charge your battery as soon as possible so you can begin using your device.

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device's display screen. If the battery charge is critically low, the battery icon () will be shown in the title bar.

Always use a Sprint-approved or HTC-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

To charge the battery:

1. Connect the USB connector of the phone charger to the sync connector on your device.
2. Plug in the phone charger to an electrical outlet to start charging the battery.

Charging is indicated by an amber light shown on the notification LED of your device. As the battery is being charged while the power is on, a charging icon () also appears in the title bar of the Home screen. After the battery has been fully charged, the notification LED shows a green light, and a full battery icon () appears in the title bar of the Home screen.

For more information about the notification LED, see "Top and Front Panels" on page 11.

WARNING

- Do not remove the battery while you are charging it using the phone charger or car adapter.
- As a safety precaution, the battery stops charging when it overheats.

Battery Saving Tips

How long your battery power lasts depends on the battery type and how you use your device. Try the following to help conserve battery life:

- When the device is not in use, press the **Power** button to switch off the display.
- Tap **Start > Settings > All Settings**. On the **System** tab, tap **Power > Advanced** tab of the Power settings screen. Here, you can specify the time before your device automatically turns off the display and backlight to conserve battery power. For optimum conservation, specify three minutes or less.
- Tap **Start > Settings > All Settings**. On the **System** tab, tap **Power > Backlight** tab, clear the **Auto adjust backlight** check box, and manually adjust the backlight brightness settings.
- Use the AC phone charger to plug your device into an external power outlet whenever possible, especially when using a modem or other peripherals.
- Turn Bluetooth off when you are not using it. Make your device visible to other devices only when you are trying to establish a Bluetooth partnership. For more information about Bluetooth, see “Using Bluetooth” on page 102.
- Turn Wi-Fi off when you are not using it.
- Lower the volume.
- Close battery-intensive programs such as the camera when you are done using them. Make sure the programs are ended and are not continuously running in the background.

Navigating on Your Device

You can use finger gestures or the stylus to navigate and interact with the interface of your device:

Finger gestures

You can use finger gestures to select, scroll and pan on the touch screen.

Touching or tapping

When selecting items on the screen, such as the Home screen tabs, Start screen, programs and settings icons, and large onscreen buttons, simply touch them with your finger. Apply some pressure with your finger pad when touching an item on the screen.

“Tapping” is touching the screen lightly and quickly with your finger pad or fingertip. On screens that display smaller-size items, you can more accurately select an item by tapping it with your fingertip.

Finger-scrolling


Finger-scrolling can be used to scroll up and down Web pages, documents, and lists such as the contacts list, file list, message list, calendar appointments list, and more.

To scroll up and down:

- To scroll down, swipe your finger upward on the touch screen. To scroll up, swipe your finger downward on the touch screen. (“Swiping” means dragging your finger vertically on the screen.)
- To auto-scroll, flick your finger upward or downward on the touch screen. Touch the screen to stop scrolling. (“Flicking” is similar to swiping, except that you need to swipe your finger in light, quicker strokes.)

To scroll left and right:

- To scroll towards the right, swipe your finger to the left. To scroll towards the left, swipe your finger to the right.
- To auto-scroll, flick your finger left or right. Touch the screen to stop scrolling.

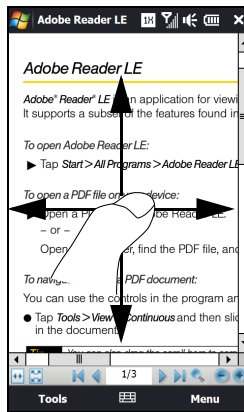

When finger-scrolling, swipe or flick your finger on the touch screen.


Finger-zooming

To zoom in on a Web page in Opera Mobile or a photo in Album, tap your finger twice on the screen. To zoom out, tap twice again on the screen.

For more information about using Opera Mobile, see “Using Opera Mobile” on page 159. For more information about using Album, see “Viewing Photos and Videos” on page 122.

Finger-panning

You can use finger-panning to move to and view other parts of a zoomed photo, Web page, document, or an email message. To pan, touch and hold on the touch screen and then drag your finger in any direction.

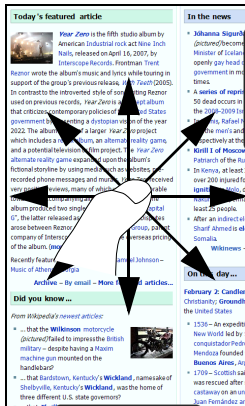


Stylus

To use the stylus, pull it out from the stylus compartment at the bottom right of your device. If the backlight is off, removing the stylus automatically turns the backlight back on.

Tap with the stylus to open programs and select items on the screen, and tap and hold on the screen to open a shortcut menu. You can also use the stylus in a similar way to making finger gestures.

The Home Screen

The default screen of your device is the TouchFLO™ 3D Home screen which allows finger-touch access to the most important functions such as contacts, text messages, email, calendar, Internet, and more.

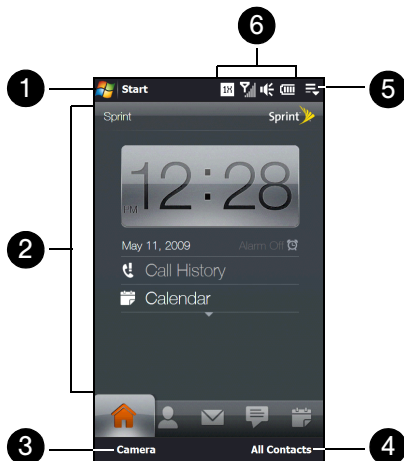

1. Open the Start screen for quick access to important features and programs on your device. You can also add shortcuts to your favorite programs. See “Start Screen” on page 25 for details.
2. Navigate the TouchFLO 3D Home screen. See “TouchFLO 3D” on page 40 for details.
3. Use the Camera to capture photos and video clips. See “Taking Photos and Videos” on page 110 for details.

4. Open the All Contacts screen to view, add or edit contact information See “People” on page 47 for details.
5. Open the Quick menu. See “Quick Menu” on page 29 for details.
6. Check the status icons for battery usage, connection status, and more. See “Status Icons” on page 26 for details.

Start Screen

The Start screen, which can be opened by touching **Start** on the top-left corner of the screen or by pressing the **Start** key (), gives you one-touch access to all the programs and settings of your Windows Mobile-powered device. You can also add your favorite programs to the Start screen so you can open them quickly.



1. Open or close the Start screen.
2. Open a program on the Start screen by tapping the corresponding icon.
3. Scroll down the Start screen, and then touch an empty slot to add a program.
4. View the complete list of programs that are available on your device.
5. Choose icons to remove from the Start screen. The Home, People, Calendar, and Settings icons are permanent icons and cannot be removed or replaced with other program icons.

Note

To replace a slot with another program, you must delete the current program shortcut first and then add the new program.

Status Icons

The following are some of the status icons that you may see on the device.



1		Multiple notifications; tap the icon to view all
		New email messages
		New SMS text messages
		New voicemail notification
		New instant message from Live Messenger
		Missed call
		Speakerphone on
		Roaming
		Alarm
		Other wireless network(s) detected
		Wired headset connected
		Bluetooth on
		Bluetooth visible mode on
		Bluetooth stereo headset connected

2		1xRTT available
		EVDO available
		Connected to a wireless network
		Connection is active
		Connection is not active
		Synchronization in progress

3		Data connection is active but idle
		Data connection is active and transmitting data
		Maximum signal strength
		No signal


	Phone is turned off
	No phone service
	Searching for phone service
	Voice call in progress

4		Vibrate mode
		Sound on
		Sound off

5		Battery charging
		Battery fully charged
		Battery charge level very low

Notifications Screen


When you touch or tap any of the status icon area of the title bar, the Notifications screen opens to display your connection status and lists all your pending notifications including missed calls, new text messages, new email, event reminders, and more.

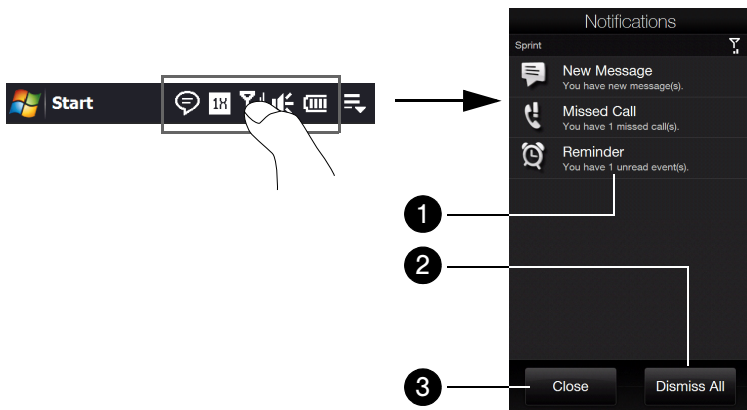

1. Tap an item on the Notifications screen to open the related screen.
2. Tap **Dismiss All** to ignore all notifications.
3. To close the Notifications screen, tap **Close** or press the **Back** key.

Quick Menu

The Quick menu, which can be opened from the top right corner of the screen, shows the currently running programs. You can quickly switch between running programs, stop programs, and see how much program memory is being used.

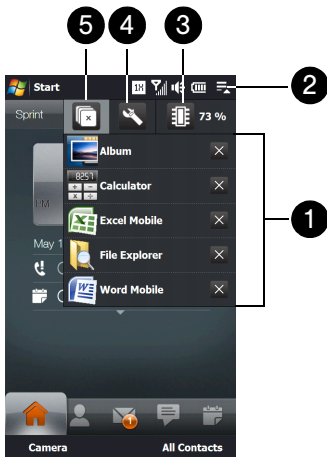

1. Allows you to switch to a running program by touching the program name.
Allows you to stop a running program by touching .
2. Opens the Quick Menu.
3. Shows the total percentage of program memory in use. Touch to open the Memory settings screen.
4. Allows you to customize Task Manager settings.
5. Stops all currently running programs.

Adjusting the Volume

By default, your device allows you to set a single volume level for both the system volume (notifications and audio/video playback volume) and the phone ring volume. If you want to adjust the system volume and ring volume separately, first you will need to disable the **Single Volume** option in the settings.

To set a single volume:

1. Open the Volume screen by pressing either the **Volume Up** or **Volume Down** button on your device.
2. To increase or decrease the volume level, drag your finger up or down the volume bars, or press the the **Volume Up** or **Volume Down** button. You can also:
 - Touch **Silent** to mute the volume.
 - Touch **Vibrate** to switch the device to Vibrate mode.
3. The Volume screen automatically closes. You can also tap an empty area of the Volume screen to close it.

Note

You can also press the Volume Up or Volume Down button to adjust the earpiece volume during an ongoing call.

Entering Text

- ◆ *The Sliding QWERTY Keyboard vs. Onscreen Keyboards (page 32)*
- ◆ *Using the Sliding QWERTY Keyboard (page 34)*
- ◆ *Using the Full QWERTY Layout (page 36)*
- ◆ *Using the Phone Keypad (page 38)*

Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text (for example, when adding a Contacts entry or when using email and SMS text messaging). This section shows you how to enter text using the sliding QWERTY keyboard and various onscreen input methods that are available on your device.


The Sliding QWERTY Keyboard vs. Onscreen Keyboards

You can use either the sliding QWERTY keyboard or one of the onscreen keyboards to enter text.

Sliding QWERTY Keyboard

Your device comes with a sliding QWERTY keyboard, which is similar to a standard keyboard on your computer.


To use the keyboard, slide the screen panel to the right to reveal the keyboard. The screen orientation automatically switches to landscape mode when the keyboard is opened.

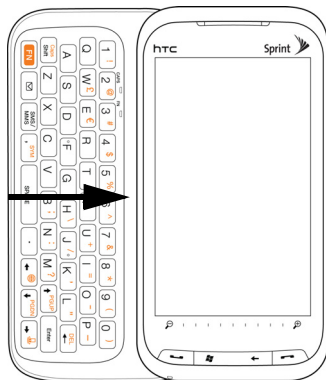


For more information about using the QWERTY keyboard, see “Using the Sliding QWERTY Keyboard” on page 34.

Onscreen Keyboards

For single-handed text input in portrait mode, you can use one of the finger-friendly onscreen keyboards: *Full QWERTY* and *Phone Keypad*.

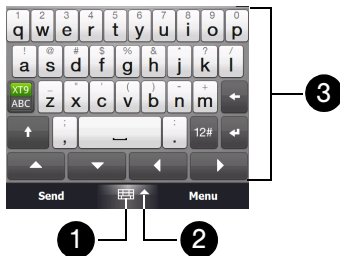

1. When you use a program or select a field that allows you to enter text or numbers, the *Input Panel* icon becomes available at the bottom center of the screen.
2. Tap the *Input Selector* arrow (that appears next to the *Input Panel* icon) to open the Input Method menu where you can select an onscreen keyboard to use for entering text
3. After selecting a type of onscreen keyboard, the selected keyboard layout is displayed on the screen for you to use.

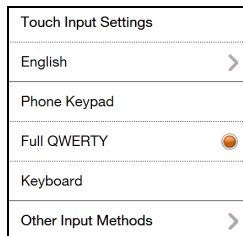


Input Method menu

Note When in landscape mode, *Phone keypad* is not available.

Using the Sliding QWERTY Keyboard

After opening the sliding QWERTY keyboard, you can adjust the angle of the device screen to minimize glare and reflection.

Adjusting the LCD Screen Angle

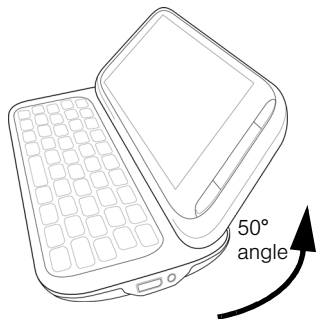

The maximum tilting angle of the screen is 50 degrees. Do not force the screen to tilt further than the maximum tilting angle as it will break the device.



Before you retract the screen, please be sure to adjust the screen angle back to the original horizontal position.

Keys on the Sliding QWERTY Keyboard



- To type lowercase letters and numbers, press the keys using your thumbs or fingers.
 - To enter all uppercase letters, press **Caps Shift** twice, or press **FN** first and then press **Caps Shift**.
To change back to all lowercase letters, press **Caps Shift** again.
 - To enter a single uppercase letter, press **Caps Shift** and then press the corresponding key.
 - To enter a symbol or punctuation mark, or launch the program that is printed on the upper right corner of a key, press **FN** and then press the corresponding key.
 - To open the Symbol Pad, press **FN** and then press **SYM**.
 - Press **Enter** to insert a hard return while typing.
 - Press the arrow keys **←** / **→** / **PGUP** / **PGDN** for directional movement.
 - To backspace and delete the previous character, press **DEL**.
 - To delete the next character that appears to the right of the blinking cursor, press **FN** first and then press **DEL**.
- To consecutively delete several characters that appear to the right of the blinking cursor, press **FN** twice and then keep pressing **DEL** until the characters are deleted.
- Press **✉** to open the Messaging program.
 - Press **SMS/MMS** to open your SMS/MMS messaging account.

Using the Full QWERTY Layout

Full QWERTY is a full onscreen QWERTY keyboard layout similar to a desktop computer keyboard.



1. Tap the keys to enter letters or symbols.

Tap and hold a key to enter a punctuation mark, symbol, or number shown on top of a key.

2.  indicates you are in Predictive mode. Tap to change to Normal mode.

 indicates you are in Normal mode. Tap to change to Predictive mode.

3. Tap the **Shift** key to enter an uppercase letter.

Tap the **Shift** key twice to turn on Caps Lock.

4. Use the four arrow keys for directional movement on the screen.
5. Tap the **Enter** key to create a new line.
6. Tap the **Back** key to delete the previous character.
7. Tap **12#** to open a keyboard layout that lets you easily enter numbers and symbols.
8. Displays the word candidate list in predictive mode. Tap a word to insert it into your text.
Tap **+** to add a word to the XT9 dictionary.


To enter text using the Full QWERTY layout:

1. Start a program that accepts text input, such as Word Mobile.
2. Tap the **Input Selector** arrow, and then tap **Full QWERTY**.
3. Start tapping keys on the keyboard as you would on a computer keyboard to enter your text.

To enter accented characters:


1. Tap and hold a key with accent options (for example, vowels) to display the accented characters bar.
2. Slide your finger left or right on the screen to select the desired accented character.
3. When you have selected the desired accented character, release your finger to insert it to your text.

You can also use the Numeric and Symbol mode to enter accented characters.

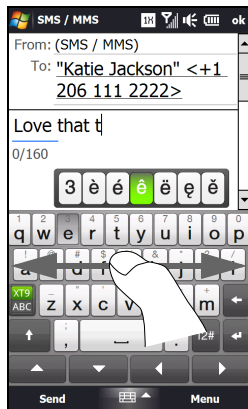

Using the Phone Keypad

The **Phone Keypad** is an onscreen keypad that has a layout similar to mobile phone keypads, plus some additional keys. The Phone keypad has large keys and enhanced input features such as predictive text input, which make it faster for you to enter text in your messages and documents.

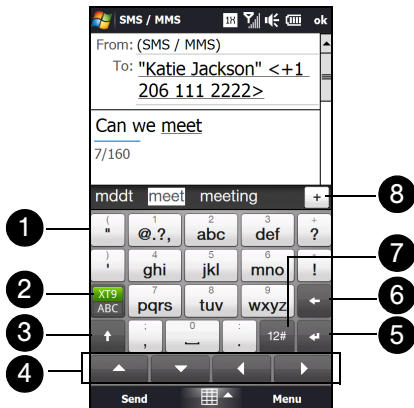

1. Tap the keys to enter letters or symbols.

Tap and hold a key to enter a punctuation mark, symbol, or number shown on top of a key.

2.  indicates you are in Predictive mode. Tap to change to Multitap mode.

 indicates you are in Multitap mode. Tap to change to Predictive mode.

3. Tap the **Shift** key to enter an uppercase letter.
Tap the **Shift** key twice to turn on Caps Lock.
4. Use the four arrow keys for directional movement on the screen.
5. Tap the **Enter** key to create a new line.
6. Tap the **Back** key to delete the previous character.
7. Tap  to open a keyboard layout that lets you easily enter numbers and symbols.
8. Displays the word candidate list in predictive mode. Tap a word to insert it into your text.
Tap  to add a word to the XT9 dictionary.

To enter text using the Phone keypad:

1. Start a program that accepts text input, such as Word Mobile.
2. Tap the **Input Selector** arrow, and then tap **Phone Keypad**.
3. When in Multitap mode (), enter a character by tapping a key until the desired character is displayed on the screen. As you tap the keys, the activated key displays just above the tapped key.
 - To enter the first letter that shows on a key, tap the key once. To enter the second letter, tap twice, and so on.
 - To enter a punctuation mark, symbol, or number that appears at the top of a key, tap and hold the key.

You can also use the Predictive text input mode in Phone Keypad.


TouchFLO 3D

- ◆ *The TouchFLO 3D Home Screen (page 41)*
- ◆ *Home (page 44)*
- ◆ *People (page 47)*
- ◆ *Mail (page 51)*
- ◆ *Messages (page 53)*
- ◆ *Calendar (page 54)*
- ◆ *Internet (page 56)*
- ◆ *Photos and Videos (page 58)*
- ◆ *Sprint Music (page 59)*
- ◆ *Sprint Navigation (page 63)*
- ◆ *Sprint TV (page 64)*
- ◆ *Weather (page 65)*
- ◆ *Stock (page 66)*
- ◆ *Settings (page 68)*

TouchFLO™ 3D gives you touch control over your Windows Mobile-powered device. TouchFLO 3D provides a Home screen that allows finger-touch access to the most widely-used functions, such as People, Mail, Calendar, Internet, Weather, and more. This section will show you how to navigate the TouchFLO 3D Home screen by simply using finger gestures.

The TouchFLO 3D Home Screen

The TouchFLO 3D Home screen has the following tabs:

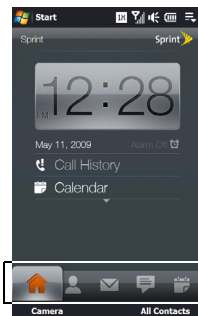


Home screen tabs

Icon	Tab Name
	Home
	People
	Mail
	Messages
	Calendar
	Internet
	Photos and Videos

Icon	Tab Name
	Sprint Music
	Sprint Navigation
	Sprint TV
	Weather
	Stock
	Settings

Switching Between Tabs on the Home Screen

- Touch or tap the desired tab on the Home screen.
 - or —
- Press and hold your finger on the active tab, and then slide your finger right or left over the tabs. Release when you have selected the desired tab.

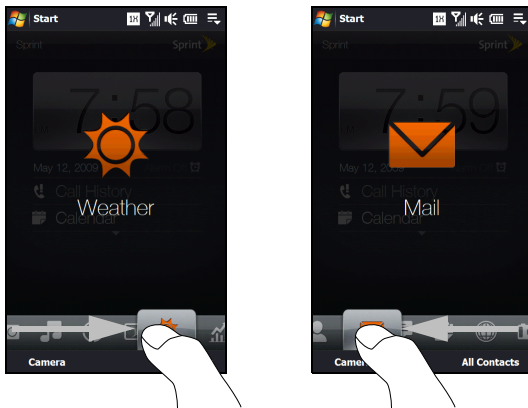


Note

Apply some pressure when pressing and holding on the active tab to be able to slide over the tabs.

- or —
- Swipe left across the screen to move to the next tab, and swipe right across the screen to move to the previous tab.
 - or —
- When using the sliding QWERTY keyboard, press the right key to move to the next tab, and press the left key to move to the previous tab.

Navigating the Home screen in Landscape Mode

The TouchFLO 3D Home screen tabs are always displayed when the Home screen is in portrait view. When you slide out the QWERTY keyboard, the Home screen automatically changes to landscape view and temporarily hides the tabs. Touch the **Expand** button () at the bottom left side of the Home screen to display the tabs.

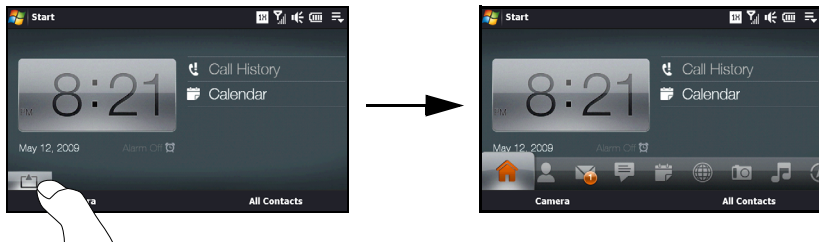

Customizing Home Screen Tabs

You can rearrange or hide the tabs on the Home screen, except for the Home tab. The Settings tab cannot be disabled and hidden also from the Home screen.

1. From the Home screen, slide your finger to the **Settings** tab, and then touch **Customize Tabs**.
2. To move a tab, touch and hold the icon before the tab name, and then drag it up or down the tabs list. Release the icon when you reach the desired location.
3. To hide a tab, clear the check box at the right of the tab name.
4. Touch **Done**.

Home

The **Home** tab displays the current date, a flip-style digital clock, and an alarm icon that indicates whether the alarm is on or off. Missed calls, voicemails, and your upcoming calendar appointments are also shown on the **Home** tab.

To select an item on the Home tab, simply touch the item.

1. Touch the clock to open the World Clock screen where you can select your location to automatically set the date and time accordingly or you can manually change the date and time. You can also access the Alarm Clock screen to change alarm clock settings.

2. Touch the Missed Call item to view details about missed calls in the Call History. (See “Call History” on page 77 for details.)

3. Touch an appointment to view or edit the details of the appointment. If there are no listed appointments on the Home tab, touch **Calendar** to go to the Calendar tab and create new appointments. See “Calendar” on page 89 for details.

4. Swipe upward on the screen to display the small digital clock and view more appointments. Swipe downward on the screen to change back to the large flip-style digital clock.




Tip

When you are on another TouchFLO 3D tab, press the **END** key to return to the Home tab.

World Clock

On the Home tab, tap the digital clock to open the **World Clock** tab () where you can select the city where you are located so that the Home tab displays your local time. If you do not find your city, touch **Add City** to add it. The World Clock tab can display up to 10 cities.

You can also change the date and time of your local city, remove cities, or rearrange cities on the World Clock tab.

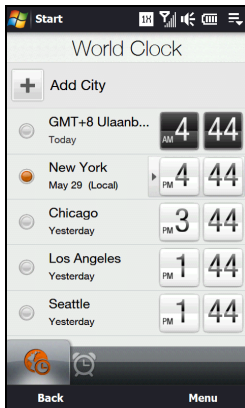

Alarm Clock

On the Home tab, tap the digital clock, and then touch the **Alarm Clock** tab () if you want to set up your device as an alarm clock. You can set up to three alarms.

To set an alarm:

1. On the Alarm Clock screen, touch an alarm time.
2. On the Set Alarm screen, adjust the alarm time (hour and minutes), and then tap the day of the week for the alarm.

Tip

Select multiple days by tapping each desired day. Tap a selected day to exclude it from the alarm.

3. Enter the alarm description, select the alarm ring tone, and then choose whether you want the device to vibrate when the alarm goes off.
4. Tap **Done**.
5. On the Alarm Clock screen, tap the OFF/ON slider to turn on the alarm.

Note

*When an alarm goes off, you have the choice to **Snooze** or **Dismiss** the alarm. When you select **Snooze**, the alarm will sound again after 5 minutes.*

People

On the **People** tab, you can add favorite contacts and quickly make calls or send text and email messages to these contacts.

From the People tab, you can also set up your own contact card, create new contacts, view your stored contacts list, as well as view exchanged calls and text, multimedia and email messages with a contact. If your contacts have Facebook accounts, you can check if they have any Facebook updates and events.

Note You need an active data or wireless network connection to the Internet to link to Facebook.

Setting Up My Contact Card

My Contact Card automatically opens the first time that you access the **People** tab. You can enter and save your contact information on My Contact Card so you can easily share and send it to your contacts. If you have a Facebook account, you can also sync your Facebook profile with My Contact Card so you can receive instant notifications everytime you or your Facebook friends change profiles or post events.

1. From the Home screen, slide your finger to the **People** tab.
2. When the My Contact Card screen appears, tap **Next**.

Note Tap **Skip** if you prefer to set up My Contact Card later. You can open My Contact Card from the Settings tab of the TouchFLO 3D Home screen, or from the contacts list of the All Contacts screen.

3. On the subsequent screen, choose how to add your photo to your contact card. You can use the Camera to take your photo, or if you have a Facebook account, login to your account and sync with your Facebook profile.


Note When the Link Profile window opens, select the Facebook information that you want to link, and then tap **Done**.

4. On the Detail Information screen, enter your information in the fields provided. You can scroll down the screen to view more fields.
5. When finished entering information, tap **Next**, and then tap **Done** on the subsequent screen to return to the People tab.

Creating New Contacts

From the People tab, you can easily create and store the contact details of the people and businesses that you communicate with.

1. On the People tab, touch **All Contacts**. The All Contacts screen then opens and displays the **All** tab (). Touch **New** to create a new contact.
2. To add the contact's photo, touch the square box on the upper-right side of the New Contact Card screen. You can link to the contact's Facebook photo, select an existing photo in Album, or open Camera and take a photo of the contact.
3. Enter the contact information in the fields provided and then tap **Done**.

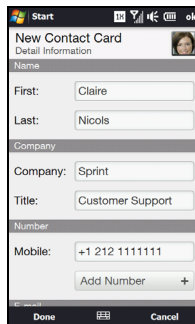


Tips

- To link with the contact's Facebook account, scroll down the New Contact Card screen and then tap **Link**.
- Tap **More** at the bottom of the New Contact Card screen to enter additional contact information from Windows Mobile's Contacts program. See "Contacts" on page 87 for details.

The All Contacts Screen

Touch **All Contacts** on the Home tab or People tab to display the All Contacts screen where you can view and manage all your contacts. The All Contacts screen has the following tabs:

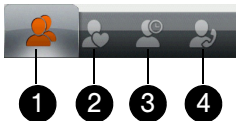


1. **All.** Lists all your stored contacts. This tab lets you create, delete, or edit a contact. Touch a contact to open the Contact Details screen. You can also use this tab to open or update My Contact Card.
2. **Favorites.** Shows the favorite contacts that you have added to the People tab. You can also add favorite contacts through this tab.
3. **Updates and Events.** Displays notifications when there are updates that occurred in Facebook. This tab also shows events of your stored contacts.
4. **Call History.** Lists all your dialed numbers, and received and missed calls. See “Call History” on page 77 for details.

Browsing the Contacts List

On the All Contacts screen's All tab, swipe upward or downward on the screen to scroll through the contacts list. You can also use the search box or the Quick Scroll bar to search for a certain contact.

1. Touch **New** to add a new contact. See “Creating New Contacts” on page 48 for details.
2. Touch **Me** to edit your own contact information. See “Setting Up My Contact Card” on page 47 for details.
3. Touch a contact to open the Contact Details screen.
4. An exclamation point icon appears on a contact when:
 - You receive a new text or email message, or when you have a missed call from the contact.
 - The contact has updated his or her Facebook profile or added events in Facebook.

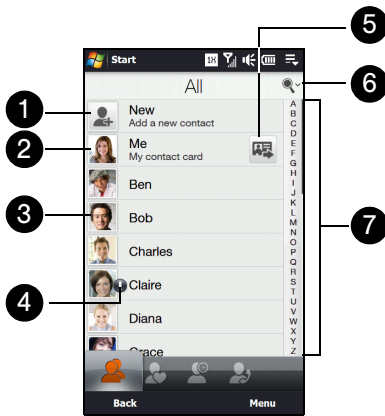

5. To quickly scroll down through the contacts list, touch and hold the Quick Scroll bar and then slide your finger downward.
6. Touch the search icon to display the search box so you can find a contact by entering the contact name.

Note

When you slide open the QWERTY keyboard and the screen switches to landscape view, the search box is automatically displayed. You can use the QWERTY keyboard to enter and search for a contact.

7. Touch this icon to send My Contact Card as an attachment in a multimedia message.

Mail

The **Mail** tab is where you send and receive email messages. Including Outlook Email, you can add up to seven POP3/IMAP4 and Web-based email accounts in this tab. For instructions on how to set up email accounts in the Mail tab, see “Email Messaging” on page 165.

Checking and Reading Email

The icon on the Mail tab and the respective icons of your email accounts show the number of newly received or unread email messages. Select an email account and then swipe your finger up or down on the center screen to browse through received email messages.




1. Touch the email on the screen to open and read the message.
2. Touch **Inbox** to access all email messages of the currently selected account.

3. Touch **Menu** to choose whether to add an email account, send and receive email, and more.
4. These are your email accounts. To select an email account:
 - Touch an email account icon to view the email messages in that account.
 - or –
 - Touch and hold the icon of the email account that is currently displayed, and then drag your finger up or down the account icons until the desired email account is selected.
5. After selecting an email account, touch this icon to create and send a new email message.

For more information about working with email, see “Email Messaging” on page 165.

Messages

On the **Messages** tab, you can read text messages as they arrive and create a new text message. To flip through received text messages, swipe your finger up or down the screen.

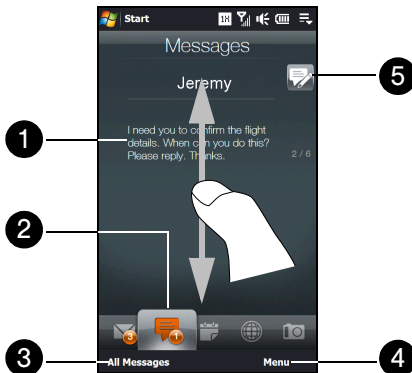

1. Touch the text message to open the Messages tab of the Contact Details screen where you can view all received text messages from the contact and reply to the sender.
2. The icon on the **Messages** tab shows the number of unread text messages.
3. Touch **All Messages** to access all text messages in your inbox and other folders.
4. Touch **Menu** to choose whether to remove the current message and access more options.
5. Touch the **New** icon to create a new text message.

For more information about working with text messages, see “Text Messaging (SMS)” on page 143.

Calendar

Keep track of your important appointments by adding them on the **Calendar** tab.

Creating an Appointment

You can create appointments for the current day which is highlighted on the month calendar, or you can select another date for creating your new appointments.

1. If you are creating an appointment for the current date, touch **Menu > New**. Otherwise, touch another date on the calendar, and then touch **New Appointment**.

Note

To select another month in the calendar, swipe our finger up or down the screen. You can also tap the Up or Down arrow shown beside the month and year.

2. Enter a name for the appointment, and then specify the location.
3. If there is a time frame for the appointment, set the start and end dates and times. If it is a special occasion such as a birthday or a whole-day event, set the **All Day** option to **Yes**.
4. When finished, tap **ok** to return to the Calendar tab.


Viewing and Managing Your Appointments

On the Calendar tab, dates with appointments are indicated by a triangle () at the upper-right corner of the date box.

1. Touch a date on the calendar to switch to Day view. The screen displays all your appointments and the weather information for that day.

Note

The weather information appears only if you have set your local time to a city on the World Clock tab, and if the appointment date is within the 5-day forecast on the Weather tab. See "World Clock" on page 45 and "Weather" on page 65 for details.

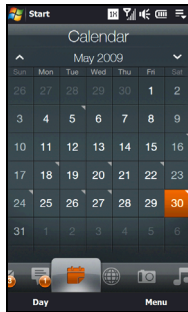

2. Touch an appointment to view its details, and then touch **Menu** to edit, send, or delete the appointment.

Tips


- Your upcoming appointments also appear on the Home tab. See “Home” on page 44 for details.
- You can also use the Windows Mobile Calendar program to create, view, and send appointments. To open the Calendar program, touch **Start** > **All Programs** > **Calendar**. For more information about using Windows Mobile Calendar, refer to the “Help & How-To” topics on the Windows Mobile website.

Internet

On the **Internet** tab, you can browse the Web, search information, and add push Web pages. This tab also lets you enable Push Internet to update the contents of your push Web pages before you browse them.

Navigating the Web

The Internet tab uses Opera Mobile™ as the Web browser.

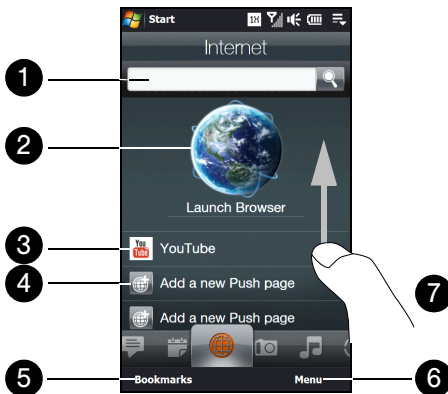

1. To search for information on the Web using Opera Mobile, enter your text in the provided text box and then touch the **Search** icon ().
2. Touch the globe image or touch **Launch Browser** to browse the Web using Opera Mobile.
3. Touch **YouTube** to watch YouTube videos.

4. Touch **Add a new Push page** to choose a website that you want to add as a push page.
5. Touch **Bookmarks** to add, view or delete Web favorites in Opera Mobile.
6. Touch **Menu** and choose whether to delete a push page, adjust the update settings for your push Web pages and bookmarks, and more.
7. Swipe your finger upward when you need to scroll down the screen.

Note


*When you open a Web page in Opera Mobile, the page may be displayed in its smallest size. To reformat Web pages to fit the screen of your device so that the content is readable, set Opera Mobile to display in **Mobile View**. Tap , tap **Settings > Display**, and then select the **Mobile view** check box.*

For more information about navigating the Web with Opera Mobile, see “Using Opera Mobile” on page 159.

Photos and Videos

The **Photos and Videos** tab lets you flip through your photos and video clips and view them full-screen. From this tab, you can also launch the camera so you can take pictures and record video clips.

1. To flip through photos and videos, swipe your finger up or down the screen. Touch the photo or video on the screen to view or play it full-screen.
2. Touch **Album** to open the Album program. See “Viewing Photos and Videos” on page 122 for details.
3. Touch **Slideshow** to view the photos as a slideshow. If a video is selected, touch **Play**.
4. Touch the video camera icon to shoot video.
5. Touch the camera icon to take a photo.

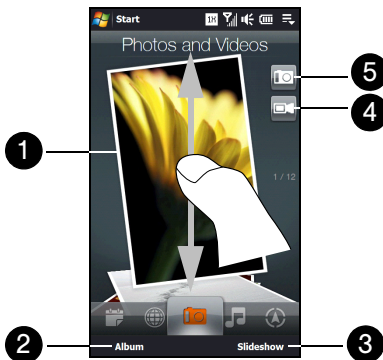

Tips

- The file formats that can be viewed on the **Photos and Videos** tab are the same as the **Album** program.
- To transfer media files from a computer and view them on the **Photos and Videos** tab, copy or synchronize them to a folder under **\My Device** (the device memory) or **\Storage Card**.

Sprint Music

The **Sprint Music** tab allows you to visually browse through albums and music tracks that are on your device and play music. The albums and music tracks that you see on this tab are from the **Now Playing** list of the Library.

Note Your device searches for all music files that have the following audio formats: MP3 (.mp3), WMA (.wma), AAC/AAC+ (.aac), and MPEG-4 (.m4a). It searches for music from the following locations:
 Device: My Music (including all subfolders)
 My Documents (including all subfolders)
 Storage: \Storage Card (including all subfolders)

From the **Sprint Music** tab, you can also access the Sprint Music Store to purchase and download music. For more information about purchasing and downloading music onto your device, see “Music — Sprint Music Store” on page 174.

Playing Music

- On the **Sprint Music** tab, flip through albums and all the music in each album, and then touch the **Play** icon (▶) to start playback.
1. Touch **Sprint Music Store** to download music from Sprint Music Store. See “Music — Sprint Music Store” on page 174 for details.
 2. Swipe upward or downward on the screen to flip through albums and the music or songs in an album.
 3. Touch **Library** to access the Library. See “The Library” on page 61 for details.
 4. Touch **Menu** to set music playback to repeat, turn shuffle on or off, and more.



5. Touch the **Down** arrow icon to go to the next album or the next music in the current album.
6. Touch the **Play** icon to play or the **Pause** icon to pause playback.
7. Touch the up arrow icon to go to the previous album or the previous music in the current album.

To advance forward or backward in the music:

- Touch and hold on the thin bar below the album art to display the progress bar:



Drag your finger right or left on the progress bar to move forward or backward in the current music.

To set repeat and shuffle modes:

The icons on the upper-right side of the **Sprint Music** tab show whether repeat and shuffle modes are enabled.



- Touch **Menu > Repeat** and choose whether to repeat the current track, repeat all tracks in the current album or playlist, or do not repeat.
- To turn shuffle mode on or off, touch **Menu > Shuffle** and then select **Shuffle On** or **Shuffle Off**.

The Library

The Library organizes music into categories, such as **Now Playing**, **Artists**, **Albums**, **Genres**, **All Songs**, and more. When you add more albums or music tracks to your device, go to the Library to locate and play the new albums or music tracks.

To browse and play music in the Library:

1. On the **Music** tab, touch **Library** to open the Library screen.
2. The tabs at the bottom of the Library screen correspond to the different categories. To browse music under a certain category, slide to the tab that corresponds to the desired category.
3. Keep tapping an item on a category tab (for example, an artist) until the music tracks display on the screen.
4. Tap a music track to play it.

Note	When you select a category in the Library such as Artists and play its music, the Now Playing list will be replaced with the music tracks from that category.
-------------	---

Playlists

You can group your favorite music into a playlist and then play back the playlist.

To create a new playlist:

1. Select the desired music on the **Music** tab or the **Library**.
2. Touch **Menu > Add to Playlist**.
3. Touch **Create new playlist**, enter a playlist name, and then touch **Done**.

To add more music files to a playlist:

1. On the Library, slide to the **Playlists** tab, and then touch a playlist to open it.
2. Touch the plus icon at the upper-right side of the screen, or touch **Menu > Add Songs**, and then slide to the **All Songs** tab.
3. Select the check boxes of the music tracks you want to add to the playlist, or touch **Menu > Select All** to choose all tracks.
4. Touch **Done** to add the selected tracks to the playlist.
5. Touch **Back** to return to the **Playlists** tab.

To play back a playlist:


1. On the **Playlists** tab, touch a playlist to open it.
2. Touch the first track in the playlist. The **Music** tab starts playing the first track. After each track, the next one in the playlist will be played.

Note

Playlists are not automatically updated when music files have been deleted from the device memory or the microSD card.

Sprint Navigation

The **Sprint Navigation** tab allows you to connect to Sprint's wireless data network and use GPS navigation services. If this is your first time to use Sprint Navigation, touching any of the icons on this tab will prompt you to log into the Sprint Navigation service.

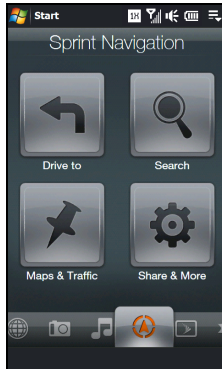


For more information about using Sprint Navigation, see "Using Sprint Navigation" on page 178.

Sprint TV

On the **Sprint TV** tab, you can watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.

1. If this is your first time to use Sprint TV, touch the center image to connect to Sprint data services using the data connection and download channels. Afterwards, touch the displayed channel on the center of the screen to watch the channel.
2. Touch **Update Now** to download the latest preset channel list from Sprint.
3. Touch **Launch** to open the Sprint TV application so you can connect to Sprint data services, access all available channels, and choose to which channels you want to subscribe.
4. Preset channel selections are listed on the strip at the right side of the screen.

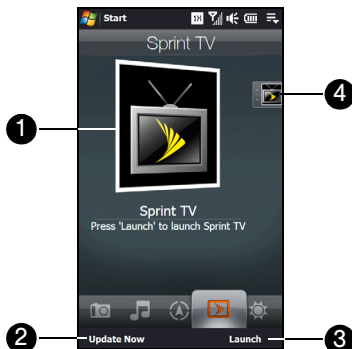

To watch a preset channel:

- Touch the icon on the right that corresponds to the desired channel.
– or –


Press and hold on the highlighted channel icon to display a slide-out bar, and then slide your finger up or down. Release your finger when you have selected the desired channel.

For more information about using Sprint TV, see “TV” on page 171.

Weather

The **Weather** tab shows the current weather as well as weather information for the next four days of the week. This tab can display weather information of up to 10 cities.

Your device automatically connects to the Internet via the data connection or Wi-Fi to download and display weather information. The current temperature, temperature range, type of weather (sunny, cloudy, showers, or other), and the weather information for the next four days of the week are shown on the **Weather** tab.

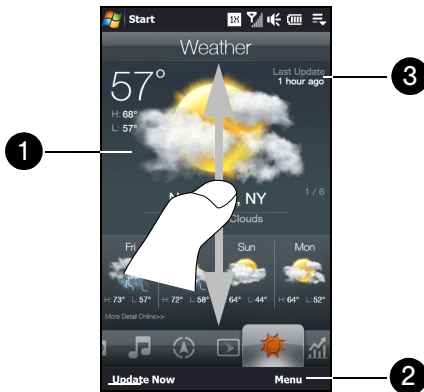

1. To switch between cities, swipe your finger up or down the screen.
2. Touch **Menu** to add or delete a city, change the temperature to Celsius or Fahrenheit, and more.
3. Shows the last weather update. Touch this item or touch **Update Now** at the bottom-left side of the screen to download the latest weather information.

To add a city:

1. On the **Weather** tab, touch **Menu > Add Location**.
2. The Select Country screen then appears. Flick or drag your finger on the screen, or use the Quick Scroll bar on the right side of the screen when scrolling the country list. Touch the desired country to select it.
3. The Select City screen then appears. Flick or drag your finger on the screen, or use the Quick Scroll bar on the right side of the screen when scrolling the city list. Touch the desired city to select it.

Tip

You can also enter the country or city name in the provided search box.

Stock

The **Stock** tab allows you to add, view, and analyze stocks and stock market movements using updated financial information.

Note

Downloading stock or stock market information may incur additional fees from your wireless service provider. Contact your service provider for details.

Adding Stock Quotes

You can add up to 14 stock quotes or stock market indexes on the **Stock** tab.

1. From the Home screen, slide to the **Stock** tab.
2. If this is your first time to add a stock quote or index, touch **Add Stock**. Otherwise, touch **Menu > Add Stock**.
3. On the Add Stock screen, enter the company name, stock market index, or ticker symbol in the search box, and then touch the **Search** icon ().
4. Tap the company name, stock market index, or ticker symbol to add it to the **Stock** tab.

Viewing Stock Information

The **Stock** tab lists all your stock quotes and stock market indexes including the current price or volume, and the change in price or volume from the previous trading day. The change in price or volume box indicates whether the stock or stock market has gained (green) or declined (red).



1. Touch a stock quote to view more details. Swipe your finger upward to scroll down the list of stock quotes on the **Stock** tab.
2. Touch **Menu** to add, delete or rearrange the stock quotes on the Stock tab.
3. Shows the current trading price or volume.
4. Touch the green or red box to switch between showing the change in points/price or percentage from the previous trading day.
5. Shows the last stock information update. Touch this item or touch **Update Now** at the bottom-left side of the screen to download the latest stock information.

Settings

The **Settings** tab allows you to synchronize information with your computer or the Exchange Server, change sound settings such as the ring tone, manage the communications features of your device such as Wi-Fi and Bluetooth, and more. You will find the following settings on this tab:

1. **Sync Data.** Opens ActiveSync to connect and synchronize your device with the computer or Exchange Server. (See “Synchronizing Information With Your Computer” on page 80 for details.)
2. **Sound.** Allows you to set the sound profile, ring tone, and more.
3. **Wallpaper.** Allows you to change the wallpaper of the Home tab, or change the wallpaper back to the default background.
4. **Communications.** Opens Comm Manager where you can easily turn features such as Wi-Fi and Bluetooth on or off. (See “Comm Manager” on page 97 for details.)
5. **Customize Tabs.** Allows you to move or rearrange the Home screen tabs. (See “Customizing Home Screen Tabs” on page 43 for details.)
6. **My Contact Card.** Allows you to set up My Contact Card. (See “Setting Up My Contact Card” on page 47 for details.)
7. **Mail Setup.** Allows you to set up email accounts. (See “Email Messaging” on page 165 for details.)
8. **G-Sensor.** Allows you to enable or disable auto screen rotation and calibrate the device's G-Sensor.
9. **All Settings.** Provides you access to all the settings of your device. (See “Managing Your Device” on page 128 for details.)



Section 2D

Using Phone Features

- ◆ *Displaying Your Phone Number (page 70)*
- ◆ *Making Calls from the Phone Screen (page 70)*
- ◆ *Answering and Ending Calls (page 74)*
- ◆ *Checking Missed Calls (page 76)*
- ◆ *Call History (page 77)*
- ◆ *Speed Dial (page 78)*

The same as with a standard mobile phone, you can use your device to make, receive, keep track of calls, and send text messages. This section will show you how to use the phone features of your device.

Displaying Your Phone Number

In case you forget what your phone number is, you can check your number from the Phone screen.

1. Press the **Talk** key to display the Phone screen.
2. Tap **Menu > My Phone Number**. (Your phone number and account information will be displayed.)

Notes

- To view information about your device, tap **Menu > Device Information** on the Phone screen.
- Your Sprint phone number is the same for both CDMA and GSM (international roaming).

Making Calls from the Phone Screen

The Phone program's **Smart Dial** feature makes it easy for you to call a phone number or contact. When you start entering a phone number or contact name, Smart Dial automatically searches and sorts the contact entries in Contacts and the phone numbers in Call History (including incoming, outgoing, and missed calls). You can then select the desired number or contact to call from the filtered list.

You can enter the first letter of the name or number of a contact. Smart Dial will search for contact phone numbers and the first character of a contact name as well as from the character that appears after a space, dash, or underscore in a contact name. For example, if you tap , which is associated with [a, b, and c] on the Phone keypad, contact names such as “**B**en Miller,” “George Adams,” “John-Carter,” “**C**arter, Ellen,” “Dixon, **A**llan,” “Thomas_**C**lark,” “JaneCampbell” would appear as matches.

If the matching list is long and you want to narrow down the search further, enter another letter. Using the same example above, if you continue to tap “3” which is associated with [d, e, f], the matching list will be narrowed down to the following names: “**B**en Miller,” “George Adams,” “Carter, Ellen,” “Dixon, Allan.”

Calling a Phone Number or Contact

1. Press the **Talk** key to display the Phone screen.
2. Begin entering the first few numbers or characters by tapping the keys on the Phone keypad. As you enter numbers or letters, the Smart Dial panel will display matches found.

If you tapped a wrong number or character, tap  to erase each subsequent digit or character. To erase the entire entry, tap and hold .

3. Tap  to close the Phone keypad and to see if there are more matching numbers or contacts in the Smart Dial panel. To browse through the filtered list, flick through the list or slide your finger up or down the list slowly.



4. To call a number or contact, either:

- Tap the desired phone number or contact from the list.

— or —

- Call a different phone number associated with the displayed contact by tapping the contact card icon () at the right side of the contact name. On the Contact Details screen, tap the number you want to call.

Tips

- When in a call, use the **Volume Up** or **Down** button on the side of the device to adjust the phone volume.
- After entering the first few digits and the phone number you are dialing is not found in your contacts, a **Save to Contacts?** button will appear above the Phone keypad. Tap it to save the number to your Contacts.
- To save a phone number listed on the Phone screen to your Contacts, tap .
- To send a text message to a contact listed on the Phone screen, tap his or her contact card icon () and then tap **Send Text Message**. For more information about sending text messages, see “Text Messaging (SMS)” on page 143.

Global Smart Dialing (International Calls)

When the Global Smart Dialing feature is enabled, placing international calls is a lot easier. You can preconfigure the country where you are calling from and the country to call to, and then simply enter the 10-digit number when placing your international call. Both the international access code and country code will automatically be prepended to the number.

Configuring Global Smart Dialing

To enable Global Smart Dialing and preconfigure the dialing codes:

1. Press the **Talk** key to open the Phone screen.
2. Tap **Menu**, scroll down the menu, and then tap **Global Smart Dialing**.
3. Select the **Enable Global Smart Dialing** check box.

4. By default, the international access code has already been set to that for the United States. You do not need to change it if you are making international calls from the United States.

However, if you are placing international calls from another country, select the country in which you are located from the **Dial from** list. If the country is not in the list, enter its international access code in the **International Direct Dialing Code** box.

5. Select the country to which you are calling from the **Dial to** list. The corresponding country code will appear in the **Country Code** box. (You cannot change the country code.)
6. Tap **Done**.

Note You can also configure Global Smart Dialing to automatically prepend the U.S. country code (1) when you place domestic calls. Select **United States** from both the **Dial from** and **Dial to** lists. When you place your call, you only need enter the 10-digit number.

Using Global Smart Dialing

To use Global Smart Dialing to place an international call:

1. On the Phone screen, directly enter the 10-digit number to call. This number includes the area code and phone number.
2. Tap  on the Phone screen or press the **Talk** key to place the call. Your device will dial the complete number including the international access code, the country code, and the 10-digit number,

Direct Dial

Note When Global Smart Dialing is not enabled, or when the number you want to call (area code and phone number) contains fewer than 10 digits, you need to use direct dialing to place international calls.

To use direct dialing to place an international call:

- ▶ Enter the international access code, the country code, the city or area code, and the phone number, and then tap  to complete the call.

Answering and Ending Calls

Your device notifies you of incoming calls in the following ways:

- The device rings or vibrates.
- The **Talk** key flashes a white light.
- The backlight illuminates, if your device was in sleep mode.
- The device displays the Incoming Voice Call screen. If the incoming call is from a phone number stored in your Contacts, the caller's name is displayed. The caller's phone number and picture may also be displayed, if available.

Accepting or Rejecting an Incoming Call

When there is an incoming call, you can choose to accept or reject the call.

To answer the call:

- ▶ Press the **Talk** key.

— or —

On the incoming call screen, slide the center button of the **Answer/Ignore** bar to the left.



To mute the ringing sound without rejecting the call:

- ▶ Tap **Mute Ring** when you receive an incoming call.

— or —

Press the **Volume Down** button.

— or —

Place your device face down.

To reject the call:

- Press the **End** key.

— or —

On the Incoming Voice Call screen, slide the center button of the **Answer/Ignore** bar to the right.

To reject a call and send a text message:

When you reject a call, you can choose to automatically send a text message to the caller.

1. On the Phone screen, tap **Menu > Options... > Advanced** tab.
2. Select the **Reject call with text message** check box.
3. Change the default text message if needed, and then tap **ok**.

When **Reject call with text message** is enabled, tap **Send Text** to reject the call and send the text message to the caller.

You can automatically send a default text message to the caller and reject the incoming voice call. Tap **Send Text** when you have an incoming call to send the text message. You can change the default text message by tapping **Menu > Options > Advanced** tab while on the Phone screen.

Ending a Call

When a call is in progress, tap **End Call** or press the **End** key to hang up.

Turning On and Off the Speakerphone

During a call, do one of the following to turn the speakerphone on or off:

- ▶ Tap  to turn the speakerphone on. Tap this button again to turn the speakerphone off.

— or —

Placing your device face down automatically turns on the speakerphone. To turn the speakerphone off, place your device face up.

— or —

You can also press and hold the **Talk** key during a call to turn the speakerphone on or off.

Checking Missed Calls

Missed Call Notification

There are several ways your device alerts you when you have missed calls:

- The missed call icon () is displayed in the title bar.
- The number of missed calls is shown on the TouchFLO 3D Home tab.

To check who the caller was:

- ▶ Tap the title bar to display the Notifications screen, and then tap the missed call notification message.

— or —

On the TouchFLO 3D Home tab, tap the **Call History** or **Missed Call** item. (For more information about the TouchFLO 3D Home tab, see “Home” on page 44.)

— or —

On the Phone screen, tap  or tap **Menu > Call History**.

Call History

Call History shows you your incoming calls, outgoing calls, and missed calls. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). An icon appears to the left of the number, and it indicates the type of call:

	Missed. These are incoming calls that you were not able to answer, and they are routed to your voicemail.
	Received. These are incoming calls that were answered.
	Dialed. These are outgoing calls that you made.

Notes

- *Call History records only those calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be added to the Call History.*
- *If you have a long list of calls in the Call History, you can tap one of the buttons at the bottom of the Call History screen to filter the list according to the type of call that you want to display.*

To make a call from Call History:

- ▶ Tap a phone number you want to call.

To delete all Call History entries:

- ▶ Tap **Menu > Clear Call Logs**.

Speed Dial

Use **Speed Dial** to call frequently-used numbers with a single tap. For example, if you assign a contact to the location **2** in Speed Dial, you can tap and hold  on the Phone keypad to dial the contact's number.

To create a Speed Dial entry:

1. On the Phone screen, tap **Menu > Speed Dial**.
2. Tap **Menu > New**.
3. Tap a contact, and then select the phone number of the contact that you want assigned to the speed dial key.
4. In **Location**, select an available key to use as the speed dial key.
5. Tap **ok**.

Notes

- Number  and  keys are reserved and cannot be assigned as speed dial keys. The number  key is reserved for voicemail. You can set any number between "2" and "99" as a speed dial key.
- When you assign a new phone number in an occupied speed dial key, the new phone number will replace the existing one.
- To delete a speed dial entry, in the **Speed Dial** list, tap and hold the desired entry, and then tap **Delete**.

To make a call using Speed Dial:

If you have assigned a speed dial key to a contact, do the following to dial the contact's number:

- Tap and hold the assigned key, if it is a single-digit speed dial number.
 - or –

To dial a two-digit speed dial number, tap the first number key first, and then tap and hold the second number key.

Enabling or Disabling Airplane Mode

Another way to turn off the phone function is to switch your device to **Airplane Mode**.

1. Tap **Start > Settings > Communications** to open the Comm Manager.
2. On the Comm Manager screen, tap **Airplane Mode** to enable or disable Airplane Mode. When enabled, the **ON** indicator is activated.

When you enable Airplane Mode, all wireless radios on your device are turned off, including the phone function, Bluetooth, and Wi-Fi. When you disable Airplane Mode, the phone function is turned back on and the previous states of Bluetooth and Wi-Fi are restored.

Note

When you return from an international trip and you disable Airplane Mode after landing in the United States, your device will first search for GSM networks if your device has been set to Global mode and was connected to a GSM network before. A "No Service" status message may first appear on your device. Please wait for your device to scan for CDMA service and connect to the Nationwide Sprint Network or a CDMA roaming network.

Synchronizing Information With Your Computer

- ◆ *Setting Up Windows Mobile Device Center on Windows Vista (page 81)*
- ◆ *Setting Up ActiveSync on Windows XP (page 83)*
- ◆ *Synchronizing With Your Computer (page 84)*

You can take information from your computer wherever you go by synchronizing them to your device. This section explains how to connect your device to the computer and synchronize your data.

Setting Up Windows Mobile Device Center on Windows Vista


Microsoft Windows Mobile® Device Center is the replacement for Microsoft® ActiveSync® on Windows Vista®.

Note Some versions of Windows Vista come with Windows Mobile Device Center already installed. If Windows Mobile Device Center is not available in your Windows Vista installation, you can install it from the Getting Started CD that came with your device.

Setting Up Synchronization in Windows Mobile Device Center

When you connect your device to your computer and start Windows Mobile Device Center for the first time, you are asked to create a Windows Mobile partnership with your device. To create a partnership:

1. Connect your device to your computer. Windows Mobile Device Center configures itself, and then opens.
2. On the license agreement screen, click **Accept**.
3. On the Windows Mobile Device Center's Home screen, click **Set up your device**.

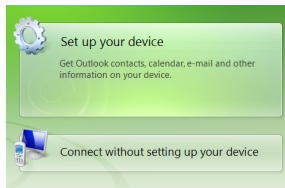


Note Choose **Connect without setting up your device** if you only want to transfer media files, check for updates, and explore your device but not synchronize Outlook information.

4. Select the items you want to synchronize, and then click **Next**.
5. Enter a device name, and then click **Set Up**.

When you finish the setup wizard, Windows Mobile Device Center synchronizes your device automatically. Outlook email messages and other information appear on your device after synchronization.

Using Windows Mobile Device Center

To open Windows Mobile Device Center, click **Start > All Programs > Windows Mobile Device Center** on your Windows Vista computer.

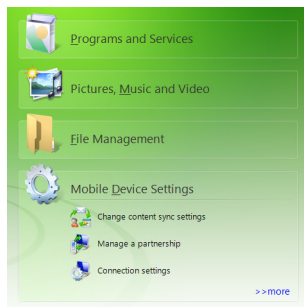

Within Windows Mobile Device Center, you can do the following:

- Click **Mobile Device Settings** to change synchronization settings.
- Click **Pictures, Music and Video > __ new pictures/video clips are available for import**, and a wizard will guide you through tagging and transferring photos from your device to the Photo Gallery on your computer.
- Click **Pictures, Music and Video > Add media to your device from Windows Media Player** to synchronize music and video files using Windows Media Player.
- Click **File Management > Browse the contents of your device** to view documents and files on your device.

Note

See Windows Mobile Device Center Help for more information.

Setting Up ActiveSync on Windows XP

On a Windows® XP computer, you need to use Microsoft ActiveSync® 4.5 or later. If you do not have this software on your computer, you can install it from the Getting Started CD that came with your device.

Setting Up Synchronization in ActiveSync

1. Connect your device to your computer. The Synchronization Setup Wizard automatically starts and guides you to create a synchronization partnership. Click **Next** to proceed.
2. To synchronize your device with your computer, clear the *Synchronize directly with a server running Microsoft Exchange* check box, and then click **Next**.
3. Select the information types that you want to synchronize, and then click **Next**.
4. Select or clear the *Allow wireless data connections* check box according to your preference.
5. Click **Finish**.

When you finish the wizard, ActiveSync synchronizes your device automatically. Notice that Outlook email messages and other information appear on your device after synchronization.

Synchronizing With Your Computer

Connect and synchronize your device with your computer using the USB cable or Bluetooth connection.

Starting and Stopping Synchronization

You can manually synchronize from either your device or your computer.

From your Device

- From the Home screen, slide to the **Settings** tab and then touch **Sync Data**.
 - or –
- Tap **Start > Programs > ActiveSync**, and then tap **Sync**. To end synchronization before it completes, tap **Stop**.

Tip

To delete a partnership with one computer completely, disconnect your device from that computer. In ActiveSync on your device, tap **Menu > Options...**, tap the computer name, and then tap **Delete**.

From Windows Mobile Device Center

1. Click **Start > All Programs > Windows Mobile Device Center**.
2. Click  at the lower left of the Windows Mobile Device Center. To end synchronization before it completes, click .

From ActiveSync on Your Computer

When you connect your device to your computer, ActiveSync automatically opens on your computer and synchronizes.

- To manually start synchronization, click .
- To end synchronization before it completes, click .

Specifying What Information Is Synchronized

You can change the information types and the amount of information to synchronize for each type on either your device or your computer. Follow the steps below to change synchronization settings on your device.

Note Before changing synchronization settings on your device, disconnect it from your computer.

1. In ActiveSync on your device, tap **Menu > Options**.
2. Select the check box for any items you want to synchronize. If you cannot select a check box, you might have to clear the check box for the same information type elsewhere in the list.
3. To change synchronization settings for an information type (for example, **E-Mail**), select it, and tap **Settings**.

You can then set the download size limit, specify the time period of information to download, and more.

- Notes**
- Some information types such as Favorites, Files, and Media cannot be selected in ActiveSync Options on your device. You can select or clear these items only from your computer's Windows Mobile Device Center or ActiveSync.
 - A computer can have sync partnerships with many different Windows Mobile powered devices, but a device can have sync partnerships with at most two computers. To ensure that your device will synchronize properly with both computers, set up the second computer using the same synchronization settings you used on the first computer.
 - Outlook email messages can be synchronized with only one computer.

Troubleshooting Sync Connection Problems

In some cases, when the computer connects to the Internet or a local network, it may disconnect the connection with your device in favor of the Internet or network connection.

If this happens, tap **Start > Settings > All Settings**. Tap **Connections** tab > **USB to PC**, and then clear the **Enable faster data synchronization** check box. This makes your computer use a serial USB connection with your device.

Contacts, Calendar, and Tools

- ◆ *Contacts (page 87)*
- ◆ *Calendar (page 89)*
- ◆ *Notes (page 92)*
- ◆ *Tasks (page 94)*
- ◆ *Calculator (page 95)*
- ◆ *Comm Manager (page 97)*
- ◆ *Microsoft Office Mobile (page 99)*

Your device is equipped with several personal information management features that help you manage your busy lifestyle. Document viewers, voice recognition and recording programs, a business card reader, and other useful tools are also available. This section shows you how to use these features and tools.

Contacts

Adding New Contacts

You can use the Windows Mobile **Contacts** program to store and manage the contact information of the people and businesses you communicate with. You can add the following types of contacts to your device:

- **Outlook contacts.** Contacts that are stored on your device, which can be created on your device or synchronized with your computer or the Exchange Server.
- **Windows Live™ contacts.** Contacts that you communicate with using Windows Live™ Messenger or MSN.

Notes

- You can also add contacts to your device through the **All** tab of the **All Contacts** screen which is accessed from the TouchFLO 3D Home screen. See “People” on page 47 for details.
- You can add Windows Live contacts only after setting up Windows Live on your device.

To open the **Contacts** screen:

- ▶ Tap **Start > All Programs > Contacts**.

To add a contact on your device:

1. Open the **Contacts** screen.
2. Tap **New**, select **Outlook Contact**, and enter the contact information.
3. In the **File as** field, choose how you want the contact name to appear in the contact list.
4. To add a photo of the contact, tap **Select a picture**, and then select the picture file or tap **Camera** to take a photo of the contact.
5. To assign a ring tone to the contact, tap the **Ring tone** field, scroll through the list of tones, and then select a desired tone.
6. When finished, tap **ok**.

Tips

- If a person who is not in your list of contacts called you and you want to save that person's phone number, you can tap **Yes, Create new contact** on the pop-up window that appears after the call is ended.
- To save a phone number that is contained in a message, open the message, tap the underlined phone number, and then tap **Save To Contacts**.
- To edit contact information, tap the contact name on the Contacts screen and then tap **Menu > Edit**.

Managing Contacts

To group similar contacts:


For easier management, you can group similar contacts by assigning them to categories.

1. Create a new Outlook contact or edit an existing Outlook contact.
2. Tap **Categories**.
3. Select a preset category such as Business or Personal, or tap **New** to create your own category.
4. When finished, tap **ok**.

To find a contact on your device:

There are several ways to find a contact when your contact list is long:

- Begin entering a contact name in the provided text box until the contact you want is displayed.
- On the Quick Scroll bar on the right of the Contacts screen, scroll to or tap a letter to go directly to the part of the contacts list where contact names start with that letter.

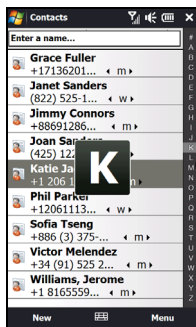

Quick
Scroll bar



Note

You can disable the Quick Scroll bar by tapping **Menu > Options...** and selecting the **Show alphabetical index** check box. This will show the alphabetical index at the top of the Contacts list.

- Filter the list by categories. In the contact list, tap **Menu > Filter**, and then tap a category you've assigned to a contact. To show all contacts again, select **Menu > Filter > All Contacts**.

Calendar

You can use the Windows Mobile **Calendar** program to create appointments, including meetings and other events, as well as synchronize Calendar appointments between your device and computer.

Note

You can also create appointments through the **Calendar** tab of the TouchFLO 3D Home screen. See "Calendar" on page 54 for details.

To open the Calendar screen:

- Tap **Start > All Programs > Calendar**.

Creating Appointments

To schedule an appointment:

1. Open the Calendar screen and then tap **Menu > New Appointment**.
2. Enter a name for the appointment in the **Subject** field.
3. Do one of the following:
 - If it is a special occasion such as a birthday or an all-day event, set the **All Day** option to **Yes**.
 - If there is a time frame for the appointment, set the start and end dates and times.

4. Specify the type of category for your appointment, so that it can be grouped with other related appointments. Tap **Categories**, and then select a preset category (Business, Holiday, Personal, or Seasonal), or tap **New** to create your own category.
5. When finished, tap **ok** to return to the calendar.

Notes

- All-day events do not occupy blocks of time; instead, they appear in banners at the top of the calendar.
- To have the time entered automatically, first, tap **Day** on the lower-left side of the screen to switch to Day view. Next, tap and hold on the start time, drag your finger down to select a time slot for the new appointment, and then tap **Menu > New Appointment**.
- To remove an appointment, tap **Menu > Delete Appointment**.


To set the reminder time for new appointments:

By default, Calendar has been set to display a reminder alert when you have new upcoming appointments. You can change the reminder time.

1. On the Calendar screen, tap **Menu > Tools > Options... > Appointments** tab.
2. Make sure the **Set reminders for new items** check box is selected.
3. Set the time when you want the reminder to alert you, and then tap **ok** to return to the Calendar screen.

The Calendar Screen

By default, Calendar displays appointments in **Agenda** view. You can also look at your appointments in **Day**, **Week**, **Month**, and **Year** views.

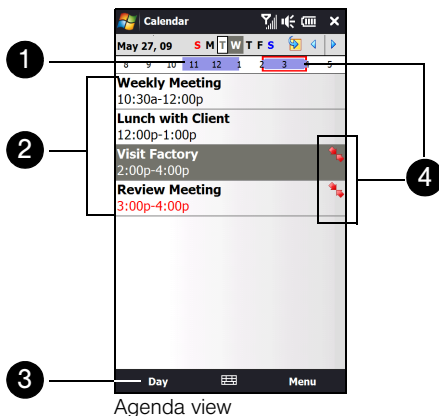

Agenda view

1. The highlighted hours indicate the time of your appointments.
2. Tap an appointment to view details about the appointment.
3. Tap the lower-left side of the screen to change the calendar view to one of the following:
Day, *Week*, *Month*, *Year*, or *Agenda*.
4. The red box and red arrows indicate there are conflicting appointments.

Viewing Appointments

- To see detailed appointment information in any view, tap the appointment.
- To view appointments by category, tap **Menu > Filter**, and then select the desired category.
- To change the default view that Calendar uses to display appointments, tap **Menu > Tools > Options... > General** tab. Tap the **Start in** box, and then choose the calendar view.
- When in Month view, you will see the following indicators:
 -  Morning appointment
 -  Afternoon or evening appointment
 -  Both morning and afternoon or evening appointments
 -  All-day event

Notes

Using **Notes**, you can create handwritten and typed notes, record voice notes in WAV format, convert handwritten notes to text for easy readability, and more.

To create a note:

1. Tap **Start > All Programs > Notes**. In the note list, tap **New**.
2. Use the sliding QWERTY keyboard or choose an onscreen keyboard to enter your text.

Tip

For more information about using the sliding QWERTY keyboard or onscreen keyboard, see "Entering Text" on page 31.

3. When finished, tap **ok** to save and return to the note list.

Notes

- To select handwritten text, tap and hold next to the writing. As soon as dots appear, and before they form a complete circle, quickly drag across the writing.
- If a letter crosses three ruled lines, it is treated as a drawing rather than text.

To draw in a note:

1. Create or open a note file.
2. Use the stylus to draw on the screen. A selection box then appears around your drawing.
3. Tap **ok** to save.

Note *To select a drawing (for example, to copy or delete it), tap and hold the drawing briefly. When you lift the stylus, the drawing is selected.*

To record a voice note:

1. Tap **Start > All Programs > Notes**.
2. If you do not see the Recording toolbar, tap **Menu > View Recording Toolbar**.
To create a stand-alone recording, record from the note list. You can also create or open a note first, and then add a recording to a note.
3. Tap the **Record** icon () to begin recording your voice. Tap the **Stop** icon () to stop recording.

Tip *To select the voice recording format, return to the note list and then tap **Menu > Options... > Global Input Options** link (at the bottom of the Options screen). On the Input screen, tap the **Options** tab and choose the desired format from the Voice recording format list.*

Tasks

Use **Tasks** to keep track of things you need to do. A task can occur once or repeatedly (recurring).

Your tasks are displayed in a task list. Overdue tasks are displayed in red. A reminder will be displayed when you have new tasks to be completed.

To create a task:

1. Tap **Start > All Programs > Tasks**.
2. Tap **Menu > New Task**, enter a subject for the task, and fill in information such as start and due dates, priority, and so on.
3. Specify the type of category for your task, so that it can be grouped with other related tasks. Tap **Categories**, and then select a preset category (Business, Holiday, Personal, or Seasonal), or tap **New** to create your own category.
4. When finished, tap **ok**.

To change the priority of a task:

Before you can sort tasks by priority, you need to specify a priority level for each task.

1. Tap **Start > All Programs > Tasks**.
2. Tap the task you want to change the priority for.
3. Tap **Edit**, and tap a priority level in the **Priority** box.
4. Tap **ok** to return to the task list.

Note All new tasks are assigned a Normal priority by default.

To show start and due dates in the task list:

1. Tap **Start > All Programs > Tasks**, and then tap **Menu > Options**.
2. Select the **Show start and due dates** check box, and then tap **ok**.

Calculator


Calculator features basic calculation functions, and also works as an advanced scientific calculator.

Basic Calculator

Use the Simple Calculator to do basic arithmetic such as addition, subtraction, multiplication, and division. You can also work with numbers you store in the calculator memory.

To use the Basic Calculator:

1. Tap **Start > Calculator**.
2. Operate the calculator the same as you would a handheld calculator by touching the onscreen keys to enter numbers, clear the entered number, and perform calculations.
3. You can also tap the respective buttons on the left side of the screen to add values to the calculator memory, display the stored number from the calculator memory, or clear the calculator memory.

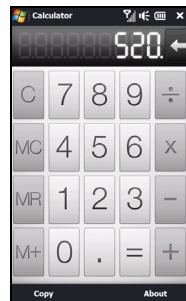

Notes

- A maximum of 9 digits can be entered for each number.
- Tap **Copy** at the lower-left side of the screen to copy the displayed value so that you can paste it to another program that has a paste function, such as Notes.
- The Basic Calculator can only be used when the screen display is in portrait mode.

Scientific Calculator


Use the Scientific Calculator to perform more complex calculations such as square roots, logarithmic and trigonometric functions, percentages, and more.

To display the Scientific Calculator:

1. Tap **Start** > **Calculator**.
2. Slide open the QWERTY keyboard to display the Scientific Calculator.

To use the Scientific Calculator:

1. Tap to toggle between degrees or radian measurement.
2. Tap to display the second layer of scientific calculation buttons.
3. When you tap one of these function buttons after entering a number, the corresponding operand or operator is displayed. You can continue to enter numbers, operands and operators to build the formula expression.
4. Tap to compute and display the calculation result.
5. Tap to clear the calculation result so you can build another equation.
6. Tap to clear the formula expression or calculation result.

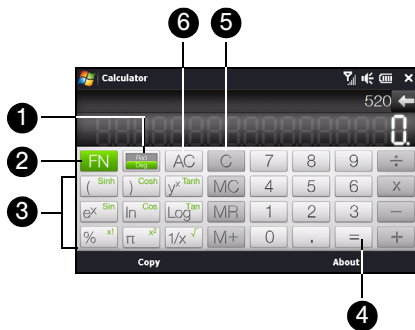


Comm Manager

Comm Manager is a central location where you can easily turn on and off the communication features of your device such as the phone connection, Wi-Fi, data connection, Bluetooth, and more.

To access the **Comm Manager**:

Do one of the following:

- Touch **Start > Settings** to go directly to the Home screen's **Settings** tab, and then touch **Communications**.
 - or –
 - Touch **Start > All Programs > Comm Manager**.
 - or –
 - Touch **Start > Settings > All Settings > Connections** tab > **Comm Manager**.

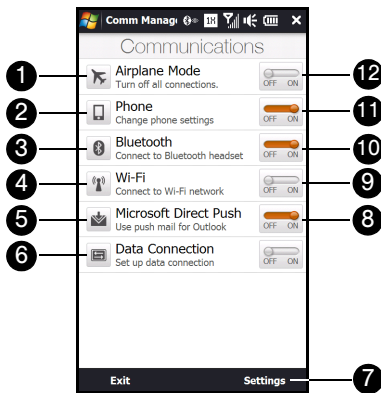

1. Switch Airplane Mode on or off. Turning on Airplane Mode turns off the phone connection, Wi-Fi, and Bluetooth functions. For more information, see “Enabling or Disabling Airplane Mode” on page 79.
2. Access the phone settings, configure phone services, and more.
3. Connect a Bluetooth headset or other Bluetooth-enabled device. For more information, see “Using Bluetooth” on page 102.
4. Connect to a wireless network. See “Connecting via Wi-Fi” on page 153 for details.
5. Open ActiveSync and configure the push mail settings.
6. Open the Connections screen to check or manage data connection settings.
7. Access the phone, Bluetooth, and Wi-Fi settings.
8. Connect or disconnect the current data connection.
9. Switch between automatically receiving (as items arrive) or manually retrieving Outlook email messages.
10. Switch Wi-Fi on or off. Tap **Settings > Wireless LAN** to configure wireless network connection settings. See “Connecting via Wi-Fi” on page 153 for details.
11. Switch Bluetooth on or off. Tap **Settings > Bluetooth** to configure Bluetooth on your device. See “Using Bluetooth” on page 102 for details.
12. Switch the phone connection on or off. Tap **Settings > Phone** to set the ring tone, services, and other phone settings. See “Using Phone Features” on page 69 and “Managing Your Device” on page 128 for details.

Microsoft Office Mobile

Microsoft® Office Mobile consists of the following applications:

- **Microsoft® Office Excel® Mobile** lets you create and edit Excel workbooks and templates on your device.
- **Microsoft® Office OneNote® Mobile** lets you create notes with text, photos, and voice recordings for synchronization later with Microsoft Office OneNote 2007 on your computer.
- **Microsoft® Office PowerPoint® Mobile** allows you to view (but not create) slide show presentations in *.ppt and *.pps formats.
- **Microsoft® Office Word Mobile** lets you create and edit documents and templates in Word Mobile and save them as *.doc, *.rtf, *.txt, and *.dot files.

To use Microsoft Office Mobile:

1. Tap **Start > Office Mobile**.
2. Tap the Office Mobile application that you want to use.

When working with Word Mobile and Excel Mobile files, you can use the Zoom bar on your device for zooming:

- To zoom in, slide your finger from left to right across the Zoom bar.
- To zoom out, slide your finger from right to left across the Zoom bar.

Word Mobile and Excel Mobile do not fully support all features of Microsoft Office Word and Microsoft Office Excel. To see a complete list of features that are not supported in Word Mobile and Excel Mobile, see Help on your device.

Tips

- By default, Word Mobile saves documents in .docx format, while Excel Mobile saves workbooks in .xlsx format. If you want to open these types of files on a computer that uses Microsoft Office 2000, Office XP, or Office 2003, you need to download and install the **File Format Converter** in your computer. You can find this converter at <http://www.microsoft.com/downloads/details.aspx?FamilyId=941B3470-3AE9-4AEE-8F43-C6BB74CD1466&displaylang=en>.
- If you want Word Mobile to save documents in .doc format, tap **Menu > Tools > Options...** (or **Menu > Options...** when no document is opened), and then change the **Default template** to **Word 97-2003 Document (.doc)**.
- If you want Excel Mobile to save workbooks in a format that is compatible with Microsoft Office 2000, Office XP, or Office 2003, tap **Menu > Options...** (with no workbook opened), and then change **Template for new workbook** to **Blank 97-2003 Workbook**.

Bluetooth

◆ *Using Bluetooth (page 102)*

Your device features built-in Bluetooth technology, allowing you to share information more easily than ever before. Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

This section shows you how to use Bluetooth on your device, including turning Bluetooth on and off, connecting to another Bluetooth device such as a Bluetooth stereo headset, and more.

Using Bluetooth

Bluetooth Modes

Bluetooth on your device has three different modes:

- **On.** Bluetooth is turned on. Your device can detect other Bluetooth-enabled devices within range, but cannot be detected by other Bluetooth-enabled devices.
- **Visible.** Bluetooth is turned on, and all other Bluetooth-enabled devices within range can detect your device.
- **Off.** Bluetooth is turned off. In this mode, you can neither send nor receive information using Bluetooth.

Notes

- By default, Bluetooth is turned off. If you turn it on and then turn off your device, Bluetooth also turns off. When you turn on your device again, Bluetooth automatically turns on.
- Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals.

Turning Bluetooth On and Making Your Device Visible

The first time you use Bluetooth, follow the steps below to turn Bluetooth on and make your device visible to other Bluetooth-enabled devices.

1. Tap **Start > Settings > Communications** and then tap **Bluetooth**.
2. When prompted to turn on Bluetooth, tap **Yes**.
3. Tap the **Settings** tab (), and then tap **Not Discoverable**.
4. Tap the drop-down menu and then select **Always Visible**.

Note

If you select **Visible for 60 seconds**, Bluetooth visibility will turn off automatically when the time elapses and your device has not yet connected to another Bluetooth device.

5. Tap **Done**. The  icon then appears in the title bar to indicate that your device is in visible mode.

To easily switch Bluetooth off or back on, tap **Start > Settings > Communications** to open the Comm Manager and then tap Bluetooth's OFF/ON slider. Your device remembers whether visible mode was previously enabled or disabled. If you did not disable visible mode, switching Bluetooth on in the Comm Manager also puts your device in visible mode automatically. For more information about using the Comm Manager, see "Comm Manager" on page 97.

Bluetooth Partnerships

A Bluetooth partnership is a relationship that you create between your device and another Bluetooth-enabled device in order to exchange information in a secure manner.

Creating a Bluetooth Partnership

1. Tap **Start > Settings > Communications** and then tap **Bluetooth**.
2. On the **Settings** tab (), tap **Add a device**.
3. Tap a Bluetooth device to connect with.
4. Specify a passcode, which can be 1 up to 16 characters, to establish a secure connection, and then tap **OK**.

Note

Your device uses Bluetooth 2.1 with Secure Simple Pairing feature. If the other Bluetooth device you are pairing with also supports the same feature, the passcode will be automatically created and displayed on both devices. Both you and other party simply need to verify that the passcode is the same and tap Yes to establish the partnership.

5. After the receiving party accepts the partnership, the Bluetooth device name is shown on the screen, including all Bluetooth services that you can use with it. Select the check boxes of the Bluetooth services you want to use, and then tap **Done**.
6. If you selected to use the Bluetooth Serial Port service of the paired device, select a local serial port to assign for the paired device, and then tap **Continue**.

The connected Bluetooth device now appears in the **Devices** tab ().

Tip

*Tap **Properties** to change the paired device name. Tap **Menu** > **Update** to update the list of services that you can use with the paired device.*

Creating a Bluetooth partnership between two devices is a one-time process. Once a partnership is created, the devices can recognize the partnership and exchange information without entering a passcode again.

Accepting a Bluetooth Partnership

1. Ensure that Bluetooth is turned on and in visible mode.
2. When prompted, enter or accept the passcode (the same passcode from the device requesting the partnership) to establish a secure connection.
3. Tap **OK**. The paired device now appears in the **Devices** tab (). You can now exchange information with the paired device.

Tip

*To delete a Bluetooth partnership, select the device's name on the **Devices** tab, and then tap **Menu** > **Delete**. When prompted to confirm, tap **Yes**.*

Connecting a Bluetooth Hands-free or Stereo Headset

For hands-free phone conversations, you can use a Bluetooth hands-free headset such as a car kit with your device. Your device also supports A2DP (Advanced Audio Distribution Profile) which allows you to use a Bluetooth stereo headset for hands-free phone conversations and for listening to stereo music.

To connect a Bluetooth hands-free or stereo headset:


1. Make sure that both your device and the Bluetooth headset are turned on and within range, and that the headset is visible. Refer to the manufacturer's documentation to find out how to set the headset in visible mode.
2. Tap **Start** > **Settings** > **Communications** and then tap **Bluetooth**.

- On the **Settings** tab (), tap **Add a device**.
- Select the hands-free or stereo headset device in the list, and then tap **Select**. Your device will automatically connect with the Bluetooth headset.

Note *Your device will automatically try one of the preconfigured passcodes (0000, 8888) to pair with the Bluetooth headset. If this fails, you have to manually enter the passcode delivered with your headset.*

- When connected, the hands-free or stereo headset device is shown on the screen, including the Bluetooth services (Hands-free and Stereo Audio) that you can use with it. Make sure these services are selected, and then tap **Done**.

The paired headset now appears in the **Devices** tab ().

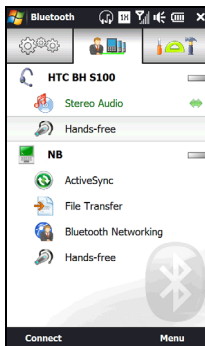

The double arrowhead () that is displayed to the right of a service indicates that the service is connected with your headset. If you turn off your headset, the double arrowhead disappears to indicate that the service has been disconnected. Next time you turn on and use your headset again, you need to manually reconnect each service. Tap a service and then tap **Connect**.

Sending and Receiving Information Using Bluetooth

You can send the following types of information from your device to your computer or to another Bluetooth-enabled device: Outlook email messages, contacts, tasks, notes, calendar items, audio files, ring tones, Images, and videos.

Note

If your computer does not have built-in Bluetooth capability, you need to connect and use a Bluetooth adapter or dongle on your computer.

To send information from your device to a computer (Windows Vista or Windows XP SP2 [or higher] only):


1. On your computer, open **Bluetooth Devices** from the Control Panel, click the **Options** tab on the **Bluetooth Devices** window, and then do the following.
 - In **Windows Vista**, select **Allow Bluetooth devices to find this computer**.
 - In **Windows XP**, select **Turn discovery on** and **Allow Bluetooth devices to connect to this computer**.

Note

If the Bluetooth adapter or dongle on your computer was installed using a third-party driver, open the Bluetooth software that came with the Bluetooth adapter or dongle and enable the adapter or dongle to be discovered by other devices. Refer to the Bluetooth adapter's documentation for more information.

2. In the **Options** tab of **Bluetooth Devices** on your computer, select **Show the Bluetooth icon in the notification area**.
3. To enable your computer to receive files or information through Bluetooth, right-click the Bluetooth icon  in the notification area at the bottom right corner of your computer screen and select **Receive a File**. Your computer is now ready to receive files or information.
4. Turn on Bluetooth on your device, and make your device visible. For information about this, see "Turning Bluetooth On and Making Your Device Visible" on page 102
5. Create a Bluetooth partnership between your device and computer. For instructions, see "Creating a Bluetooth Partnership" on page 103.

6. On your device's Bluetooth screen, tap the **Accessories** tab (), and then tap **BT Send Object**.
7. To switch between the types of information that can be sent, tap  or . Select the check boxes of items you want to send.

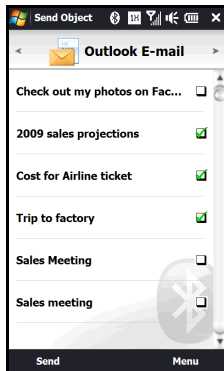

8. Tap **Send**.
9. Select the Bluetooth device to which you want to send the items, and then tap **Select**.
10. If you sent Outlook Email messages, calendar items, tasks, or contacts to your computer and they are not automatically added to Outlook, select **File > Import and Export** in Outlook to import them.

To send information to a Bluetooth-enabled device such as another Windows Mobile-powered device, follow steps 4 to 9 in the above procedure.

Tips

The default folder on your computer where beamed items are stored may be *C:\Documents and Settings\your_username\My Documents* in Windows XP or *C:\Users\your_username\My Documents* in Windows Vista.

To send a file to another Bluetooth-enabled device:

1. Tap **Start > File Explorer**.
2. Navigate to the folder that contains the file you want to send.
3. Tap and hold the desired file, and then tap **Send via Bluetooth**.
4. Tap the name of the Bluetooth device to which you want to send the file.

To receive information from another Bluetooth-enabled device:

1. When you receive information such as calendar items, tasks, or contacts sent from another Bluetooth-enabled device, tap **Accept**.
2. After your device has finished saving the information, tap **Done**.

To change the folder for saving received files:

Files that you receive from another Bluetooth-enabled device are saved in \My Documents on your device. You can change the destination folder for saving received files:

1. Tap **Start > Settings > Communications** and then tap **Bluetooth**.
2. On the **Settings** tab (), tap **Advanced**.
3. Scroll down and then tap **File Transfer**.
4. Tap **Search** ().
5. Select the new destination folder, and then tap **Select**.

Tip

To save received files on your storage card when it is inserted on your device, select **Save files to storage card when present**. Files will be saved on the root folder of your storage card.

6. Tap **Done**.

Section 2H

Experiencing Multimedia

- ◆ *Taking Photos and Videos (page 110)*
- ◆ *Viewing Photos and Videos (page 122)*

Your device's multimedia features give you the ability to capture full color digital pictures and videos, view your pictures and videos, and more. This section explains how to use these multimedia features.

Taking Photos and Videos

Use your device's built-in camera to take photos and record video clips.

To launch the camera:

- From the Home screen, slide to the **Photos and Videos** tab, and then tap the camera icon ().

The screen orientation automatically switches to landscape mode.

Tip

You can also tap **Start > All Programs > Camera** to launch the camera.

To turn off the camera:

- Tap  and then tap  on the camera screen.


Capture Modes

The camera on your device allows you to capture pictures and video clips by using various built-in modes that provide you flexibility in taking your shots.

To change the capture mode:

- Tap  and then tap the middle icon at the bottom of the screen. (The icon displayed is based on the current capture mode.)

The Capture Mode menu then opens. Tap the capture mode you want to use.

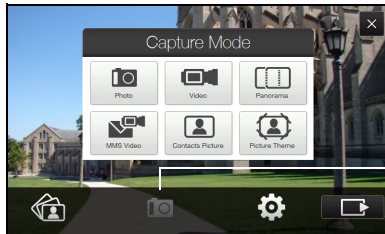

Current Capture
Mode


You can select from the following capture modes:

<i>Icon</i>	<i>Capture mode</i>
	Photo. Captures standard still images.
	Video. Captures video clips, with or without accompanying audio.
	Panorama. Captures a sequence of still images continuously in one direction, and allows stitching of all the images to create a panoramic view of a scenery.
	MMS Video. Captures video clips suitable for sending via video messaging.
	Contacts Picture. Captures a still image and gives you the option to immediately assign it as a Photo ID for a contact.
	Picture Theme. Captures still images and places them within frames.

Zooming

Before capturing a photo or a video clip, you can zoom in or out on your subject.

To zoom in or out, slide your finger up or down on the Zoom bar while holding the device sideways. While you are sliding your finger on the Zoom bar, the level of zoom is shown on the zoom control bar at the left side of e screen.

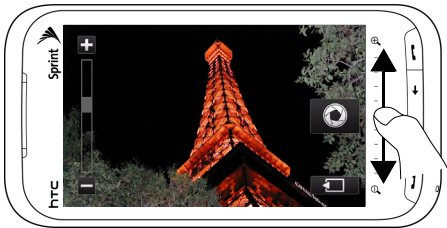

The camera zoom range for a photo or a video clip depends on the capture mode and resolution. Refer to the resolution and zoom range table for more information.

Capture mode	Resolution		Zoom range
Photo	3M	Normal: 2048 x 1536 Widescreen: 2048 x 1216	1.0x to 1.6x
	2M	Normal: 1600 x 1200 Widescreen: 1600 x 960	1.0x to 1.6x
	1M	Normal: 1280 x 960 Widescreen: 1280 x 768	1.0x to 1.6x
	L	Normal: 640 x 480 Widescreen: 640 x 384	1.0x to 1.6x
	M	Normal: 320 x 240 Widescreen: 320 x 192	1.0x to 3.2x

<i>Capture mode</i>	<i>Resolution</i>		<i>Zoom range</i>
Video	CIF	352 x 288	1x and 1.6x
	M	176 x 144	1x and 1.6x
	S	128 x 96	1x and 1.6x
MMS Video	M	176 x 144	1x and 1.6x
	S	128 x 96	1x and 1.6x
Panorama	L	640 x 480	1x and 1.6x
	M	320 x 240	1.0x to 3.2x
Contacts Picture	M	272 x 272	1.0x to 3.2x
Picture Theme	Determined by the current template		Depends on the size of the selected template

Using Focus

Use the Auto Focus or Touch Focus function to capture sharp and crisp photos and videos.

Auto Focus

Auto Focus sets the focus on the object at the center of the screen and is available for all capture modes. By default, touching the **Virtual Camera** button () activates Auto Focus and a flashing white bracket () appears in the center of the screen. When focus is set, the bracket changes to a steady green bracket (), and then the Camera takes the photo or starts to record the video.

Touch Focus

Touch Focus allows you to focus on a particular area of the screen. Touch Focus is enabled by default and is only available when you are using Photo or Contacts Picture mode.

Note To disable Touch Focus, see “Settings on the Advanced Options Screen” on page 119.

To use Touch Focus:

1. Set the Camera to Photo or Contacts Picture mode.
2. Touch the area on the screen that you want to focus. The Touch Focus indicator () positions itself on the selected area.

Note

If you tap outside the effective focus area, a white box appears to indicate the area where you can use Touch Focus.

3. Touch to activate Auto Focus on the selected area and take the photo. See “Auto Focus” on page 113 for more information.
4. To move the Touch Focus indicator back to the center of the screen, tap .

Capturing Photo or Recording Video

By default, the Camera automatically takes the shot or starts capturing video after you have set the focus.


- In **Photo** or **Contacts Picture** mode, touch the **Virtual Camera** button () to activate Auto Focus. When focus is set, the Camera automatically takes the shot.
- In **Video** or **MMS Video** mode, touch the **Virtual Camera** button () to activate Auto Focus. When focus is set, the Camera automatically starts recording. Touch the **Virtual Camera** button again to stop recording.
- In **Picture Theme** or **Panorama** mode, touch the **Virtual Camera** button () to activate Auto Focus. When focus is set, the Camera automatically takes the first shot. Do the same for each shot you need to take.

After capturing a photo or recording video, the Review screen is displayed. Tap one of the following icons at the bottom of the screen:

Icon	Function
	Back. Return to the live camera screen.
	View. View the captured image or video in the Album program.
	Delete. Delete the captured image or video.
	Send. Send the captured image via email or picture messaging. You can also send a captured video via email or video messaging.
	Assign to Contact. After capturing in Contacts Picture mode, tap this icon to assign the photo to a selected contact.

Onscreen Controls and Indicators

Tap to display onscreen controls and indicators.

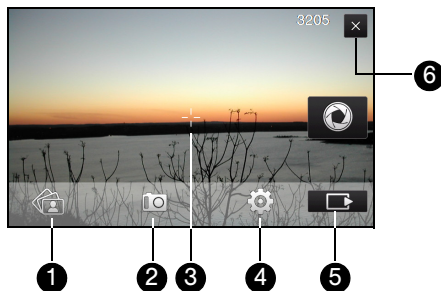



1. **Album.** Open the Album program to view your captured photos and video clips. See “Viewing Photos and Videos” on page 122 for details.
2. **Capture mode.** See “Capture Modes” on page 110 for details.
3. **Touch Focus / Auto Focus indicator.** See “Using Focus” on page 113 for details.
4. **Menu.** See “Menu Panel” on page 117 for details.
5. **Remaining information indicator.** In Photo, Contacts Picture, Picture Theme, and Panorama modes, this shows the remaining number of pictures you can take based on the current settings. In Video and MMS Video modes, this shows the remaining duration that can be recorded. While recording video, this shows the recorded duration.
6. **Show/Hide icon.** Show or hide the onscreen controls and indicators.
7. **Template Selector icon.** In Picture Theme mode, tap to select another frame.
8. **Progress indicator.** In Picture Theme and Panorama modes, this shows the number of consecutive shots.

Menu Panel

The Menu panel lets you quickly adjust common camera settings and provides access to more advanced camera settings. To open the Menu panel, tap  on the Camera screen, and then tap . To adjust a setting, repeatedly tap a button, for instance, **White Balance**, to cycle through the available settings.


Note The available Menu Panel buttons depend on the selected capture mode.

Icon	Function
	Select the white balance setting according to the current lighting condition to capture colors more accurately.
	Open the Brightness bar and adjust the brightness level. Tap outside the Brightness bar to apply the change.
	Set the ISO level manually to 100 , 200 , 400 , or 800 , or set it back to AUTO . Higher ISO numbers are better for taking pictures in low light conditions. When set to AUTO , the camera automatically adjusts the ISO level up to 400 only.
	Set the self-timer to 2 seconds , 10 seconds , or Off when in Photo or Contacts Picture mode.
	Open the advanced camera settings. See “Setting Advanced Options” (below) for details.

Setting Advanced Options

Tap **Advanced** on the Menu panel to open the Advanced screen where you can configure settings for your selected capture mode.

Navigating the Advanced Screen

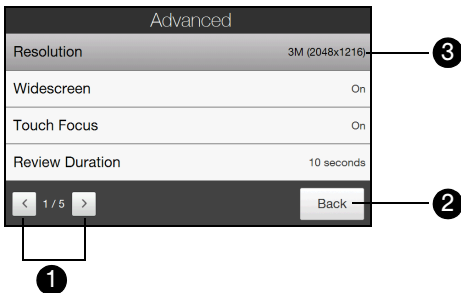


1. Tap the left and right arrows to go through the different pages of settings.
2. Tap **Back** to go back to the live camera screen.
3. Tap an item to change the setting.

Settings on the Advanced Options Screen

- **Resolution.** Select the resolution to use. See “Zooming” on page 112, and refer to the resolution and zoom range table for the available resolutions.
- **Widescreen** (Photo mode). When set to **On** (default), you can use the entire screen as viewfinder. See “Zooming” on page 112, and refer to the resolution and zoom range table for the available widescreen resolutions.
- **Touch Focus** (Photo and Contacts Picture modes). Enables or disables the Touch Focus function. Touch Focus is **On** by default. See “Touch Focus” on page 113 for details.
- **Review Duration.** Set a time length for displaying the captured image or video on the Review screen. Select **No Limit** if you do not want to impose a time limit. Select **No Review** to immediately return to the live camera screen after capturing and saving.
- **Quality.** Select the image quality level for captured photos. Choose from **Basic**, **Normal**, **Fine**, and **Super Fine**.
- **Capture Format** (Video and MMS Video modes). Select the file format for recorded videos.
- **Time Stamp** (Photo mode). Include the date and time on captured photos.
- **Storage.** Select where to save photos and videos. You can either save the files to the main memory, or to a storage card if available.
- **Keep Backlight.** Turn the backlight on or off. This overrides your device backlight settings while you are using the camera.
- **Shutter Sound.** Choose whether you want the camera to make a shutter sound when you press the **Virtual Camera** button.

- **Image Properties.** Adjust properties, such as *Contrast*, *Saturation*, and *Sharpness*.

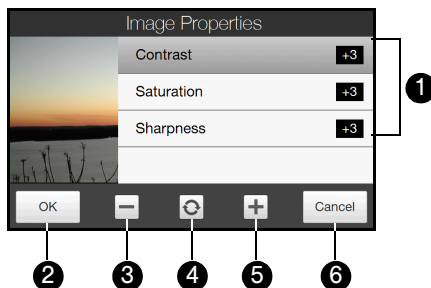

1. Tap a property to adjust.
 2. Save the settings.
 3. Decrease the value.
 4. Reset all properties to default.
 5. Increase the value.
 6. Close the Image Properties screen without applying and saving the changes.
- **Effect.** Choose a special effect such as Grayscale or Sepia to apply to your photos or video clips.
 - **Metering Mode.** Select a metering mode to allow the camera to measure the amount of light and calculate the best-fit exposure value before capturing. Choose either **Center Area** to measure light using the center area of the subject, or **Average** to measure light using the area around the subject.

- **Prefix.** The file name of a newly captured photo or video is set to “IMAGE” or “VIDEO” followed by a sequential number, for example: IMAGE_001.jpg. You can also choose the current date or date and time as the file name prefix.

Note

You can not change the file name prefix when saving captured photos to a storage card. Captured photos are named using the convention IMAGnnnn.jpg (where 'nnnn' is the counter), and are saved to the \DCIM\100MEDIA folder on the storage card.

- **Counter.** Reset the file numbering back to 1.
- **Flicker Adjustment.** When taking indoor shots under fluorescent lighting, keep this setting on **Auto** or change it to the proper frequency (50Hz or 60Hz) of the power in your country to reduce flicker (60Hz throughout the United States).
- **Grid** (Photo mode). Show a grid on the screen so you can easily frame and center your subjects.
- **Record with Audio** (Video or MMS Video mode). Select **On** to record videos with audio, or **Off** to record videos without audio.
- **Recording Limit** (Video mode). Set the maximum duration or file size for recording video.
- **Template** (Picture Theme mode). Select a frame.
- **Template Folder** (Picture Theme mode). By default, templates are stored in the \My Documents\Templates folder on the device's **Main Memory**. If you transferred some templates to a storage card, set this option to **Main + Card**.
- **Show Reminder** (Contacts Picture mode). Select **On** if you want the Camera to prompt you to assign the captured picture to a contact.
- **Direction** (Panorama mode). Choose the direction in which to stitch the photos in a panorama.
- **Stitch Count** (Panorama mode). Select the number of shots to take and stitch into a panorama.

Viewing Photos and Videos

Use *Album* to view photos and videos on your device. Album also offers a host of features that allow you to play a photo slideshow, share photos and videos, and more.

Launching Album

To open Album:

- From the Home screen, slide to the *Photos and Videos* tab and tap *Album*.

– or –

Tap *Start > All Programs > Album*.


– or –

On the Camera screen, tap .

Note

When you open Album from the Camera, the screen orientation of Album is switched to landscape mode.

The Album Screen

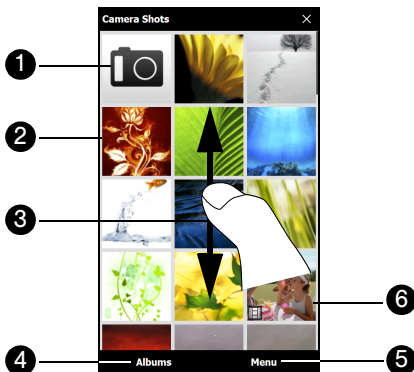


1. Tap the **Camera** icon when you want to use Camera.
2. Tap an image to view it in full-screen mode. See “Viewing a Photo” (below) for details.
3. Browse through the available photos and videos by sliding your finger upward or downward.
4. Tap **Albums** to open a selection menu and choose another album to view. The contents of the album are then displayed on the main Album screen.
5. Tap **Menu** to open a selection menu and choose whether to play a photo slideshow, delete photos or video clips from the current album, and more.
6. Tap a video file (files with the  icon) to play back the video file. See “Playing Back Video” on page 126 for details.

Note *Animated GIF and video files will not be played back in a slideshow. See “Viewing a Photo Slideshow” on page 125 for details.*

Viewing a Photo

While viewing a photo in full-screen mode, tap the screen to open the onscreen menu.

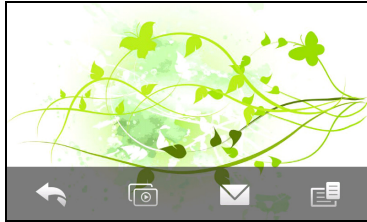

Icon	Function
	Back. Return to the main Album screen, <i>Photos and Videos</i> tab, or the Camera screen.
	Slideshow. Start a photo slideshow.
	Send. Send the photo using one of the Messaging accounts.
	Menu. Open a menu where you can save the screen image as a photo for a contact, save the current image as a new file, delete the image, and view file properties

Tip

You can delete multiple files at once by selecting **Menu > Delete Items** on the main Album screen and then selecting the files to delete.

To view the next or previous photo in the album:

When you are holding your device upright, view the next or previous image by swiping your finger up or down the screen.

When you turn your device sideways, view the next or previous photo by swiping your finger left or right across the screen.

To zoom in or out on an photo:


Double-tap the area on the photo you want to zoom in on. To zoom out, double-tap the screen again.

Tips

- Use the Zoom bar to zoom in on the center of the photo. Slide your finger to the right of the Zoom bar to zoom in. Slide to the left of the Zoom bar to zoom out.
- When you zoom in on a photo, tap and hold the screen to pan and view other areas of the photo. When you zoom in on a photo, tap the screen, tap  and then select **Save Screen Image** to save the zoomed in photo as a new file.

Viewing a Photo Slideshow

To start a photo slideshow, tap the screen, and then tap . While viewing the slideshow, tap the screen to show playback controls.

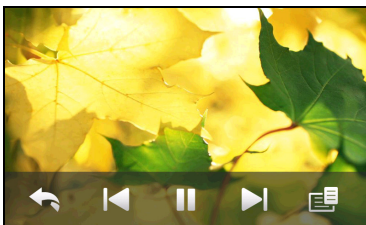


<i>Icon</i>	<i>Function</i>
	Back. Return to the main Album screen or the <i>Photos and Videos</i> tab.
	Previous. Go back to the previous photo.
	Play/Pause. Play or pause the slideshow.
	Next. Go to the next photo.
	Menu. Open a menu where you can change slideshow options, such as set the transition effect to use, time per slide, and orientation of the images.

Tip

*If the photos are in your favorite album, you can start the slideshow from the **Photos and Videos** tab on the Home screen. On the **Photos and Videos** tab, tap **Slideshow**.*

Playing Back Video

While playing back video, tap the screen to show the playback controls.

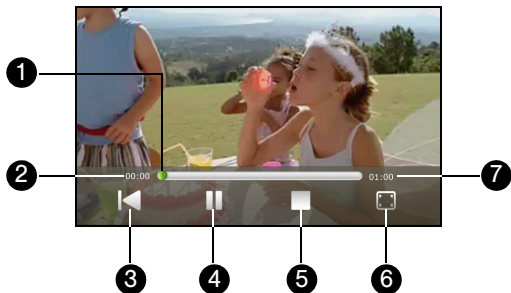

1. Drag on the **Slider Bar** to go forward or backward in the video.
2. Shows the elapsed time.
3. Tap the **Rewind** icon to go back to the beginning of the video.
4. Tap the **Play/Pause** icon to play or pause the video playback.
5. Tap the **Stop** icon to stop playing the video.
6. Change the video display mode to **Fit & Crop** (default), **Best Fit**, or **Stretch**.
7. Shows the total duration.

Tip

*If the video is in your favorite album, you can start the video playback from the **Photos and Videos** tab on the Home screen. On the **Photos and Videos** tab, tap **Play**.*

Closing Album

Close Album by tapping  on the main Album screen. When viewing files in full-screen mode, tap the screen to show the onscreen menu or playback controls and then tap  to go back to the main Album screen.

Managing Your Device

- ◆ *Copying and Managing Files (page 129)*
- ◆ *Changing Basic Settings (page 130)*
- ◆ *Resetting Your Device (page 132)*

You can customize your device to sound, look, and operate just the way you want it to. This section describes how to customize your device to best suit your needs.

Copying and Managing Files

You can copy files between your device and computer, or copy files to the microSD card of your device. You can also efficiently manage your files and folders using File Explorer.

To copy files using Windows Mobile Device Center or ActiveSync:

1. Connect your device to the computer.
2. Click **File Management > Browse the contents of your device** in Windows Mobile Device Center on your computer, or click **Explore** in ActiveSync on your computer. This opens Windows Explorer on your computer and displays the contents of your device.
3. To copy a file from your device to your computer, browse the contents of your device, right-click the file you want to copy, and then click **Copy**.

Right-click a folder on your computer, and then click **Paste**.

4. To copy a file from your computer to your device, browse the folders on your computer, right-click the file you want to copy, and then click **Copy**.

Right-click a folder on your device, and then click **Paste**.

To manage files on your device using File Explorer:

File Explorer lets you browse and manage the contents of your device. The root folder on the device is named **My Device**, and contains the following folders: My Documents, Program Files, Windows, and more.

1. Tap **Start > File Explorer** and then tap a folder or file to open it.
2. To return to an upper level folder, tap **Up**.
3. To quickly delete, rename, or copy a file, tap and hold the file, and then choose the desired operation on the shortcut menu. To copy or delete multiple files, tap and drag over the desired files to select, tap and hold the selection, and then choose the desired operation on the shortcut menu.

Changing Basic Settings

Display Settings

To manually adjust the screen brightness:

1. Tap **Start > Settings > All Settings**.
2. On the **System** tab, tap **Power > Backlight** tab.
3. Clear the **Auto adjust backlight** check box.
4. Adjust the brightness by dragging the slider under **On battery power** and **On external power**.

To set the backlight to dim after a time delay:

1. Tap **Start > Settings > All Settings**.
2. On the **System** tab, tap **Power > Advanced** tab.
3. In **On battery power** and **On external power**, select the **Turn off backlight if device is not used for** check box, and then specify the time delay.

To increase or decrease the size of text on the screen:

1. Tap **Start > Settings > All Settings**.
2. On the **System** tab, tap **Screen > Text Size** tab.
3. Move the slider to increase or decrease the text size.

To recalibrate the touch screen:

The device touch screen is calibrated before shipment. Recalibrate the touch screen if it does not accurately respond to screen taps.

1. While the device is on, press and hold the **Volume Up** and **Volume Down** buttons at the same time, and then tap the screen with the stylus to open the align screen.
2. Follow the onscreen instructions to complete the calibration.

Device Name

The device name is used to identify your device when synchronizing with a computer, connecting to a network, or restoring information from a backup.

Note If you synchronize multiple devices with the same computer, each device must have a unique name.

To change the device name:

1. Tap **Start > Settings > All Settings**.
2. On the **System** tab, tap **About > Device ID** tab.
3. Enter the device name.

Notes

- The device name must begin with a letter, consist of letters from **A** to **Z**, numbers from **0** to **9**, and cannot contain spaces. Use the underscore character to separate words.
- If you enroll your device to your company's domain, the device name will be changed to be the same as the one used to enroll the device.

Sound Settings

To change the ring type and ring tone :

1. Tap **Start > Settings > Sound**.
2. Scroll down and tap **Ring Type**. Select the ring type you want to use and then tap **Done**.
3. Tap **Ringtone**, select the ringtone you want to use, and then tap **Done**.

Tips

- You can use ***.wav**, ***.mid**, ***.mp3**, ***.wma**, or other types of sound files that you downloaded from the Internet or copied from your computer as ring tones. For a complete list of supported audio file formats for ring tones.
- To use your sound files as ring tones, copy them first to the **/My Documents/My Ringtones** folder on your device, and then select the sound from the **Ring tone** list of your device. For more information about copying files, see "Copying and Managing Files" on page 129.

To choose how to be notified about events or actions:

1. Tap **Start > Settings > Sound**. and then tap **Advanced**.
2. On the **Sounds** tab, choose how you want to be notified by selecting the appropriate check boxes.
3. On the **Notifications** tab, in **Event**, tap an event name and choose how you want to be notified by selecting the appropriate check boxes. You can choose from several options, such as a special sound, a message, or a flashing light.

Tips

- *Turning off sound notifications helps conserve battery power.*
- *The types of notifications that can be enabled depend on the event. For instance, only **Play sound** and **Vibrate** notifications can be enabled if it is an ActiveSync event.*
- *Flashing light notification is either enabled or disabled, depending on the type of event. This setting is preconfigured and cannot be changed.*

Resetting Your Device


Soft Reset

Occasionally, you may need to reset your device. A soft (or normal) reset of your device clears all active program memory and shuts down all active programs. This can be useful when your device is running slower than normal, or a program is not performing properly. A soft reset is also necessary after the installation of some programs. If a soft reset is performed when programs are running, unsaved work will be lost.

To perform a soft reset:

1. Pull out the stylus.
2. Remove the back cover. For instructions, see step 1 in “Installing the Battery” on page 3.

3. Use the stylus tip to press the **Reset** button located at the back of the device.

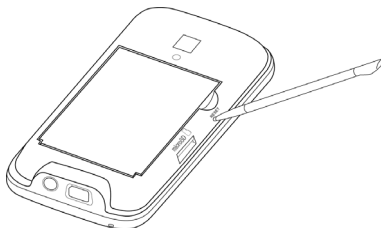

Your device restarts and displays the Home screen.

4. Replace the back cover and insert the stylus back into its compartment.

Hard Reset

You can also perform a hard reset (also known as a full reset). A hard reset should only be performed if a normal reset does not solve a system problem. After a hard reset, the device is restored to its default settings—the way it was when you first purchased it and turned it on. Any programs you installed, data you entered, and settings you customized on your device will be lost. Only Windows Mobile software and other preinstalled programs will remain.

Warning

Your device will revert to factory default settings. Make sure that any additional installed programs or user data have been backed up before you perform a hard reset.

Important

If Encrypt files when placed on a storage card is enabled, back up all files from the microSD card before using Clear Storage, hard reset, or updating the ROM system software. Otherwise you will no longer be able to access the encrypted files on the microSD card. Use ActiveSync or Windows Mobile Device Center to transfer files between your microSD card and computer. After the procedure, copy those files back to the microSD card.

To perform a hard reset:

1. With the device turned off, press and hold the **Talk** and **End** keys first, and then press and hold the **Power** button until you see the following message on the screen:

This operation will delete
all your personal data,
and reset all settings to
manufacturer default.
Press VolUp to restore
manufacturer default, or
press other keys to cancel.

2. Release the **Talk** key, **End** key, and **Power** button.
3. Press the **Volume Up** button to restore the device to factory default status.
– or –
Press any other front panel key to cancel the hard reset and just power on the device.

Clearing Storage

If you can access the device settings, you can use Clear Storage to reset your device back to factory default settings.

1. Tap **Start > Settings > All Settings**.
2. On the **System** tab, tap **Clear Storage**.
3. Enter “1234” and then tap **Yes**.

Section 3
Sprint Service



Sprint Service Features: The Basics

- ◆ *Voicemail (page 137)*
- ◆ *Text Messaging (SMS) (page 143)*
- ◆ *Using Caller ID (page 145)*
- ◆ *Call Waiting (page 145)*
- ◆ *Call Forwarding (page 146)*
- ◆ *Making a Three-Way Call (page 147)*
- ◆ *Roaming (page 148)*

Now that you've explored your device's fundamentals, it's time to learn about the calling features that enhance your Sprint service. This section outlines your basic Sprint service features.

Voicemail

Setting Up Your Voicemail

- For instructions on how to set up your voicemail, see “Setting Up Your Voicemail” on page 6.

Voicemail Notification

There are several ways your device alerts you to a new voicemail message:

- By displaying the voicemail icon () in the title bar and a pop-up message.
- By displaying the number of voicemail messages on the TouchFLO 3D Home tab.
- By sounding the assigned alert or ringer type.

New Voicemail Message Alerts

When you receive a new voice message, your device alerts you that you have voicemail.

To call your voicemail:

- The number to call for new voicemail is shown on the TouchFLO 3D Home tab. Tap it to call your voicemail.

— or —

Press the **Talk** key to display the Phone screen, and then tap and hold  on the Phone keypad.

Retrieving Your Voicemail Messages

You can listen to voice messages directly from your device or from any other touch-tone phone.

Note

When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, press  and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint Network.

Your device accepts messages even when it is turned off. However, you are notified of new messages only when your device is turned on and you are in a Sprint service area.

Using One-Touch Message Access

- ▶ Press the **Talk** key to display the Phone screen, and then tap and hold  on the Phone keypad.

Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press *.
3. Enter your passcode.

Tip

When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press  during the header.

Voicemail Key Guide

Below are some Phone keypad functions that you can use while listening to voicemail messages. For further details and menu options, see “Voicemail Menu Key” on page 141.

 Date/Time	 Send Reply	 Advance
 Replay	 Rewind	 Forward
 Erase	 Return Call	 Save
 Cancel	 Help	 Skip

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint Voicemail user.

1. After listening to a voice message, tap  on the Phone keypad.
2. Follow the voice prompts to record and send your reply.

Using Expert Mode

Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

1. Tap and hold  to access your voicemail. (If your voicemail box contains any new messages, tap  to access the main voicemail menu.)
2. Tap  to change your Personal Options, following the system prompts.
3. Tap  for Expert Mode.
4. Tap  to turn Expert Mode on or off.

Voicemail-to-Voicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint Voicemail users.

1. After listening to a voice message, tap  on the Phone keypad.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Extended Absence Greeting

When your device is turned off or you are off the Nationwide Sprint Network for an extended period, your device can play this greeting instead of your normal personal greeting.

1. From the main voicemail menu, tap  on the Phone keypad for Personal Options.
2. Tap  for Greetings.
3. Tap  to record an Extended Absence Greeting.

Voicemail Menu Key

Following the prompts on the voicemail system, you can use the keypad on the Phone screen to navigate through the voicemail menu. The following list outlines the voicemail menu structure.

	Listen
	Date and Time Information
	Send a Reply Message
	Advance a Few Seconds
	Replay
	Rewind a Few Seconds
	Forward Message
	Erase
	Return This Call
	Save
	Options
	Skip to the Next Message
	Send a Message

3
DEF

Personal Options

1
☞

Settings

1
☞

Skip Passcode

2
ABC

Autoplay

3
DEF

Play Back Date, Time, and Caller Info.

4
GHI

Change Passcode

5
JKL

Group Distribution Lists

6
MNO

Numeric Paging

★

Return to Personal Options Menu

2
ABC

Greetings

1
☞

Personal Greetings

2
ABC

Name Announcement

3
DEF

Extended Absence Greeting

★

Return to Personal Options Menu

3
DEF

Expert Mode

8
TUV

Place a Call

★

Exit

Text Messaging (SMS)

With Text Messaging (SMS), you can send and receive instant text messages between your device and another messaging-ready device. When you receive a new text message, it will notify you by sounding the assigned alert or ringer type and then displaying the SMS icon () in the title bar.

Text Messaging includes a variety of preset messages, such as “I’m running late,” “I’ll be right there,” and more, which make composing messages fast and easy. You can use your device to customize your own preset messages.

Creating a New Text Message

From the TouchFLO 3D Home Screen

1. From the Home screen, slide to the **Messages** tab.
2. Touch the **New** icon () on the upper right side of the screen.

Tip

To send a text message to a favorite contact, first tap the photo of the desired contact in the **People** tab to open his or her contact card and then touch **Send Message**. For more information about working with favorite contacts, see “People” on page 47.

From the Messaging Screen

1. Tap **Start > All Programs > Messaging > SMS / MMS**.
2. Tap **Menu > New > SMS**.

From the Contacts List

1. From the Home screen, slide to the **People** tab and then tap **All Contacts**.
2. Tap the contact’s name to open his or her contact card.
3. Tap **Send Message**.

From Windows Mobile Contacts

1. Tap **Start > All Programs > Contacts**.
2. Tap the contact's name to open his or her contact card.
3. Tap **Send text message**.

Composing and Sending a Text Message

After creating a new text message, follow the steps below to enter your message and then send it.

1. To add recipients, enter their mobile phone numbers in the **To** field, separating them with a semicolon. You can also tap **To** or tap **Menu > Add Recipient** to add mobile phone numbers from Contacts.
2. Enter your message.

Tip

To choose from preset messages, tap **Menu > My Text** and tap a desired message. To check the spelling, tap **Menu > Spell Check**.

3. Tap **Send**.

For more information about entering text and symbols, see “Entering Text” on page 31.

Copying and Pasting Text

You can copy words or lines of text from a received message and then paste them to a new text message.

To copy and paste text to your new text message:

1. Open the message where you want to copy text from.
2. Tap **Menu > Select Text**.
3. Tap on the starting point where you want to begin copying, and then drag your finger to select the words or lines of text.

4. After selecting the text, tap and hold on the selected text, and then tap **Copy**.
5. Create a new message. In the body of the message, tap and hold on the position where you want to paste the text, and then tap **Paste**.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call while you are within the Nationwide Sprint Network or a CDMA roaming network, follow these steps.

1. Press the **Talk** key to display the Phone screen.
2. Tap    on the Phone keypad.
3. Enter the number you want to call.
4. Press the **Talk** key to place the call.

To permanently block your number, call Sprint Customer Service.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Press the **Talk** key. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press the **Talk** key again.

To temporarily disable Call Waiting:

- For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your device when Call Forwarding is activated.

Notes

- You cannot forward your calls to an international number.
- You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

1. On the Phone keypad, tap   .
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press the **Talk** key. (You will see a message and hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. On the Phone keypad, tap    .
2. Press the **Talk** key. (You will see a message and hear a tone to confirm the deactivation.)

Making a Three-Way Call

With three-way calling, you can talk to two people at the same time. When using three-way calling on the Nationwide Sprint Network, the normal airtime rates will be charged for each of the two calls. Roaming charges apply when you are roaming off the Nationwide Sprint Network.

1. Place the first call or accept an incoming call.
2. To put the first call on hold and display the phone keypad so you can make the second call, you can do one of the following:
 - Press the **Talk** key.
 - On the Phone screen, tap  .
 - On the Phone screen, tap  .
3. Tap the phone keypad keys to enter the second phone number, and then press the **Talk** key to make the second call.
4. When you're connected to the second party, do one of the following to begin the three-way call:
 - Press the **Talk** key.
 - On the Phone screen, tap  .
 - On the Phone screen, tap  .

If one of the parties in the current call hangs up, you and the remaining caller still remain connected.

To end the three-way call, press the **End** key or tap  . All other callers will be disconnected.

Roaming

Roaming is the ability to make and receive calls, send and receive text messages, or use data services when you are off the Nationwide Sprint Network. Your device works anywhere on the Nationwide Sprint Network and allows you to roam on other 1900 and 800 MHz digital networks where Sprint has implemented roaming agreements.

Your device allows both voice and data roaming if these services are included in your service plan. Contact Sprint to find out about roaming services and rates.

Recognizing the Roaming Icon on the Display Screen

Your device's display screen always lets you know when you are off the Nationwide Sprint Network. Anytime you are roaming, the device displays the roaming icon () in the title bar.

Tip

Remember, when you are using your device off the Nationwide Sprint Network, always dial numbers using 11 digits (1 + area code + number).

Roaming on Other Digital Networks

When you are roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

Note

If you're on a call when you leave the Nationwide Sprint Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your device off and on again to reconnect to the network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-device notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

1. Press the **Talk** key to display the Phone screen.
2. Enter **1**, the area code, and then your phone number.
3. Press the **Talk** key again to call your voicemail.
4. When you hear your voicemail greeting, tap  on the Phone keypad.
5. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

Setting Roaming Options for Your Device

You can set roaming options for your device to better control your roaming costs.

1. On the Phone screen, tap **Menu > Options... > CDMA Services** tab.
— or —
Tap **Start > Settings > All Settings > Personal** tab > **Phone > CDMA Services** tab.
2. Select **Roaming**, and then tap **Get Settings**. The Phone: Roaming screen then appears where you can set options such as the roaming mode as well as Call Guard notification and Data Roam Guard notifications.

Choosing a Roaming Mode

On the Phone: Roaming screen, you can enable or disable roaming by choosing one of the following modes:

- ***Sprint Only*** to prevent roaming on other networks.
- ***Automatic*** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, your device searches for an alternate system.

Using Call Guard

Your device has two ways of alerting you when you are roaming off the Nationwide Sprint Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint Network)

To turn Call Guard on or off:

- On the Phone: Roaming screen, select ***On*** or ***Off***.

Note

- *Call Guard is turned off by default on your phone.*
- *Automatic speed recognition (ASR) and speed dialing are not available when you are roaming with Call Guard enabled.*

To place roaming calls with Call Guard on:

1. Press the **Talk** key to display the Phone screen.
2. Enter **1**, the area code, and then the seven-digit number. After entering the number, press the **Talk** key.
3. A pop-up message then appears, informing you that roaming rates will apply. Tap **Dismiss** to close the message, and then tap **1** to place the call.

To answer incoming roaming calls with Call Guard on:

- ▶ When you have an incoming roaming call, tap **Answer** if you want to accept the roaming call.

Note If the Call Guard feature is set to On, you may need to take extra steps to make and receive roaming calls.

Using Data Roam Guard

Depending on service availability and roaming agreements, your device may be able to access data services while roaming on certain digital systems. You can use the **Data Roam Guard** to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

To set your Data Roam Guard notification:

On the Phone: Roaming screen:

- Select **Never ask** and the **Allow roaming** check box to always allow data roaming without prior notification.
- Select **Never ask** and then clear the **Allow roaming** check box to always disable data roaming.
- Select **Always ask** to enable the Data Roam Guard to always display a confirmation message and alert whenever your device enters a roaming network.
- Select **Default** to enable data roaming internationally. The Data Roam Guard may display a confirmation message and alert.

To use data services when Data Roam Guard is active:

When a notification message appears informing you that data roam charges may apply:

- Tap **Roam** or **OK** to allow data roaming.
- Tap **Cancel** if you don't want to allow data roaming.

Note If this is your first time using data roaming, the Data Roam Guard will display a second message, informing you about how to change the notification setting.

Web and Data Services

- ◆ *Ways of Connecting to the Internet (page 153)*
- ◆ *Navigating the Web (page 159)*
- ◆ *Accessing Sprint Instant Messaging (page 164)*
- ◆ *Email Messaging (page 165)*

Your device allows you to wirelessly connect to the Internet, and with Sprint data services, you have access to a dynamic variety of data services you will really use. Data services such as Web browsing, email, and instant messaging, let you have fun, stay in touch, and stay informed no matter where you go on the Nationwide Sprint Network, on a CDMA roaming network, or on a GSM international network when traveling in other countries.

Ways of Connecting to the Internet

Your device's networking capabilities allow you to wirelessly access the Internet or your corporate network through one of the following connections:

- Wi-Fi (see “Connecting via Wi-Fi” below)
- Data Services (see “Connecting to Data Services” on page 156)

Note

You can also add and set up the following connections:

- **Dial-up:** A Dial-up connection is used to dial up to your Internet Service Provider (ISP) and connect to the Internet or to your corporate network. To set up a dial-up connection, tap **Start > Settings > All Settings > Connections tab**, tap **Connections**, and then tap **Add a new modem connection**. To get help instructions, tap  and refer to the Help.
- **VPN:** A VPN connection is used to access your corporate network by using an existing Internet connection. For information about setting up a VPN connection, see the **Set Up Your Email** guide.
- **Proxy:** A Proxy connection is used to access the Internet using an existing connection to your corporate or WAP network. To set up a proxy connection, tap **Start > Settings > All Settings > Connections tab**, tap **Connections**, and then tap **Set up my proxy server**. To get help instructions, tap  and search for the word **proxy** in Help.

Connecting via Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 meters). To use Wi-Fi on your device, you need access to a wireless access point or “hotspot.”

Note

The availability and range of your device's Wi-Fi signal depends on factors such as the number of walls and other objects through which the signal must pass and background interference caused by microwave ovens and other devices that generate RF signals.

Connecting to a Wireless Network for the First Time

1. Tap **Start > Settings > Communications** to open the Comm Manager.
2. On the Comm Manager screen, tap **Wi-Fi**. Detected wireless networks are then displayed on the screen.

3. Tap the desired wireless network.
 - If you selected to connect to an open (unsecured) network, your device will be automatically connected to the network.
 - If you selected a secured network, enter the security key and then tap **Done**. Your device will then be connected to the network.
4. Tap **Back** to return to the Comm Manager, and then tap **Exit** to close the Comm Manager.

When enabled, the **On** indicator is activated and available wireless networks will be detected. Follow the steps in “Connecting to a Wireless Network for the First Time” to choose and connect to a wireless network.

The next time you connect your device to the same secured wireless network, you will not be prompted to enter the network key again (unless you perform a hard reset or clear storage which will erase custom settings on your device).

Note

Wi-Fi networks are self-discoverable, which means no additional steps are required for your device to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

Turning Wi-Fi On and Off

Once you have connected to a wireless network, you can turn Wi-Fi off when you do not need Internet access and turn Wi-Fi back on anytime when you need to reconnect to the wireless network.

1. Tap **Start > Settings > Communications** to open the Comm Manager.
2. On the Comm Manager screen, tap the **OFF/ON** switch for Wi-Fi to turn it on or off.
3. If you want to change the Wi-Fi connection to another wireless network, follow the same steps in “Connecting to a Wireless Network for the First Time.”

Checking Wireless Network Status

You can check the current wireless connection status from any of the following screens of your device:

- **Title bar.** When you enable Wi-Fi on your device, the Wi-Fi ON icon  appears on the title bar. After Wi-Fi is turned on, your device scans for available wireless networks and the wireless signal icon  appears on the title bar. The arrows in this icon move back and forth while your device is scanning for a wireless network signal. Once your device successfully connects to a wireless network, the arrows stop moving.
- **Wireless LAN screen.** Tap *Start > Settings > Menu > Wireless Networks*. On the *Main* tab, you will see the wireless network that your device is currently connected to. The configuration and signal quality of the wireless network are also shown
- **Configure Wireless Networks screen.** Tap *Start > Settings > All Settings > Connections* tab > *Wi-Fi* and then tap the *Wireless Networks* button. This screen displays all available Wi-Fi networks in range.

Tap a wireless network in the list to view or change its connection settings.

To manually add a new wireless network, if available, tap **Add New** and enter or select the required information in the subsequent screens.

To connect to a wireless network in the list, tap and hold on the desired network, and then tap **Connect**.

Saving Battery Power While Using Wi-Fi

Using Wi-Fi quickly consumes battery power. Turn off Wi-Fi when not in use. You can also enable power saving settings.

1. Tap *Start > Settings > Menu > Wireless Networks > Power Mode* tab.
2. Move the **Power Save Mode** slider to a position that optimizes performance with the least power consumption.

For example, move the slider to the left (**Best Performance**) to have the optimal wireless network performance; move to the right (**Best Battery**) to obtain the maximum battery usage.

Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name. When you use data services on your device, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name will be automatically programmed into your device. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it on your device.

- ▶ Tap **Start > Settings > All Settings > System tab > Device Information > Version tab**.

Tip

*If you choose to change your user name and select a new one online, you must then update the user name on your device. Tap **Start > Settings > All Settings > System tab > Update Profile**.*

Connecting to Data Services

To connect to data services and access the Internet, you can simply launch the Web browser on your device. You can also connect to data services from the Connections settings screen or the Comm Manager.

Connecting to Data Services Using a Web Browser

- ▶ The fastest way to access data services is by simply launching the Opera Mobile browser from the Internet tab on the Home screen. From the Home screen, slide to the **Internet** tab and then tap **Launch Browser**.


– or –

You can also launch Opera Mobile by tapping **Start > All Programs > Opera Browser**.

– or –

To access data services using Internet Explorer Mobile, tap **Start > All Programs > Internet Explorer**.

Your data connection starts and the Sprint Powerdeck home page is displayed:

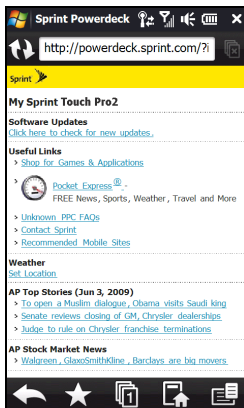

Sprint Powerdeck Home Page

Note When you open a Web page in Opera Mobile, the page may be displayed in its smallest size. To reformat Web pages to fit the screen of your device so that the content is readable, set Opera Mobile to display in Mobile View. Tap  > Settings > Display, and then select the Mobile view check box.

Connecting to Data Services from the Connections Screen


1. Tap **Start** > **Settings** > **All Settings**.
2. On the **Connections** tab, tap **Connections**.
3. Under the **Sprint** item, tap **Manage existing connections**.
4. Tap and hold **Sprint** to open a shortcut menu, and then tap **Connect**.

Connecting to Data Services from the Comm Manager

1. Do one of the following to open the Comm Manager:
 - Tap **Start > Settings > Communications**.
— or —
 - Tap **Start > All Programs > Comm Manager**.
— or —
 - Tap **Start > Settings > All Settings > Connections tab > Comm Manager**.
2. Tap **Data Connection**. The **ON/OFF** switch turns yellow and the switch is in the ON position when your device is connected to data services.

Data Connection Status Icons

Your device displays the current status of your data connection through status icons at the top of the screen. The following symbols are used for data connections:



A high-speed connection to the Sprint Mobile Broadband network (EVDO) or a Sprint 1xRTT data connection is available. These icons in conjunction with the data connection icons below let you know what type of connection your device is using.



An HSDPA, 3G, GPRS or EDGE network connection when you are roaming internationally.



Your device has an active connection to the Sprint Mobile Broadband (EVDO), Sprint 1xRTT data network, or a 3G/GPRS/EDGE international network. When active, data is being transferred and you cannot receive calls.



Your device's data connection is idle. You can receive incoming calls.

If none of the above status icons are displayed, your device does not have a current data connection. To launch a connection, see “Connecting to Data Services” on page 156.

Disconnecting from Data Services

When you do not need to use data services, disconnect your data connection to save battery power and data cost.

1. Do one of the following to open the Comm Manager:
 - Tap *Start > Settings > Communications*.
 - or —
 - Tap *Start > All Programs > Comm Manager*.
 - or —
 - Tap *Start > Settings > All Settings > Connections* tab *> Comm Manager*.
2. Tap *Data Connection*. The ON/OFF switch turns white and the switch is in the OFF position when your device has disconnected from data services.

Navigating the Web

To search, browse, and navigate the Web on your device, you can use either the Opera Mobile or Internet Explorer Mobile application.

Using Opera Mobile

Opera Mobile™ is a full-featured Internet browser, optimized for use on your device.

Opening Opera Mobile and Entering a Web Address


1. From the Home screen, slide to the *Internet* tab and then tap *Launch Browser*.
 - or —
 - Tap *Start > All Programs > Opera Browser*.
2. If the address bar does not appear, tap  at the bottom-right corner of the screen to display it.

3. Tap the address bar and then enter the URL.
4. Tap .

Note

When you open a Web page in Opera Mobile, the page may be displayed in its smallest size. To reformat Web pages to fit the screen of your device so that the content is readable, set Opera Mobile to display in Mobile view. Tap  > Settings > Display, and then select the Mobile view check box.

The Browser Screen

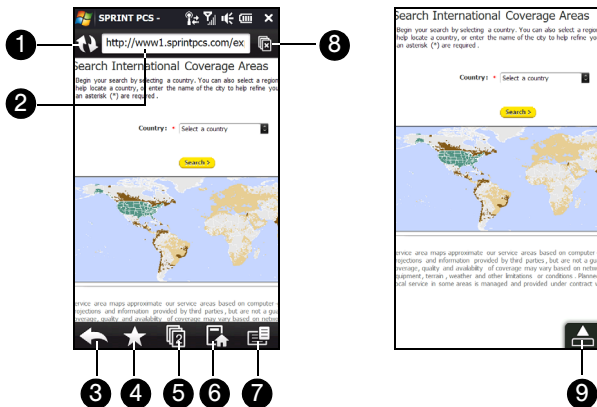


1. **Refresh.** Tap to reload the Web page being viewed.
2. **Address bar.** Enter the URL of a website here.
3. **Back.** Tap to go back to the previous Web page viewed.

4. **Favorites.** Tap to go to the Favorites screen where you can add a favorite, edit favorite Web pages, and send the favorite URL link via one of the Messaging accounts.
5. **Tabs.** Tap to add a new browsing tab or switch to another existing browsing tab.
6. **Home.** Tap to go to the Home page.
7. **Menu.** Tap to open a menu where you can change Opera Mobile settings, check downloads, view History, and more.
8. **Close tab.** Tap to close the current tab. This is enabled only if you have more than one tab opened.
9. **Exit Full Screen mode.** When browsing the Web, Opera Mobile automatically switches to full-screen mode. Tap to show the address and Menu bars again.

Searching for Information on the Web

1. On the Opera Mobile screen, tap the address bar.
2. Enter a keyword on the Search field, and then tap .



Viewing Web Pages

While browsing Web pages, use finger gestures to pan and zoom on the Web page. To zoom in, slide to the right of the Zoom bar. To zoom out, slide your finger to the left.

You can also tap the screen twice to zoom in, and tap twice again to zoom out.

Tip

Touch and hold an empty area on a Web page to open a shortcut menu that lets you go back to the previous page, reload the page, add the page as a Favorite, and more. You can also tap and hold a link or image on a Web page to open a menu with different options.



Changing the Screen Orientation


- Change the screen orientation by simply turning your device sideways.



Opera Mobile Menu

On the menu bar, tap  to open the menu.

1. **Settings.** Tap to open the Settings screen where you can set the default home page, change display settings, set privacy settings, and more.
2. **Downloads.** Tap to view items being downloaded. You can also resume or stop current downloads.
3. **Page Info.** Tap to view information about the Web page you are browsing.
4. **History.** Tap to see Web pages that you have viewed.
5. **Saved Pages.** Tap to manage and view Web pages that you have saved.
6. **Help.** Tap to open the Opera Mobile help file.
7. **Exit.** Tap to close Opera Mobile completely. Opera Mobile will not run in the background.

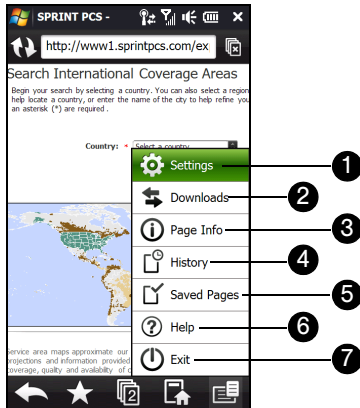

Note

For more information about using Opera Mobile, go to: <http://www.opera.com/products/mobile/>.


Accessing Sprint Instant Messaging

The Sprint Instant Messaging application provides you with access to popular instant messaging (IM) communities, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

1. To launch Sprint Instant Messaging, tap **Start > Instant Messaging**. (You may need to scroll down the screen to see the icon.)
2. A message appears, informing you to add a messaging and data plan to your service plan. Tap **OK** to close the message.
3. Tap a community: *AOL Instant Messenger*, *MSN Messenger*, or *Yahoo! Messenger*.
4. Enter the required sign-in information for the selected community, such as user name or password, and then tap **Sign In**.

Note

The information required to sign in will vary depending on the instant messaging community you are accessing.

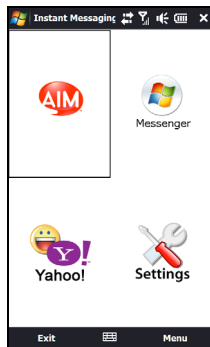

The instant messaging screen for your selected community will then be displayed, and you can start chatting online with your friends or family.

Email Messaging

Types of Email Accounts

You can set up the following types of email accounts on your device:

- Outlook email messages that you sync with your computer or the Exchange Server.
- Email accounts that you have with an Internet Service Provider (ISP) or other email provider.
- Web-based email accounts such as Yahoo!® Mail Plus, AOL®, and others.
- Work accounts that you access using a VPN connection. See the **Set Up Your Email** guide for details.
- Custom domain email accounts. The email domain name is hosted by a different email provider. For more information, tap **Start > All Programs > Help** and then search for **custom domain e-mail** in Help.

Synchronizing Outlook Email with the Computer

If you have installed the synchronization software on your computer and created a partnership with your device, your device is ready to send and receive Outlook email messages.

If you have not yet installed the synchronization software nor created a partnership, see “Setting Up Windows Mobile Device Center on Windows Vista” on page 81 or “Setting Up ActiveSync on Windows XP” on page 83 for instructions.

Tip

To set up your company email account so that you can access Outlook email messages wirelessly, you must set up your device to synchronize via an over-the-air connection with your company's Exchange Server. For more information about synchronizing with your company email server, see the **Set Up Your Email** guide.

Setting Up an Internet Email Account

Use **Mail Setup** to easily add Web-based email accounts such as Yahoo! Mail Plus, AOL, and more.

1. From the Home screen, slide to the **Mail** tab.
2. If this is your first time to set up an email account, tap **New Account**. If you are setting up subsequent accounts, tap **Menu > Accounts > New Account**. The Mail Setup screen then opens, guiding you to set up your email account.
3. Enter your email address and password, and then tap **Next**.
4. Enter your name and the account display name, and then tap **Next**. Mail Setup then searches for the email provider settings on your device.

If the settings are not found on your device, you will be prompted to enter the email account settings manually, such as the **Incoming mail server** and **Outgoing mail server**. Obtain the email account settings from your email provider.

5. Tap the **Automatic send/receive** box, and then choose how frequent you want email messages to be automatically sent and downloaded on your device.
6. Under **Advanced settings**, select the desired preferences.
7. Tap **Done**.

Creating and Sending an Email Message

After setting up email accounts on your device, you can start sending and receiving email messages.

Starting from an Empty Email Message

1. From the Home screen, slide to the **Mail** tab.
2. Select the email account you want to use on the right side of the screen.
3. Touch the **New Mail** icon () to create a new email message.

Sending an Email Message to a Favorite Contact

1. From the Home screen, slide to the **People** tab.
2. Swipe your finger on the screen to flip through the photos of your favorite contacts.
3. When the photo of the desired contact is displayed, touch the displayed photo and then tap **Send Email**.

For more information about working with favorite contacts, see “People” on page 47.

Tip

To send email to a contact that is not on the People tab, tap All Contacts, scroll through the list, tap the desired contact name, and then tap Send Email.

Composing and Sending an Email Message

After opening a new email message, follow the steps below to enter your message and then send it.

1. To add recipients, enter their email addresses, separating them with a semicolon. You can also tap **To** if you want to add email addresses stored in Contacts.
2. Enter a subject and compose your message.
3. To choose from preset messages, tap **Menu > My Text** and tap a desired message. To check the spelling, tap **Menu > Spell Check**.
4. To add an attachment to your message, tap **Menu > Insert** and tap the item you want to attach: **Picture**, **Voice Note**, or **File**. Select the file or picture you want to attach, or record a voice note.
5. Tap **Send**.

Tip

- For more information about entering text and symbols, see “Entering Text” on page 31.
- If you are working offline, email messages are moved to the Outbox folder and will be sent the next time you connect.

Filtering the Inbox Message List

When the Inbox on your device is full of messages, you can filter your Inbox to display only the messages that contain a particular sender or subject you are searching for.

To filter your Inbox:

1. Tap **Start > All Programs > Messaging** and then tap an email account.
2. Enter the sender name or email subject you want to look for. As you type characters, the message list narrows down to the sequence of characters you have entered.

For example, entering “B”, and then “E” narrows the list to only the emails that contain sender names and email subjects that start with “BE.”

Viewing and Replying to Email Messages

To view an email message:

1. From the Home screen, slide to the **Mail** tab, select an email account, and then tap **Inbox**.
2. Swipe your finger up or down the screen to browse through received email messages.
3. Tap an email message to open it.

To download a complete email message:

By default, each email received in the inbox on your device contains only the first few kilobytes of the message. When you open an email message, it displays only the headers and part of the message. You must download the whole email to view the complete content.

To download a complete email message, open the email and then do one of the following:

- ▶ Finger-scroll to the end of the message, and tap **Get entire message and any attachments** (POP3 email account) or tap **Get the rest of this message** (IMAP4 and Outlook email accounts).

— or —

Tap **Menu > Download Message**.

Notes

- The *Fetch Mail* feature, which is available for POP3 and IMAP4 Internet email accounts, downloads an entire email without the need for you to perform a full synchronization. This limits the download to just the email message that you want and helps save data cost. *Fetch Mail* is also available for Outlook Email.
- Downloading may take some time, depending on the speed of your Internet connection, email file size, and whether file attachments are automatically downloaded.

To download file attachments:

- **POP3 email account:** File attachments of a POP3 Internet email account are automatically downloaded when you download a complete email.
- **IMAP4 and Outlook email accounts:** File attachments appear below the subject of an email message. Tapping an attachment opens the attachment if it has been fully downloaded or marks it for download the next time you send and receive email.

To reply to or forward a message:

1. Open the message and tap **Menu > Reply**, **Menu > Reply All**, or **Menu > Forward**.
2. Enter your response, and then tap **Send**.

Notes

You can receive and view HTML email from any type of email account. The HTML format is retained, without layout shifting or resizing. HTML email support in Outlook Mobile is available only if you are synchronizing your device with Microsoft Exchange Server 2007.

Entertainment: TV and Music

- ◆ *TV (page 171)*
- ◆ *Music – Sprint Music Store (page 174)*

Sprint TV gives you the ability to listen to audio clips and to view video clips right from your device's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.

Sprint Music lets you preview, purchase, download, and listen to over a million songs right on your device. You can even add songs from your own library to round out your on-the-go playlist.

Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit www.sprint.com for more information on channels and pricing.

Some of the available categories may include:

- Sprint Radio
- Primetime TV
- Sprint TV Live
- Sports
- Cartoons
- Movies & Shorts
- Sprint Power View
- Music Videos
- Music & Radio
- Entertainment
- News & Weather
- Mobile Previews

Tip

Available categories and content are subject to change.

Playing a Video or Audio Clip

1. From the Home screen, slide to the **Sprint TV** tab and then tap **Launch**.
— or —
Tap **Start > All Programs > Sprint TV**.
2. Tap **Continue** to connect to data services.
3. Select **Sprint TV**, **Sprint Radio**, **Sprint Movies**, or **Premium Channels** to display channel options.

4. Select a channel from the Sprint TV listings or select an available category.

Note

The first time you access a channel, you will be prompted to purchase access (unless the channel doesn't have a monthly fee). Select **Subscribe** to purchase access, or select **Preview** to view a preview of the selected channel.

5. If applicable, select a clip and tap **OK** to view the program. The clip will automatically load and begin playing.

Tip

While you are playing a clip, open the sliding QWERTY keyboard and then press  or  to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Press  or  to scroll through the channels. Once you find a channel that you want to watch or listen to, scroll to it and tap OK (or simply wait approximately three seconds), and the channel will begin loading.

TV FAQs

1. *How long are the clips? Will I know the estimated time it will take to play the clip prior to accessing it?*

Once you have selected a channel, you will see a listing of the available clips, with each clip's length displayed after the clip's title. In general, a clip's duration will depend on the story or content being provided, and can be fairly short or as long as a few minutes.

2. *Can I access a clip wherever I am, as long as I have my device?*

As long as you are on the Nationwide Sprint Network, you will have access to the audio and video clips.

3. *Are the videos that I'm viewing "live" videos?*

It depends on the content provider. Some of the channels available through Sprint TV stream live content. Others provide media on demand with video and audio clips that are refreshed throughout the day, but that are not "live."

4. *After purchasing access to an Available Channel for a monthly fee, do I receive any confirmation? That is, how do I know it has been purchased?*

The next time you access the channel, you bypass the Preview/Purchase page and go directly to the available content.

5. *If I don't subscribe to a data services plan from Sprint, will I still be able to view the multimedia clips?*

Yes. For service access charges, please consult your Sprint service plan or visit www.sprint.com.

6. *What does it mean when the video pauses and I see the word "loading" at the bottom of the screen?*

This happens when the phone is loading the data necessary to play the clip. It typically occurs when there is heavy traffic on the network.

7. *How can I cancel service if I decide I don't want it?*

To cancel your Sprint TV service, visit www.sprint.com and sign on to My Sprint Wireless with your account number and password. From this page, you have the ability to cancel the service or any channels to which you subscribe.

8. *Can I surf to a different channel while I am playing a clip?*

Yes. While you are playing a clip, you can open the sliding QWERTY keyboard and then press  or  to surf to a different channel. A small pop-up screen will be displayed that tells you which channel you are watching as well as other channels that you have access to. Press  or  to scroll through the different channels. Once you find a channel that you want to watch, scroll to it and press (or simply wait approximately three seconds), and the channel will begin loading.

Music — Sprint Music Store

The *Sprint Music Store* enables you to purchase and download digital music files to play on your device.

Accessing the Sprint Music Store


From the *Sprint Music* tab of the Home screen, you can connect to the Nationwide Sprint Network and access the Sprint Music Store. When you enter the store for the first time, you will be prompted to set up your user identification and password.

1. On the *Sprint Music* tab of the Home screen, touch the *Sprint Music Store* icon.
2. Follow the onscreen instructions to establish your User ID and password.

Tip

Your User ID for the Sprint Music Store is your 10-digit wireless phone number. The password may be any 4-digit number.

3. After you have entered your password, highlight *Create New Account* and tap *OK*.
4. Use the sliding QWERTY keyboard to explore the store.

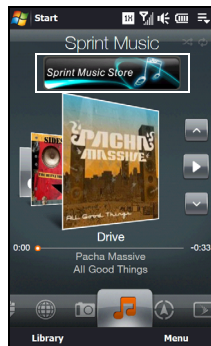

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your device's main memory or a microSD card.

1. From the Sprint Music Store opening page, select an option to browse the store:
 - **Search** gives you the option of searching for specific songs or artists. Just use one of the onscreen keypads of your device to enter your search criteria in the available field.
 - **Featured** offers a revolving selection of highlighted songs and artists.
 - **Genres** allows you to choose from different types of music such as Hip Hop/Rap, R&B, Pop, Inspirational songs, and more.
 - **Categories** allows you to choose from other types of categories.
2. Select a song by tapping on the song title. and tap **OK**. (The song information screen will be displayed.)
3. Tap **Preview** to play the selected song.
4. When you are ready to purchase the song, tap on the displayed price. This confirms your purchase and begins the download process.

The song will be downloaded to your device (\Music).

Note *If you have a microSD card inserted, you have the option to download the song to it.*

Once the song has been downloaded to your device's meom, you will be able to immediately listen to it, add it to a playlist, or continue shopping.

Playing Music

- The **Sprint Music** tab of the Home screen allows you to play the song that you purchased and downloaded to your device. See “Sprint Music” on page 59 for details.

Receiving an Incoming Call While Playing Music

An incoming call causes the currently played music file to be paused while the phone call is active. Once the current call is ended, you can select to resume any paused applications. (Music will resume playing automatically.)

1. When you receive an incoming call, tap **Answer** on the Phone screen.
2. When you are done with your call, tap **End Call** on the Phone screen or press the **End** key to end the call. The previously paused application then resumes.

Backing Up Your Downloaded Music Files

Sprint recommends you back up your downloaded music files to your computer. Although the downloaded files can only be played on your device and on your account, backing them up to your computer lets you access the files in case your microSD card is lost or damaged, or if you install a new microSD card.

1. Use your computer to navigate to the Music folder of your device (that is, go to this path: \Music).

Note If you downloaded the music files to the microSD card, go to \Storage Card.

2. Select and copy the music files to a folder on your computer's hard drive.

Note Although you can store purchased and downloaded music files on your computer, they will only be playable on your device and on your account.

Section 3D

GPS Navigation

◆ Using Sprint Navigation (page 178)

Use your device's built-in GPS capabilities and the Sprint Navigation software to easily access both directional information and location-specific features such as nearby businesses, services or other points of interest. Sprint Navigation also provides turn-by-turn driving directions onscreen and by voice right on your device.


Using Sprint Navigation

Sprint Navigation™ utilizes GPS positioning technology and access to Sprint's wireless data network to provide you with driving directions and a host of other services including:

- GPS navigation that gives you turn-by-turn directions to any destination address in the continental United States. If you miss a turn or get off track, Sprint Navigation will calculate a new route for you. You can enter a destination address by using Sprint Navigation's automatic voice recognition system or by typing on the your device's onscreen keypad.
- Audio and visual traffic alerts while driving or viewing maps, as well as traffic rerouting capabilities to minimize delays.
- Maps of the area around your current location, a marked Favorite, or an address you enter manually or have previously entered. You can pan the map (adjust left/right/up/down) and zoom in or out.

Using Sprint Navigation for the First Time

1. To launch Sprint Navigation on your device, slide to the **Navigation** tab on the Home screen and then tap any of the four icons on the screen.
2. You will see a splash screen for a few seconds and then the terms of service. Read through the terms, and then tap **Accept** after you have viewed the information.
3. Type in your phone number, first name, last name, and email address, and then tap **Go**. Sprint Navigation will then allow you to log into the service.
4. You will then see a safety warning. If you agree to the conditions listed, tap **Go**.
5. Tap **Back** at the bottom-left side of the screen to display the Sprint Navigation main screen.

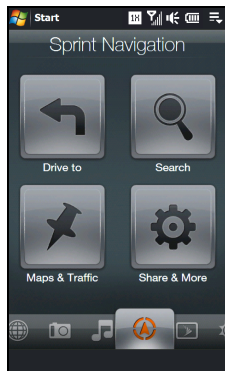


Using Sprint Navigation

The Main Screen

After logging into Sprint Navigation, you will be taken to the application's main screen. **Drive To** lets you get driving directions by address, recently entered locations, airport code or business name.

- **Search** provides you with different ways to provide the addresses and phone numbers of banks, restaurants, gas stations, emergency services, and other hard to find locations.
- **Maps & Traffic** allows you to view map and traffic information for your current location, favorite places, a business, specific addresses, and more.
- **Share & More** gives you more options. You can share an address, record a location, set preferences, and more.

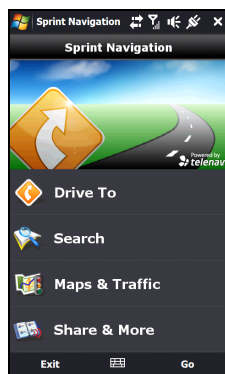

Entering an Address

With Sprint Navigation, there are two ways to enter an address – by typing it or by speaking it. To access the address entry menu, tap **Drive To** and then tap **Address**. You will then see the following options:

- **Type It** allows you to enter a street address by typing it in the appropriate fields.
 1. On the Address screen, tap **Type It**.
 2. Enter the street name. You may type in a partial entry (five or more letters) for the street name.

Note

You can always leave the street address field blank and type in a city to perform a city search. The City and State fields have an auto-fill feature, so you usually will not have to type in the whole name of the city or state.

3. Tap **Done** to submit the address.

Note

*To quickly clear the fields, choose **Options > Clear All** on the address screen.*

4. Sprint Navigation checks to see if the address you entered can be found. Sprint Navigation prompts you to modify the address if it is too new to be found in the mapping database or if the street number cannot be found for some other reason.

After submitting the address, you will be taken to the trip confirmation screen and you are ready to begin your trip.

- **Speak It** allows you to enter a street address by calling in and dictating the address.
 1. On the Address screen, tap **Speak It**.
 2. Follow the voice prompts to enter your destination address.
 3. After a successful entry, hang up and you will be taken back to the screen you were viewing prior to making the call. The location you just entered will now be displayed at the top of your Recent Places list. You may need to tap **Refresh Recent Places** to make the address available.

You should now have a basic understanding of how to enter an address and get driving directions. For more information about using Sprint Navigation, visit the support page at <http://www.sprint.com/navigation>.

Note

The Sprint Navigation software gets routing directions, maps, and its directory of businesses and points of interests from the Sprint Navigation servers. You need to subscribe to a data plan in order to access this information. If you do not have a data plan yet, check Sprint Navigation's website at <http://www.sprint.com/navigation> for subscription rates.

Section 3E

Sprint Worldwide Wireless Service

- ◆ *Your SIM Card (page 182)*
- ◆ *Using Your Device in GSM Mode (page 185)*
- ◆ *Using Your SIM Card's PhoneBook (page 191)*
- ◆ *Setting GSM Services Options (page 195)*
- ◆ *Contacting Sprint (page 197)*
- ◆ *Services (page 199)*
- ◆ *Selecting a Network (page 200)*

Your device allows you to roam throughout the world using both CDMA (Code Division Multiple Access) and GSM (Global System for Mobile Communications) networks. For a complete list of countries and features available, visit www.sprint.com/sww.

Note

To use Sprint international roaming services, you must be a current Sprint subscriber. You must also meet international toll authorization and credit requirements to roam in most places outside of the United States. Depending on your overseas location and coverage, you may not have access to all features. Service may be interrupted if you change phones or phone numbers before traveling abroad.

Your SIM Card

Your device comes with a preinstalled SIM (Subscriber Identity Module) card to support roaming on compatible GSM networks. The SIM card must be activated for international wireless service prior to its initial use (outside of the United States).

To activate Sprint Worldwide service:

- ▶ Visit www.sprint.com/international.
 - Click **Chat with us** to talk online with a Sprint representative
 - OR –
 - Click **Email us** to send an email to a Sprint representative
 - or –
- ▶ Call **1-888-226-7212, option 2**, to speak to a Sprint representative.

For more help with Sprint Worldwide international setup, tap **Start > All Programs**, scroll down the All Programs screen, and then tap **International Usage** to display a brief set of onscreen GSM setup instructions.


Note

Your SIM card should be preinstalled. If you need to reinstall your SIM card, see "Removing Your SIM Card" on page 183. The SIM card included with your device contains information specific to your device and should be retained with the device for use on GSM networks.


Removing Your SIM Card

The SIM card comes preinstalled but can be removed if necessary.

1. Remove the back cover.
 - Remove the stylus. (You need to temporarily remove the stylus to be able to remove the back cover.)
 - Hold the device with both hands and the front panel facing down.
 - Push the back cover up with your thumb until it disengages from the device and then slide it up to remove.

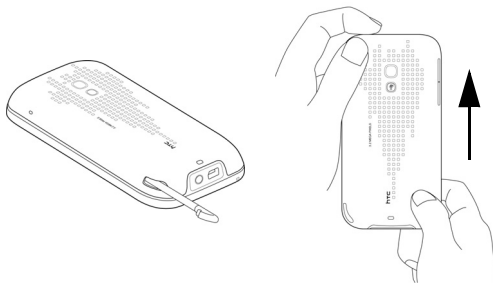


2. Remove the battery if it is installed. To remove, lift out the battery from the groove at the upper right side of the battery compartment.

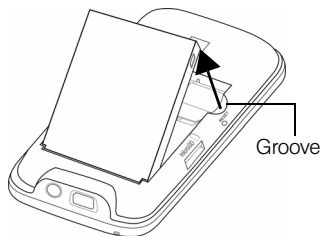

3. To remove the SIM card, first insert the tip of the stylus into the small hole above the SIM card slot, and then push the SIM card out with the stylus. Slide the SIM card out from the slot with your thumb or finger.

4. Press the **Power** button to turn the device on.
- Your device will turn on, search for Sprint service, and then enter standby mode.
 - If your device is not yet activated, see "Activating Your Device" on page 5 for more information.
 - By default, your device is set to Global mode. If there is no SIM card on your device, your device will display a message to inform you that it will switch to CDMA mode.

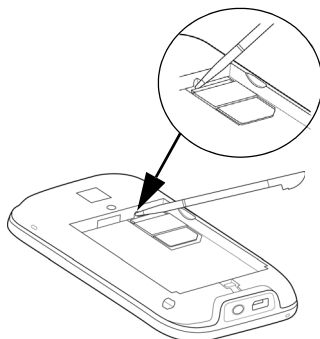

Removing the SIM Card

Note

Your device's battery should have enough charge to turn on, find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 19 for details.

Using Your Device in GSM Mode

Entering GSM Mode

By default, your device operates in Global mode. With a SIM card installed, Global mode allows your device to seamlessly switch from a CDMA network to a GSM network when you are traveling in another country and there is no CDMA service available in your location.

If necessary, you can also manually change the network mode setting of your device to GSM-only mode.

To change the network mode to GSM:

1. Tap **Start > Settings > Menu > Phone Network Mode**.
2. From the **Mode of operation** list, select **GSM only**.
3. Tap **ok**.

Note

While in the United States, your device will operate only in CDMA mode; domestic GSM networks will not be accessible via this device.

Making and Answering Calls in GSM Mode

When traveling on international GSM networks while in GSM mode, you can place and answer calls the same as in CDMA mode. See “Using Phone Features” on page 69. Certain features and services are not available in all countries.

Visit www.sprint.com/sww for more information on services that are available while roaming.

Calling Emergency Numbers in GSM Mode

When traveling on international GSM networks while in GSM mode, you can place calls to emergency services (even if your account is restricted or Call Barring is active.)

To place calls to emergency services:

1. Press the **Talk** key to open the Phone screen.
2. Tap    .

Plus (+) Code Dialing and Global Smart Dialing

Placing calls from one country to another country is simple with the Plus Code Dialing. When you place international calls, Plus Code Dialing automatically fills in the international access code for your location (for example, 011 for international calls placed from the United States).

When the Global Smart Dialing feature is enabled, you can preconfigure the country to call. Plus Code Dialing also becomes automatic when you use Global Smart Dialing. You simply enter the 10-digit number when placing your international call. Both the “+” symbol and country code will automatically be prepended to the number.

Configuring Global Smart Dialing in GSM Mode

1. Press the **Talk** key to open the Phone screen.
2. Tap *Menu*, scroll down the menu, and then tap *Global Smart Dialing*.
3. Select the *Enable Global Smart Dialing* check box.
4. Select the country to which you are calling from the *Dial to* list. The corresponding country code will appear in the *Country Code* box. (You cannot change the country code.)
5. Tap *Done*.

Using Plus Code Dialing with Global Smart Dialing in GSM Mode

1. On the Phone screen, directly enter the 10-digit number to call. This number includes the area code (without the leading zero, if any) and phone number.
2. Tap  on the Phone screen or press the **Talk** key to place the call.

(The Phone screen will then display the complete number, including the “+” symbol followed by the country code and the 10-digit number. The “+” symbol automatically inserts the access code for international dialing.)

Note When Global Smart Dialing is not enabled, you need to manually enter the “+” symbol and the country code of the person you are calling. Tap and hold  to enter the “+” symbol, and then enter the country code, followed by the city or area code and the phone number.

Direct Dial in GSM Mode

Note When the number you want to call (area code and phone number) contains fewer than 10 digits, you need to use direct dialing to place international calls.

To use direct dialing to place an international call:

- Enter the international access code, the country code, the city or area code, and the phone number, and then tap  to complete the call.

Making Calls Within a Country (Local or Long Distance Dialing)

The steps for making an international call within the same country are identical to those for calling country-to-country, except it is not necessary to enter the country code.

Calling the United States from Another Country in GSM Mode

To place a call to the United States from another country:

1. Follow the same steps in “Configuring Global Smart Dialing in GSM Mode” on page 186 to enable Global Smart Dialing, making sure to select the United States in step 4 of that sequence.
2. On the Phone screen, enter the area code without the leading zero, followed by the number of the person you are calling. (The area code and phone number should total 10 digits.)
3. Tap  on the Phone screen or press the **Talk** key to place the call.
(The “+” symbol and U.S. country code are automatically prepended to the dialed number. Also, the “+” symbol automatically inserts the exit code for the country from which you are calling.)

Note

When Global Smart Dialing is not enabled, you need to manually enter the “+” symbol and the U.S. country code to place the call. Tap and hold  to enter the “+” symbol, tap  to insert the U.S. country code, and then enter the city or area code followed by the phone number.

Calling Other Countries in GSM Mode

To place a call from one country to another country:

1. Follow the same steps in “Configuring Global Smart Dialing in GSM Mode” on page 186.
2. On the Phone screen, enter the complete local number according to the dialing sequence used by the country to which you are calling. For instance, the standard dialing sequence used in many countries comprises the area code without the leading zero, followed by the phone number. (The complete local number should total 10 digits.)

3. Tap **Talk** on the Phone screen or press the **Talk** key to place the call.

(The “+” symbol and country code are automatically prepended to the dialed number. Also, the “+” symbol automatically inserts the exit code for the country from which you are calling.)

Note When Global Smart Dialing is not enabled, you need to manually enter the “+” symbol and the country code of the person you are calling. Tap and hold **0+** to enter the “+” symbol, and then enter the country code, followed by the city or area code and the phone number.

Retrieving Voicemail Messages

Your device uses the same Voicemail box for both Sprint CDMA and GSM modes.

To retrieve voicemail messages:

1. Enter the international access code (or if in GSM mode, tap and hold **0+** until a “+” symbol appears on the Phone screen).
2. Enter **1** followed by your 10-digit phone number.
3. When you hear the voice greeting, tap **★** and enter your password, followed by **#**.

International Data Roaming

Sprint Worldwide Wireless Service can also keep you connected via email and Web browsing when traveling in countries in which Sprint offers data service. Data services are available on both CDMA and GSM networks; check www.sprint.com/international to determine the services available where you are traveling.

Note Prior to using your Sprint Worldwide GSM Data Services, you must establish and utilize your CDMA data services domestically on the Nationwide Sprint Network.

Getting Started with Data Services

Before you can use Sprint Worldwide Data Services, you must first have these services activated on your account.

- ▶ To activate, visit www.sprint.com/international.
 - Click **Chat with us** to talk online with an International Services representative.
 - Or –
 - Click **Email us** to send an email to an International Services representative.
 - or –
- ▶ Call **1-888-226-7212, option 2**, to speak with an International Services representative.

Once your services are activated, you may need to select a GSM data services provider for the country you're in. (See "Selecting a Network" on page 200.)

Accessing Your Email and Data Services on CDMA Networks

Since your device is set to Global mode by default, it automatically detects CDMA networks. If a data service is available on a CDMA network, you do not need to manually set your device to CDMA mode. You also do not need to select the specific carrier. Selecting a specific carrier is necessary only for providers on the GSM network.

If you changed the network mode setting of your device to GSM-only mode while you are traveling, you need to set it back to Global mode or CDMA-only mode to access CDMA data services.

To change the network mode from GSM to Global or CDMA-only mode:

1. Tap **Start > Settings > Menu > Phone Network Mode**.
2. From the **Mode of operation** drop-down list, select **Global** or **CDMA only**.
3. Tap **ok**.


Visit www.sprint.com/international for a list of services available for each country.

Using Your SIM Card's PhoneBook

Your SIM card contains its own phone book that is separate from your device's internal Contacts list. You can update and maintain the SIM PhoneBook whenever your SIM card is installed on your device, even if you are not in a GSM service area.

When saving a Contacts entry to your SIM card, note that only the name and number are saved. Entries stored on the card do not contain any detailed information that may be stored in the device's internal memory. To store additional information for a particular contact, such as email addresses or dates, it is important to save that information to your device's onboard memory.

When a SIM card is active, the All Contacts screen that can be accessed from the TouchFLO 3D People tab will then display two types of entries:

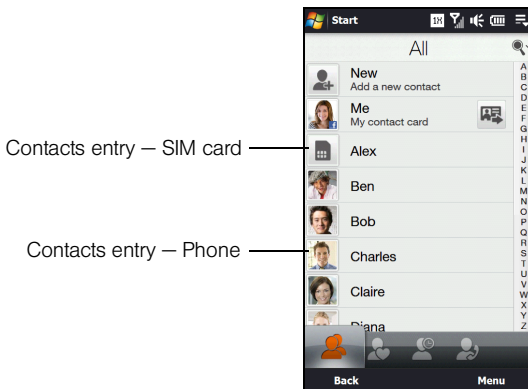

Each Contacts entry stored on the SIM card can use only one phone number, and the entry's name can be a maximum of 12 characters.

Adding Entries to the SIM PhoneBook

There are two ways to add new entries to your SIM card's phonebook. You can add contact entries using the *Windows Mobile Contacts* program or the *SIM Manager*.

Adding Entries Using Windows Mobile Contacts

1. Tap *Start > All Programs > Contacts*.
2. On the Contacts screen, tap *New*, and then tap *SIM Contact*.
3. Enter a name and phone number for the new entry. (See “Entering Text” on page 31.)
4. Tap *ok*.

Adding Entries Using SIM Manager

1. Tap *Start > All Programs > SIM Manager* and then tap *New*.
2. Enter a name and phone number for the new entry. (See “Entering Text” on page 31.)
3. Tap *Save*.

Copying Contacts Entries to the SIM PhoneBook

You can also copy entries from your device's Contacts to your SIM PhoneBook using either *Windows Mobile Contacts* or the *SIM Manager*.

Copying Entries Using Windows Mobile Contacts

1. Tap *Start > All Programs > Contacts*.
2. Tap *Menu*, scroll down the menu, and then tap *Select Contacts*. Do one of the following:
 - Tap *All* to select all contacts.
 - or –
 - Tap *Several*, and then in the contacts list, select only those contacts that you want to copy to the SIM Phonebook.

3. Tap **Menu** > **Copy Contact** and then select a copy option:
 - **To SIM** to copy the selected contacts from your device to your SIM card. Note that only the name and number will be saved to the card.
 - **To Contacts** to copy the selected contacts from your SIM Card to your device's onboard memory.

Copying Entries Using SIM Manager

To copy contacts to the SIM card:

When you copy a contact that has several phone numbers to your SIM card, SIM Manager automatically saves each number as a separate entry on the SIM card. Each entry shows the same contact name but with an indicator appended at the end of the name. By default, /M, /W, and /H are appended to indicate mobile, work, and home phone numbers respectively.

Tip

*To edit the default indicators and to select which other types of numbers to save to the SIM card, tap **Menu** > **Tools** > **Options** and change the indicators.*

1. Tap **Start** > **All Programs** > **SIM Manager**.
2. Tap **Menu** > **Contacts to SIM**.
3. The check boxes of all available phone numbers stored on your device are selected. Clear the check boxes of those phone numbers that you do not want to copy to your SIM card.
4. Tap **Save**.

To copy SIM contacts to your device:

If you have saved contacts on your SIM card, you can copy them to the contacts list on your device.

1. Tap **Start > All Programs > SIM Manager**.
2. On the SIM Manager screen, you can:
 - Select all SIM contacts by tapping **Menu > Select All**.
 - or –
 - Open the sliding QWERTY keyboard or an onscreen keyboard, and use the Up or Down key of the keyboard to highlight and select a SIM contact.
3. Tap **Menu > Save to Contacts**.

Deleting SIM PhoneBook Entries

Use the **SIM Manager** to delete some or all SIM PhoneBook entries.

To delete some entries from the SIM Phonebook:

1. Tap **Start > All Programs > SIM Manager**.
2. Tap **Menu > Delete Contacts**.
3. Select the check boxes of the entries that you want to delete from the SIM Phonebook.
4. Tap **Delete**.

To delete all SIM Phonebook entries:

1. Tap **Start > All Programs > SIM Manager**.
2. Tap **Menu > Select All**.
3. Tap **Menu > Delete**.

Copying Text Messages to the SIM Card

When your SIM card is installed on your device, you can save text messages to your SIM card.

1. From the Home screen, slide to the **Messages** tab and then tap **All Messages**.
2. In the SMS / MMS inbox, tap a message thread.
3. The exchange of text messages between you and the sender is then displayed. Open the sliding QWERTY keyboard or an onscreen keyboard, and use the Up or Down key of the keyboard to highlight the text message that you want to copy to the SIM card.
4. Tap **Menu > Copy to SIM**.

Notes

- You cannot copy a sent text message from the thread to the SIM card.
- Copying text messages from your device to the SIM card results in duplicate messages when you are viewing the Inbox.

Setting GSM Services Options

There are several user options available for GSM operation under your device's Phone settings. All these options require that your device be in Global or GSM-only mode and in a GSM roaming coverage area. (See www.sprint.com/swww for a list of countries where international GSM coverage is available, and see "Entering GSM Mode" on page 185.)

To configure GSM services options:

1. Tap **Start > Settings > All Settings**.
2. Tap the **Personal** tab, and then tap **Phone > GSM/UMTS Services** tab.
3. Tap the service you want to configure and then tap **Get Settings**.
4. Choose your desired options, and then tap **ok**.

The following are some of the GSM services that you can configure.

GSM Services	Usage
Call Barring	Allows you to block certain types of incoming and outgoing calls on your device. This would be useful, for example if you allowed someone to use your device for a short period of time. (See “Using Call Barring (GSM)” on page 197 for details.)
Caller ID	Allows you to set caller ID options. (See “Caller ID” on page 199 for details.)
Call Waiting	Allows you to enable or disable call waiting. (See “Call Waiting” on page 199 for details.)
Call Forwarding	Allows you to divert incoming calls to another specified phone number.
Voice Mail and Text Messages	Shows the text messages service center phone number and your voicemail number for accessing voicemail messages when you are roaming on GSM networks. (See “Voicemail and Text Messages” on page 200 for details.)
Location Setting	Allows the GSM network to detect your current location via your device’s built-in GPS chip. This is especially useful in emergencies.
TTY Mode	Allows the use of a TTY (teletypewriter) with the device for users who are visually or hearing impaired. The available modes are the same as in CDMA.
Time Synchronization	Allows you to choose whether to synchronize the time on your device with the GSM network.

Using Call Barring (GSM)

To activate Call Barring (GSM):

1. Tap **Start** > **Settings** > **All Settings**.
2. Tap the **Personal** tab and then tap **Phone** > **GSM/UMTS Services** tab.
3. Tap **Call Barring** and then tap **Get Settings**.
4. Under **Block incoming calls** and **Block outgoing calls**, choose when you want to block phone calls.
5. Tap **ok**.

Contacting Sprint

Sprint Worldwide Customer Service is available to answer your questions 24 hours a day, 7 days a week. Visit www.sprint.com/international and click **Chat with us** to talk online with an International Services representative; or click **Email us** to send an email to an International Services representative; or you can call the numbers below if you need assistance.

While in the United States:

- Call **1-888-226-7212, option 2**.

While traveling outside the United States:

- Call **+1-817-698-4199, option 2**.

There is no charge for this call from your Sprint wireless device.

From a landline phone when outside the United States:

Sprint Worldwide Customer Service can be reached from a landline phone at **+1-817-698-4199, option 2**. Access or connection fees may apply. The toll-free numbers below can also be used to contact Sprint Worldwide Customer Service in the following countries.

<i>Country</i>	<i>From Landline Phone</i>
Anguilla	1-888-226-7212
Barbados	1-888-226-7212
Cayman Islands	1-888-226-7212
Dominican Republic	1-888-226-7212
France	0800-903200
Germany	0800-180-0951
Italy	800-787-986
Mexico	001-877-294-9003
Trinidad and Tobago	1-800-201-7545
United Kingdom	0808-234-6616

Note

This toll-free service is available through ordinary landline phones and some public payphones. Additional fees may be incurred if you call this service from hotels.

Services

Caller ID

Caller ID displays the number (and name, if in your PhoneBook) of incoming calls. Caller ID in GSM mode must be enabled by the user.

To enable or disable caller ID:

1. Tap **Start > Settings > All Settings**.
2. Tap the **Personal** tab and then tap **Phone > GSM/UMTS Services** tab.
3. Tap **Caller ID** and then tap **Get Settings**.
4. Select **Everyone**, **No one**, or **Only to contacts** and tap **ok**.

Call Waiting

Call Waiting notifies you of an incoming call even while you're in a call. You can then accept, reject, or ignore the incoming call. Unlike Call Waiting in CDMA mode, Call Waiting in GSM mode must first be activated.

To use Call Waiting Internationally:

1. Tap **Start > Settings > All Settings**.
2. Tap the **Personal** tab and then tap **Phone > GSM/UMTS Services** tab.
3. Tap **Call Waiting** and then tap **Get Settings**.
4. Select the **Notify me** option and tap **ok**.

Voicemail and Text Messages

To activate voicemail settings:

1. Tap **Start > Settings > All Settings**.
2. Tap the **Personal** tab and then tap **Phone > GSM/UMTS Services** tab.
3. Tap **Voice Mail and Text Messages** and then tap **Get Settings**.
4. The text messages service center number and your voicemail number are then displayed. To change the voicemail number, open the sliding QWERTY keyboard or an onscreen keyboard, and then use the keyboard to enter a new number.
5. Tap **ok**.

Note

The voicemail number is automatically set up when you receive your device. You will probably not need to change it unless otherwise instructed by your carrier.

Selecting a Network

To access your email and browse the Web when traveling, you may need to manually select the carrier that provides Sprint service in your location. You can find a list of carriers for each country where GSM data service is offered at www.sprint.com/sww. Then, follow the instructions below to select the appropriate carrier network on your device.

To select a GSM data service for a specific country:

1. Tap **Start > Settings > Menu > Phone Network Mode**.
 - On the **Network** tab of the Phone settings screen, the Current Network field displays a description of the currently active network.
2. From the **GSM Network selection** field, select **Automatic** or **Manual**.
3. Tap **Find Network**.

- If you selected **Automatic** in step 2, the system will provide the best available network in your area and then assign it to your device.
- If you selected **Manual** in step 2, you will need to choose from the onscreen list of available networks and then manually make the assignment.
- Tap to highlight an available network and then tap **OK**. The settings are then sent to the network.

4. Tap **ok** to complete the process and save the new settings.

Note

When traveling, it may be necessary to select a new compatible GSM data service carrier each time you enter a new country.

Viewing Your Preferred Networks

1. Tap **Start > Settings > Menu > Phone Network Mode**.
 - On the **Network** tab of the Phone settings screen, the Current Network field displays a description of the currently active network.
2. From the **GSM Network selection** field, select **Manual**.
3. Tap **Set Networks**.

To add a new preferred network:

1. Repeat steps 1 - 3 from "Viewing Your Preferred Networks" to access the Phone: Preferred networks screen.
2. Tap **New Network**.
3. Select **Add a network from the list**, browse through the available list, and then tap a network.
4. Tap **ok**. (This newly added network then appears on the Phone: Preferred networks screen.)

Section 4

***Safety and Warranty
Information***



Important Safety Information

- ◆ *Important Health Information and Safety Precautions (page 205)*
- ◆ *General Precautions (page 211)*
- ◆ *Additional Safety Information (page 212)*
- ◆ *Regulatory Agency Identifications (page 220)*
- ◆ *FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices (page 220)*
- ◆ *SAR Information (page 222)*
- ◆ *Body-worn Operation (page 223)*
- ◆ *Telecommunications & Internet Association (TIA) Safety Information (page 224)*

This User Guide contains important operational and safety information that will help you safely use your device. Failure to read and follow the information provided in this guide may result in serious bodily injury, death, or property damage.

Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

Electrical Safety

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

Safety Precautions for Proper Grounding Installation

CAUTION: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

Safety Precautions for Power Supply Unit

- **Use the correct external power source.** A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.
- **Handle battery packs carefully.** This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 140°F (60°C).

WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.



- **Take extra precautions:**
 - Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
 - Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
 - The phone should be only connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
 - Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.

- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service centre for inspection.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

Safety Precautions for Direct Sunlight

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Prevention of Hearing Loss

CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Safety in Aircraft

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

Environment Restrictions

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Explosive Atmospheres

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Road Safety

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

Safety Precautions for RF Exposure

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

Interference with Medical Equipment Functions

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Hearing Aids


Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Nonionizing Radiation

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

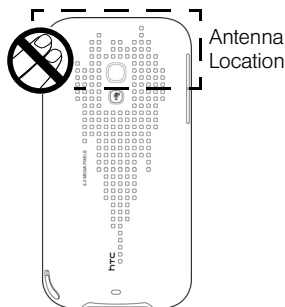

General Precautions

- **Avoid applying excessive pressure to the device.** Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.
- **Device getting warm after prolonged use.** When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the Web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.
- **Heed service markings.** Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.
- **Damage requiring service.** Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:
 - Liquid has been spilled or an object has fallen onto the product.
 - The product has been exposed to rain or water.
 - The product has been dropped or damaged.
 - There are noticeable signs of overheating.
 - The product does not operate normally when you follow the operating instructions.
- **Avoid hot areas.** The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **Avoid wet areas.** Never use the product in a wet location.
- **Avoid using your device after a dramatic change in temperature.** When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

- **Avoid pushing objects into product.** Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.
- **Mounting accessories.** Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- **Avoid unstable mounting.** Do not place the product with an unstable base.
- **Use product with approved equipment.** This product should be used only with personal computers and options identified as suitable for use with your equipment.
- **Adjust the volume.** Turn down the volume before using headphones or other audio devices.
- **Cleaning.** Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Additional Safety Information

This section provides more safety information in addition to the information at the beginning of the user manual.

When Driving

Do Not Use The PC Functions Of Your Device While Driving Or Walking

Never use the personal computer functions of your device while driving an automobile or any other moving vehicle. Always pull out of traffic and come to a stop in a legally permissible and safe location before using your device. Failure to do so could result in serious bodily injury in a traffic accident.

When driving:

- Always secure your device in its leather pouch.
- Never place your device on the passenger seat or anyplace else in the car where it can become a projectile during a collision or stop.
- An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Never store or transport flammable liquids, gases or explosive materials in the same compartment of your automobile as the device or any of its accessories, as possible sparking in the device could cause ignition or explosion.

Never use your device while walking. Usage while walking could result in bodily injury caused by inattention to automobile traffic or other pedestrian hazards.

Using The Phone Function Of Your Device While Driving Is Extremely Dangerous

Talking on or using your device while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

If you must use the phone function while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation and/or one-touch, speed dialing, and auto answer modes.
- Pull off the road and park before making or answering a call.

Warning

Failure to follow these instructions could lead to serious personal injury and possible property damage.

When Using Your Device Near Other Electronic Devices

Your wireless handheld portable device is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless device; therefore, use of your device must be restricted in certain situations.

In addition, the computer portion of your device produces low levels of RF energy due to the generation of digital timing pulses by its clock oscillator circuits. Your device has been equipped with internal shielding to minimize stray emissions of RF energy. However, use of the computer functions of your device must be restricted in certain situations.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Never come closer than six (6) inches to a person with a heart pacemaker implant when using your device. Doing so could result in interference with the function of the pacemaker.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

Note

This is not necessary if the device is not held to the ear.

- If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

Electronic Devices in Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your device OFF where posted notices so require.

Turn Off Your Device Before Flying

Aircraft

FCC regulations prohibit using the transmitting and phone functions of your device while in the air. In addition, most airline regulations prohibit the on-board use of portable PCs (and all other portable electronic devices that could potentially emit stray RF energy), particularly during take-offs and landings, to prevent any possible interference with the reception of signals by airborne electronic navigational devices.

Turn your device OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your device aboard an aircraft. Always follow the instructions of the airline representative whenever using your device aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

Turn Off Your Device in Dangerous Areas

Blasting Areas

To avoid interfering with blasting operations, turn your device OFF when in a “blasting area” or in areas posted “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your device OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

General Safety

Your pocket PC is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on the product, battery and adapter/charger.

Failure to follow the directions below could result in serious bodily injury and/or property damage due to battery liquid leakage, fire or rupture.

DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.

DO NOT drop your device or subject it to severe shock. When not using, lay down the unit to avoid possible damage due to instability.

DO NOT expose this equipment to rain or spilled beverages.

DO NOT use unauthorized accessories.

DO NOT disassemble the device or its accessories. If service or repair is required, return unit to an authorized cellular service center. If the unit is disassembled, the risk of electric shock or fire may result.

Never allow metallic objects, such as staples and paper clips, to get into the inside of your device.

Never touch the liquid that might leak from a broken liquid crystal display. Contact with this liquid could cause a skin rash. If the crystal display liquid should come into contact with the skin or clothing, wash it immediately with clean water.

In the event that the device emits an unusual odor or sound or generates smoke, immediately disconnect the AC adapter from the power outlet, and then detach the battery.

Antenna Safety

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage your device, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the device with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Battery Safety

Your device uses a removable and rechargeable lithium ion battery. Please contact customer service for assistance should you need a replacement battery.

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.

- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local regulations.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't expose the battery terminals to any other metal object (e.g., by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens). This can short circuit and critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

Lithium ion batteries are recyclable. When you replace the removable battery, please request the repair center to recycle the battery in accordance with RBRC standards. When disposing of the battery by yourself, please call RBRC at (800) 822-8837 for proper disposal tips.

Never touch any fluid that might leak from the built-in battery. Such liquid when in contact with the eyes or skin, could cause injury to the skin or eyes. Should the liquid come into contact with the eyes, irrigate the eyes thoroughly with clean water and immediately seek medical attention. In the event the liquid comes into contact with the skin or clothing, wash it away immediately with clean water.

Adapter/Charger

Use the Correct External Power Source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

The AC Adapter/Charger designed for this unit requires the use of a standard 120 V AC power source for device operation.

Never attempt to disassemble or repair an AC adapter/charger. Never use an AC adapter/charger if it has a damaged or worn power cord or plug. Always contact an authorized service center, if repair or replacement is required.

Never alter the AC cord or plug on an AC adapter/charger. If the plug will not fit into the available outlet, have a proper outlet installed by a qualified electrician.

Never allow any liquids or water to spill on an AC adapter/charger when it is connected to an AC power source.

Always use the authorized AC adapter/charger to avoid any risk of bodily injury or damage to your cellular phone or battery.

Never attempt to connect or disconnect the AC adapter/charger with wet hands. Always unplug the AC adapter/charger from the power source before attempting any cleaning. Always use a soft cloth dampened with water to clean the equipment, after it has been unplugged.

Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

Always disconnect the travel charger or desktop charger from the power source when it is not in use.

Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of RHOD400.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your RHOD400.

The Battery Pack has been assigned a model number of RHOD160.

Operating temperature range: 32°F to 104°F (0°C to 40°C)

Note

This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01- 309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to


be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings.

RHOD400 complies with the FCC's requirements for hearing aid compatibility when using the CDMA air interface. The M rating in this mode is M4 and the T rating in this mode is T3.

Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for better use. A sum of 8 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

This methodology applies equally for T ratings. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and

measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control:

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC:

<https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>

This handset complies with the FCC's requirements for Hearing Aid Compatibility when using the CDMA air interface at both the PCS (1900 MHz) and Cellular (800 MHz) frequency bands. Hearing Aid Compatibility testing has resulted in an acoustic HAC rating of Mx and a T-Coil rating of Tx for CDMA operation. This handset is not configured to use the GSM/UMTS air interface in the United States. Hearing aid or cochlear implant users may have a slightly degraded experience when roaming internationally onto GSM or UMTS networks. Hearing aid or cochlear implant users should consult the service provider about its return and exchange policies and for information on hearing aid compatibility.

SAR Information

1.410 W/kg @ 1g (FCC)

THIS MODEL DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the HTC Corporation accessories supplied or designated for this product. Use of other accessories may not ensure compliance with the FCC RF exposure guidelines.

Your wireless mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general

population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992.
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996.

The exposure standard for wireless mobile phone employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg*.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> after searching on FCC ID: NM8RHOD400. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website as <http://www.phonefacts.net>.

* In the U.S., the SAR limit for mobile phone used by the public is 1.6 Watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in usage.

Normal condition only to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-

worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Telecommunications & Internet Association (TIA) Safety Information

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Warranty, Disclaimers and Other Notices

- ◆ *Manufacturer's Warranty (page 227)*
- ◆ *Privacy Restrictions (page 229)*
- ◆ *Weather Disclaimer (page 230)*
- ◆ *Warranty Disclaimer (page 230)*
- ◆ *Limitation of Damages (page 231)*

Your device has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section. For information regarding the terms and conditions of service for your device, please visit www.sprint.com or call Sprint Customer Service at **1-888-211-4727**.

Manufacturer's Warranty

12 Month Limited Warranty

HTC Corporation (the Company) warrants to the original retail purchaser of this HTC handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced;
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to HTC Corporation for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, HTC Corporation is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to HTC Corporation for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (888) 870-4736.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN

RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

IN USA AND CANADA:

HTC Corporation
5950 Corporate Dr.
Houston, TX 77036

Privacy Restrictions

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your device.

Weather Disclaimer

THE WEATHER INFORMATION, DATA AND DOCUMENTATION ARE PROVIDED “AS IS” AND WITHOUT WARRANTY OR TECHNICAL SUPPORT OF ANY KIND FROM HTC. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HTC AND ITS AFFILIATES expressly disclaim any and all representations and warranties, express or implied, arising by law or otherwise, regarding the Weather Information, Data, Documentation, or any other Products and services, including without limitation any express or implied warranty of merchantability, express or implied warranty of fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, usefulness, that the Weather Information, Data and/or Documentation will be error-free, or implied warranties arising from course of dealing or course of performance.

Without limiting the foregoing, it is further understood that HTC and its Providers are not responsible for Your use or misuse of the Weather Information, Data and/or Documentation or the results from such use. HTC and its Providers make no express or implied warranties, guarantees or affirmations that weather information will occur or has occurred as the reports, forecasts, data, or information state, represent or depict and it shall have no responsibility or liability whatsoever to any person or entity, parties and non-parties alike, for any inconsistency, inaccuracy, or omission for weather or events predicted or depicted, reported, occurring or occurred. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, YOU ACKNOWLEDGE THAT THE WEATHER INFORMATION, DATA AND/OR DOCUMENTATION MAY INCLUDE INACCURACIES AND YOU WILL USE COMMON SENSE AND FOLLOW STANDARD SAFETY PRECAUTIONS IN CONNECTION WITH THE USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION.

Warranty Disclaimer

Your warranty is invalidated if you open or tamper with the device's outer casing.

For details about warranty coverage, see “Manufacturer's Warranty” on page 227.

Limitation of Damages

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HTC OR ITS PROVIDERS BE LIABLE TO USER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES OF ANY KIND, IN CONTRACT OR TORT, INCLUDING, BUT NOT LIMITED TO, INJURY, LOSS OF REVENUE, LOSS OF GOODWILL, LOSS OF BUSINESS OPPORTUNITY, LOSS OF DATA, AND/OR LOSS OF PROFITS ARISING OUT OF, OR RELATED TO, IN ANY MANNER, OR THE DELIVERY, PERFORMANCE OR NONPERFORMANCE OF OBLIGATIONS, OR USE OF THE WEATHER INFORMATION, DATA OR DOCUMENTATION HEREUNDER REGARDLESS OF THE FORESEEABILITY THEREOF.

Copyright, Trademark, and Proprietary Notices

© 2009 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are the property of their respective owners.

HTC, the HTC logo, HTC Innovation, ExtUSB, TouchFLO, HTC Touch Pro, and HTC Care are trademarks and/or service marks of HTC Corporation.

Microsoft, Windows, Windows Mobile, Windows XP, Windows Vista, ActiveSync, Windows Mobile Device Center, Internet Explorer, MSN, Hotmail, Windows Live, Outlook, Excel, PowerPoint, Word, OneNote and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

microSD is a trademark of SD Card Association.

Opera Mobile from Opera Software ASA. Copyright 1995-2009 Opera Software ASA. All Rights Reserved.

Google, Google Maps, and YouTube are trademarks of Google, Inc. in the United States and other countries.

Licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,490,165	5,056,109	5,504,773	5,101,501	5,778,338
5,506,865	5,109,390	5,511,073	5,228,054	5,535,239	5,710,784
5,267,261	5,544,196	5,267,262	5,568,483	5,337,338	5,659,569
5,600,754	5,414,796	5,657,420	5,416,797		

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

- A**
 - A2DP 104
 - About 131
 - ActiveSync 83, 84, 85
 - Airplane Mode 79, 98
 - Alarm Clock 46
 - Album
 - About 122
 - Closing Album 127
 - Playing Back Video 126
 - Viewing a Photo 124
 - Attachment
 - Downloading 169
- B**
 - Backlight
 - Adjusting Brightness 130
 - Setting Backlight Timeout 130
 - Basic Settings 130
 - Battery
 - Battery Saving Tips 20
 - Charging the Battery 19
 - Installing the Battery 3
 - Removing the Battery 18
 - Using Your Device's Battery and Charger 17
 - Bluetooth
 - About 102
 - Connecting a Bluetooth Hands-free or Stereo Headset 104
 - Modes 102
 - Partnerships (Pairing) 103
 - Sending and Receiving Information 106
 - Turning Bluetooth On and Making Your Device Visible 102
 - Turning Bluetooth On and Off 98
- C**
 - Calendar
 - Creating Appointments 89
 - Viewing Appointments 92
 - Call Barring (GSM) 197
 - Call Forwarding (CDMA) 146
 - Call Guard (CDMA) 150
 - Call Waiting
 - CDMA 145
 - GSM 199
 - Caller ID
 - CDMA 145
 - GSM 199
 - Camera
 - Auto Focus 113
 - Capture Modes 110
 - Onscreen Controls and Indicators 115
 - Zooming 112

Clear Storage 134
Comm Manager 97
Connecting to Data Services 156
Contacts 50, 87
Contacts Picture capture mode 111
Copying and Managing Files 129

D

Data Connection 27, 156, 158, 159
Data Roam Guard (CDMA) 151
Device Name 131
Direct Dial
 CDMA 73
 GSM 187
Downloading
 Downloading a Complete Email
 Message 168
 File Attachments 169

E

Email
 Internet Email 166
 Mail Tab (TouchFLO 3D) 51
 Outlook Email 165
 Replying To or Forwarding a Message
 169
 Sending 167
 Types of Email Accounts 165

F

Favorite Contacts 47
File Explorer 129

Full QWERTY 36

G

Global Mode 185
Global Smart Dialing
 CDMA 72
 GSM 186
GPS 177
GSM 185, 195

H

Hard Reset 133
Home Screen 24, 41
Home Tab (TouchFLO 3D) 44

I

Input Methods
 Full QWERTY 36
 Phone Keypad 38
Instant Messaging 164
International Calls
 CDMA 72
 GSM 186
Internet Email 166
Internet Tab (TouchFLO 3D) 56

L

Library
 Music Tab (TouchFLO 3D) 61

M

Mail Tab (TouchFLO 3D) 51
Making a Call
 International Call (CDMA) 72

International Call (GSM) 187
Phone Screen 70
Three-Way Call (CDMA) 147

Messaging

Email 165
Instant Messaging 164
Text Messaging 143

Microsoft Office Mobile 99
Missed Call Notification 76
MMS Video Capture Mode 111

N

Network Selection (GSM) 200
Notes 92

O

Office Mobile 99
Opera Mobile 159

P

Panorama Capture Mode 111
People Tab (TouchFLO 3D) 47
Phone 69
Phone Keypad 38
Photo Capture Mode 111
Photos and Videos Tab (TouchFLO 3D) 58
Picture Theme Capture Mode 111
Playing Music
 Music Tab (TouchFLO 3D) 59
Playlists
 Music Tab (TouchFLO 3D) 61

Plus (+) Code Dialing (GSM) 186

Q

Quick Menu 29

R

Recording
 Camera 110
Regional Settings 130
Replying
 Email 169
Resetting
 Clear Storage 134
 Hard Reset 132
 Soft Reset 132
Ring Tone 68, 131
Ring Type 131
Roaming 148

S

Screen 130
Screen Text Size 130
Selecting a Network (GSM) 200
Sending
 Email 167
 Text Message 144
Sending and Receiving Information
 Using Bluetooth 106
Settings Tab (TouchFLO 3D) 68
SIM Card 182
SIM Manager 192, 193, 194
SIM Phonebook 191

Sleep Mode 16
SMS 53, 143
Soft Reset 132
Sounds & Notifications 132
Speakerphone 76
Speed Dial 78
Sprint Instant Messaging 164
Sprint Music Store 174
Sprint TV 171
Sprint TV Tab (TouchFLO 3D) 64
Start Screen 25
Status Icons 26
Synchronizing
 ActiveSync 84
 Choosing What Information Is
 Synchronized 85
 Settings Tab (TouchFLO 3D) 68
 Windows Mobile Device Center 81
 Your Device With Your Computer 84

T

Tasks 94
Text Messages
 Creating a New Text Message 143
 Messages Tab (TouchFLO 3D) 53
 Sending 144
Text Size (Screen) 130
Three-Way Call (CDMA) 147
Touch Focus 113
TouchFLO 3D 40



Troubleshooting
 Sync Connection 85
Turning the Phone On and Off 98
Turning Your Device On and Off 16

U

USB to PC 85

V

Vibrate 27
Video Capture Mode 111
Voicemail 6, 137, 189, 200

W

Weather Tab (TouchFLO 3D) 65
Wi-Fi 98, 153
Windows Mobile Device Center 81
World Clock 45

Z

Zooming
 Camera 112
 Zoom Bar 12